

HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01



APPLICABILITY TABLE¹

PRODUCT
HE910
HE910-D
HE910-GA
HE910-EUR
HE910-EUD
HE910-EUG
HE910-NAR
HE910-NAD
HE910-NAG
UE910-EUR
UE910-EUD
UE910-NAR
UE910-NAD

SW Version

12.00.xx4

Note: the features described by the present document are provided by the products equipped with the software versions equal or greater than the version shown in the table.

¹ HE910 is the “type name” of the products marketed as HE910-G and HE910-DG



*SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE***Notice**

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A.



Contents

1. INTRODUCTION.....	14
1.1. SCOPE	14
1.2. AUDIENCE.....	14
1.3. CONTACT INFORMATION, SUPPORT.....	14
1.4. DOCUMENT ORGANIZATION	15
1.5. TEXT CONVENTIONS	15
1.6. RELATED DOCUMENTS	15
2. OVERVIEW.....	16
2.1. ABOUT THE DOCUMENT	16
3. AT COMMANDS.....	17
3.1. DEFINITIONS	17
3.2. AT COMMAND SYNTAX.....	18
3.2.1. String Type Parameters.....	19
3.2.2. Command Lines.....	19
3.2.2.1. ME Error Result Code - +CME ERROR: <err>	20
3.2.2.2. Message Service Failure Result Code - +CMS ERROR: <err>	23
3.2.3. Information Responses And Result Codes	24
3.2.4. Command Response Time-Out	25
3.2.5. Command Issuing Timing.....	25
3.3. STORAGE	25
3.3.1. Factory Profile And User Profiles.....	25
4. AT COMMANDS AVAILABILITY TABLE.....	29
5. AT COMMANDS REFERENCES.....	31
5.1. COMMAND LINE GENERAL FORMAT	31
5.1.1. Command Line Prefixes	31
5.1.1.1.1. Starting A Command Line - AT.....	31
5.1.1.1.2. Last Command Automatic Repetition - A/.....	31
5.1.1.1.3. Repeat Last Command - AT#/	31
5.1.2. General Configuration Commands	32
5.1.2.1.1. Select Interface Style - #SELINT.....	32
5.1.3. Hayes Compliant AT Commands.....	33
5.1.3.1. Generic Modem Control.....	33
5.1.3.1.1. Set To Factory-Defined Configuration - &F	33
5.1.3.1.2. Soft Reset - Z	33
5.1.3.1.3. Select Active Service Class - +FCLASS.....	34
5.1.3.1.4. Default Reset Basic Profile Designation - &Y	34
5.1.3.1.5. Default Reset Full Profile Designation - &P	34
5.1.3.1.6. Store Current Configuration - &W.....	35
5.1.3.1.7. Store Telephone Number - &Z.....	35
5.1.3.1.8. Display Stored Numbers - &N.....	35
5.1.3.1.9. Manufacturer Identification - +GMI	36
5.1.3.1.10. Model Identification - +GMM	36
5.1.3.1.11. Revision Identification - +GMR.....	36
5.1.3.1.12. Capabilities List - +GCAP	36
5.1.3.1.13. Serial Number - +GSN.....	36
5.1.3.1.14. Display Configuration And Profile - &V	37
5.1.3.1.15. Display Configuration And Profile - &V0	37
5.1.3.1.16. S Registers Display - &V1	37



80378ST10091A Rev. 5 – 2013-07-01

HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

5.1.4.2.6.	Cellular Result Codes - +CRC	63
5.1.4.2.7.	Voice Hung Up Control - +CVHU.....	64
5.1.4.2.8.	Select type of address - +CSTA	64
5.1.4.3.	Network Service Handling.....	65
5.1.4.3.1.	Subscriber Number - +CNUM	65
5.1.4.3.2.	Read Operator Names - +COPN	65
5.1.4.3.3.	Network Registration Report - +CREG	66
5.1.4.3.4.	Operator Selection - +COPS	67
5.1.4.3.5.	Select Wireless Network - +WS46.....	69
5.1.4.3.6.	Facility Lock/Unlock - +CLCK	69
5.1.4.3.7.	Change Facility Password - +CPWD	71
5.1.4.3.8.	Calling Line Identification Presentation - +CLIP.....	71
5.1.4.3.9.	Calling Line Identification Restriction - +CLIR	73
5.1.4.3.10.	Connected line identification presentation - +COLP.....	74
5.1.4.3.11.	Connected line identification restriction status - +COLR	75
5.1.4.3.12.	Call Forwarding Number And Conditions - +CCFC.....	76
5.1.4.3.13.	Call Waiting - +CCWA.....	77
5.1.4.3.14.	Call Holding Services - +CHLD	79
5.1.4.3.15.	Call deflection - +CTFR.....	80
5.1.4.3.16.	Unstructured Supplementary Service Data - +CUSD.....	80
5.1.4.3.17.	Advice Of Charge - +CAOC	81
5.1.4.3.18.	List Current Calls - +CLCC	82
5.1.4.3.19.	SS Notification - +CSSN	83
5.1.4.3.20.	Closed User Group - +CCUG	84
5.1.4.3.21.	Preferred Operator List - +CPOL.....	84
5.1.4.3.22.	Selection of preferred PLMN list - +CPLS	85
5.1.4.4.	Mobile Equipment Control	86
5.1.4.4.1.	Phone Activity Status - +CPAS	86
5.1.4.4.2.	Set Phone functionality - +CFUN	87
5.1.4.4.3.	Enter PIN - +CPIN	88
5.1.4.4.4.	Signal Quality - +CSQ	90
5.1.4.4.5.	Indicator Control - +CIND.....	91
5.1.4.4.6.	Mobile Equipment Event Reporting - +CMER.....	93
5.1.4.4.7.	Select Phonebook Memory Storage - +CPBS	94
5.1.4.4.8.	Read Phonebook Entries - +CPBR.....	95
5.1.4.4.9.	Find Phonebook Entries - +CPBF	97
5.1.4.4.10.	Write Phonebook Entry - +CPBW	99
5.1.4.4.11.	Clock Management - +CCLK	101
5.1.4.4.12.	Alarm Management - +CALA	102
5.1.4.4.13.	Delete Alarm - +CALD.....	104
5.1.4.4.14.	Postpone alarm - +CAPD.....	104
5.1.4.4.15.	Setting date format - +CSDF.....	104
5.1.4.4.16.	Setting time format - +CSTF.....	105
5.1.4.4.17.	Time Zone reporting - +CTZR.....	106
5.1.4.4.18.	Automatic Time Zone update - +CTZU	106
5.1.4.4.19.	Restricted SIM Access - +CRSM.....	107
5.1.4.4.20.	Generic SIM access - +CSIM.....	108
5.1.4.4.21.	Alert Sound Mode - +CALM.....	110
5.1.4.4.22.	Ringer Sound Level - +CRSL	110
5.1.4.4.23.	Loudspeaker Volume Level - +CLVL	111
5.1.4.4.24.	Microphone Mute Control - +CMUT.....	111
5.1.4.4.25.	Silence command - +CSIL	112
5.1.4.4.26.	Accumulated Call Meter - +CACM	112
5.1.4.4.27.	Accumulated Call Meter Maximum - +CAMM.....	113
5.1.4.4.28.	Price per Unit and Currency Table - +CPUC.....	113
5.1.4.4.29.	Call meter maximum event - +CCWE	114
5.1.4.4.30.	Set voice mail number - +CSVM.....	114
5.1.4.4.31.	Available AT Commands - +CLAC.....	115



5.1.4.5.	Mobile Equipment Errors	116
5.1.4.5.1.	Report Mobile Equipment Error - +CMEE	116
5.1.4.6.	Voice Control	117
5.1.4.6.1.	DTMF Tones Transmission - +VTS	117
5.1.4.6.2.	Tone Duration - +VTD	118
5.1.4.7.	Commands For GPRS	119
5.1.4.7.1.	GPRS Mobile Station Class - +CGCLASS	119
5.1.4.7.2.	GPRS Attach Or Detach - +CGATT	119
5.1.4.7.3.	GPRS Event Reporting - +CGEREP	120
5.1.4.7.4.	GPRS Network Registration Status - +CGREG	121
5.1.4.7.5.	Define PDP Context - +CGDCONT	122
5.1.4.7.6.	Quality Of Service Profile - +CGQMIN	124
5.1.4.7.7.	Quality Of Service Profile - +CGQREQ	125
5.1.4.7.8.	3G Quality Of Service Profile (Requested) - +CGEQREQ	127
5.1.4.7.9.	3G Quality Of Service Profile (Minimum Acceptable) - +CGEQMIN	130
5.1.4.7.10.	PDP Context activate or deactivate - +CGACT	133
5.1.4.7.11.	3G Quality Of Service Profile (Negotiated) - +CGEQNEG	134
5.1.4.7.12.	PDP Context - +CGACT	135
5.1.4.7.13.	Show PDP Address - +CGPADDR	136
5.1.4.7.14.	Modify PDP context - +CGCMOD	137
5.1.4.7.15.	Commands for Battery Charger	138
5.1.4.7.15.1.	Battery Charge - +CBC	138
5.1.5.	3GPP TS 27.005 AT Commands for SMS and CBS	139
5.1.5.1.	General Configuration	139
5.1.5.1.1.	Select Message Service - +CSMS	139
5.1.5.1.2.	Preferred Message Storage - +CPMS	140
5.1.5.1.3.	Message Format - +CMGF	141
5.1.5.1.4.	Battery and charger status - #CBC	141
5.1.5.2.	Message Configuration	142
5.1.5.2.1.	Service Center Address - +CSCA	142
5.1.5.2.2.	Set Text Mode Parameters - +CSMP	143
5.1.5.2.3.	Show Text Mode Parameters - +CSDH	145
5.1.5.2.4.	Select Cell Broadcast - +CSCB	146
5.1.5.2.5.	Save Settings - +CSAS	147
5.1.5.2.6.	Restore Settings - +CRES	147
5.1.5.2.7.	More message to send - +CMMS	148
5.1.5.3.	Message Receiving And Reading	149
5.1.5.3.1.	New Message Indications - +CNMI	149
5.1.5.3.2.	New message acknowledgement - +CNMA	154
5.1.5.3.3.	List Messages - +CMGL	156
5.1.5.3.4.	Read Message - +CMGR	158
5.1.5.4.	Message Sending And Writing	161
5.1.5.4.1.	Send Message - +CMGS	161
5.1.5.4.2.	Send Message From Storage - +CMSS	163
5.1.5.4.3.	Write Message To Memory - +CMGW	164
5.1.5.4.4.	Delete Message - +CMGD	166
5.1.5.4.5.	Select service for MO SMS messages - +CGSMS	167
5.1.6.	Custom AT Commands	168
5.1.6.1.	General Configuration AT Commands	168
5.1.6.1.1.	Set AT Interface and trace interface - #PORTCFG	168
5.1.6.1.2.	Network Selection Menu Availability - +PACSP	169
5.1.6.1.3.	Manufacturer Identification - #CGMI	169
5.1.6.1.4.	Model Identification - #CGMM	169
5.1.6.1.5.	Revision Identification - #CGMR	169
5.1.6.1.6.	Product Serial Number Identification - #CGSN	169
5.1.6.1.7.	International Mobile Subscriber Identity (IMSI) - #CIMI	170
5.1.6.1.8.	Read ICCID (Integrated Circuit Card Identification) - #CCID	170
5.1.6.1.9.	Service Provider Name - #SPN	170



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

5.1.6.1.10.	Extended Numeric Error report - #CEER.....	170
5.1.6.1.11.	Extended error report for Network Reject cause - #CEERNET	173
5.1.6.1.12.	Display PIN Counter - #PCT	174
5.1.6.1.13.	Software Shut Down - #SHDN	175
5.1.6.1.14.	Extended Reset - #Z	175
5.1.6.1.15.	Periodic Reset - #ENHRST	175
5.1.6.1.16.	Wake From Alarm Mode - #WAKE	176
5.1.6.1.17.	Temperature Monitor - #TEMPMON	177
5.1.6.1.18.	General Purpose Input/Output Pin Control - #GPIO	179
5.1.6.1.19.	Alarm Pin - #ALARMPIN	181
5.1.6.1.20.	STAT_LED GPIO Setting - #SLED	182
5.1.6.1.21.	Save STAT_LED GPIO Setting - #SLEDSAV	183
5.1.6.1.22.	SMS Ring Indicator - #E2SMSRI	183
5.1.6.1.23.	Read Analog/Digital Converter input - #ADC	184
5.1.6.1.24.	V24 Output Pins Configuration - #V24CFG	184
5.1.6.1.25.	V24 Output Pins Control - #V24	185
5.1.6.1.26.	GPRS Auto-Attach Property - #AUTOATT	186
5.1.6.1.27.	Multislot Class Control - #MSCLASS	186
5.1.6.1.28.	Cell Monitor - #MONI	187
5.1.6.1.29.	Serving Cell Information - #SERVINFORM	191
5.1.6.1.30.	Read current network status - #RFSTS	193
5.1.6.1.31.	Query SIM Status - #QSS	197
5.1.6.1.32.	Delete all phonebook entries - #CPBD	198
5.1.6.1.33.	ATD Dialing Mode - #DIALMODE	198
5.1.6.1.34.	Automatic call - #ACAL	199
5.1.6.1.35.	Extended automatic call - #ACALEXT	200
5.1.6.1.36.	Extended Call Monitoring - #ECAM	201
5.1.6.1.37.	SMS Overflow - #SMOV	202
5.1.6.1.38.	Mailbox Numbers - #MBN	202
5.1.6.1.39.	Message Waiting Indication - #MWI	203
5.1.6.1.40.	Network Emergency Number Update	204
5.1.6.1.41.	Packet Service Network Type - #PSNT	205
5.1.6.1.42.	SIM Presence status - #SIMPR	206
5.1.6.1.43.	Call Forwarding Flags - #CFF	207
5.1.6.1.44.	GSM and UMTS Audio Codec - #CODEC	208
5.1.6.1.45.	Network Timezone - #NITZ	209
5.1.6.1.46.	Clock management - #CCLK	210
5.1.6.1.47.	Clock Mode - #CCLKMODE	211
5.1.6.1.48.	Enhanced Network Selection - #ENS	212
5.1.6.1.49.	Select Band - #BND	213
5.1.6.1.50.	Automatic Band Selection - #AUTOBND	214
5.1.6.1.51.	PPP-GPRS Connection Authentication Type - #GAUTH	215
5.1.6.1.52.	Skip Escape Sequence - #SKIPESC	215
5.1.6.1.53.	Subscriber number - #SNUM	216
5.1.6.1.54.	SIM detection mode - #SIMDET	216
5.1.6.1.55.	GSM Context Definition - #GSMCONT	217
5.1.6.1.56.	Show Address - #CGPADDR	218
5.1.6.1.57.	Call Establishment Lock - #CESTHLCK	219
5.1.6.1.58.	Write to I2C - #I2CWR	219
5.1.6.1.59.	Read to I2C - #I2CRD	220
5.1.6.1.60.	Power Saving Mode Ring - #PSMRI	222
5.1.6.1.61.	Control Command Flow - #CFLO	223
5.1.6.1.62.	Report concatenated SMS indexes - #CMGLCONCINDEX	223
5.1.6.1.63.	Codec Information - #CODECINFO	224
5.1.6.1.64.	Select language - #LANG	226
5.1.6.1.65.	Enable RX Diversity and set DARP - #RXDIV	227
5.1.6.1.66.	Set Encryption algorithm - #ENCALG	228
5.1.6.1.67.	Escape Sequence Guard Time - #E2ESC	230



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

5.1.6.1.68.	No Carrier Indication Handling - #NCIH.....	231
5.1.6.1.69.	Digital/Analog Converter Control - #DAC	231
5.1.6.1.70.	GSM Antenna Detection - #GSMAD.....	232
5.1.6.2.	AT Run Commands	234
5.1.6.2.1.	Enable SMS Run AT Service - #SMSATRUNC.....	234
5.1.6.2.2.	Set SMS Run AT Service parameters - #SMSATRUNCFG	235
5.1.6.2.3.	SMS AT Run White List - #SMSATWL	236
5.1.6.2.4.	Set TCP Run AT Service parameter - #TCPATRUNCFG.....	237
5.1.6.2.5.	TCP Run AT Service in listen (server) mode - #TCPATRUNL	239
5.1.6.2.6.	TCP AT Run Firewall List - #TCPATRUNFRWL.....	240
5.1.6.2.7.	TCP AT Run Authentication Parameters List - #TCPATRUNAUTH	241
5.1.6.2.8.	TCP AT Run in dial (client) mode - #TCPATRUND	242
5.1.6.2.9.	Closing TCP Run AT Socket - #TCPATRUNCLOSE.....	243
5.1.6.2.10.	TCP AT Run Command Sequence - #TCPATCMDSEQ	243
5.1.6.2.11.	TCP Run AT service to a serial port - #TCPATCONSER.....	243
5.1.6.2.12.	Run AT command execution - #ATRUNDELAY	245
5.1.6.3.	Event Monitor Commands.....	246
5.1.6.3.1.	Enable EvMoni Service - #ENAEVMONI	246
5.1.6.3.2.	EvMoni Service parameter - #ENAEVMONICFG	247
5.1.6.3.3.	Event Monitoring - #EVMONI.....	248
5.1.6.3.4.	Send Message - #CMGS	251
5.1.6.3.5.	Write Message To Memory - #CMGW.....	253
5.1.6.3.6.	AT Command Delay - #ATDELAY	254
5.1.6.4.	Multisocket AT Commands.....	255
5.1.6.4.1.	Socket Status - #SS	255
5.1.6.4.2.	Socket Info - #SI	257
5.1.6.4.3.	Socket Type - #ST.....	258
5.1.6.4.4.	Context Activation - #SGACT	259
5.1.6.4.5.	Socket Shutdown - #SH	260
5.1.6.4.6.	Socket Configuration - #SCFG	260
5.1.6.4.7.	Socket Configuration Extended - #SCFGEXT.....	262
5.1.6.4.8.	Socket configuration Extended 2 - #SCFGEXT2.....	264
5.1.6.4.9.	Socket configuration Extended 3 - #SCFGEXT3.....	267
5.1.6.4.10.	Socket Dial - #SD	268
5.1.6.4.11.	Socket Restore - #SO	269
5.1.6.4.12.	Socket Listen - #SL.....	270
5.1.6.4.13.	Socket Listen UDP - #SLUDP	271
5.1.6.4.14.	Socket Accept - #SA	272
5.1.6.4.15.	Detect the cause of a Socket disconnection - #SLASTCLOSURE	272
5.1.6.4.16.	Receive Data In Command Mode - #SRECV	274
5.1.6.4.17.	Send Data In Command Mode - #SEND	275
5.1.6.4.18.	Send UDP data to a specific remote host - #SENDUDP.....	276
5.1.6.4.19.	Send UDP data to a specific remote host extended	278
5.1.6.4.20.	Send data in Command Mode extended - #SENDEXT	279
5.1.6.4.21.	IP Easy Authentication Type - #SGACTAUTH	280
5.1.6.4.22.	Context activation and configuration - #SGACTCFG	280
5.1.6.4.23.	Context activation and configuration extended - #SGACTCFGEXT.....	282
5.1.6.4.24.	PAD command features - #PADCMD	283
5.1.6.4.25.	PAD forward character - #PADFWD.....	283
5.1.6.4.26.	Base64 encoding/decoding of socket sent/received data - #BASE64.....	284
5.1.6.4.27.	SSL Commands.....	287
5.1.6.4.27.1.	Open a socket SSL to a remote server - #SSLD	287
5.1.6.4.27.2.	Enable a SSL socket - #SSLEN.....	288
5.1.6.4.27.3.	Close a SSL socket - #SSLH	290
5.1.6.4.27.4.	Restore a SSL socket after a +++ - #SSLO	290
5.1.6.4.27.5.	Read Data from a SSL socket - #SSLRECV	291
5.1.6.4.27.6.	Report the status of a SSL socket - #SSLS	292
5.1.6.4.27.7.	Manage the security data - #SSLSECDATA.....	293



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

5.1.6.4.27.8.	Send data through a SSL socket - #SSSEND	295
5.1.6.4.27.9.	Configure security parameters of a SSL socket - #SSLSECCFG	296
5.1.6.4.27.10.	Configure general parameters of a SSL socket - #SSLCFG	297
5.1.6.5.	FTP AT Commands	298
5.1.6.5.1.	FTP Time-Out - #FTPTO	298
5.1.6.5.2.	FTP Open - #FTPOPEN	298
5.1.6.5.3.	FTP Close - #FTPCLOSE	298
5.1.6.5.4.	FTP Config - #FTPCFG	298
5.1.6.5.5.	FTP Put - #FTPPUT	299
5.1.6.5.6.	FTP Get - #FTPGET	301
5.1.6.5.7.	FTP GET in command mode - #FTPGETPKT	301
5.1.6.5.8.	FTP Type - #FTPTYPE	302
5.1.6.5.9.	FTP Read Message - #FTPMSG	302
5.1.6.5.10.	FTP Delete - #FTPDELE	303
5.1.6.5.11.	FTP Print Working Directory - #FTPPWD	303
5.1.6.5.12.	FTP Change Working Directory - #FTPCWD	303
5.1.6.5.13.	FTP List - #FTPLIST	304
5.1.6.5.14.	Get file size - #FTPFSIZE	304
5.1.6.5.15.	FTP Append - #FTPAPP	304
5.1.6.5.16.	Set restart position - #FTPREST	305
5.1.6.5.17.	Receive Data In Command Mode - #FTPrecv	306
5.1.6.5.17.1.	FTP Append	308
5.1.6.5.17.2.	FTPAPPEXT - #FTPAPPEXT	309
5.1.6.6.	Enhanced IP Easy Extension AT Commands	311
5.1.6.6.1.	Authentication User ID - #USERID	311
5.1.6.6.2.	Authentication Password - #PASSW	311
5.1.6.6.3.	Packet Size - #PKTSZ	312
5.1.6.6.4.	Data Sending Time-Out - #DSTO	312
5.1.6.6.5.	Socket Inactivity Time-Out - #SKTTO	313
5.1.6.6.6.	Socket Definition - #SKTSET	313
5.1.6.6.7.	Query DNS - #QDNS	315
5.1.6.6.8.	DNS Response Caching - #CACHEDNS	316
5.1.6.6.9.	Manual DNS Selection - #DNS	317
5.1.6.6.10.	Socket TCP Connection Time-Out - #SKTCT	318
5.1.6.6.11.	Socket Parameters Save - #SKTSAV	318
5.1.6.6.12.	Socket Parameters Reset - #SKTRST	319
5.1.6.6.13.	GPRS Context Activation - #GPRS	319
5.1.6.6.14.	Socket Dial - #SKTD	321
5.1.6.6.15.	Socket Listen - #SKTL	322
5.1.6.6.16.	Socket Listen Ring Indicator - #E2SLRI	324
5.1.6.6.17.	Firewall Setup - #FRWL	324
5.1.6.6.18.	GPRS Data Volume - #GDATAVOL	326
5.1.6.6.19.	ICMP Ping Support - #ICMP	327
5.1.6.6.20.	PING request - #PING	328
5.1.6.6.21.	DNS from Network - #NWDNS	329
5.1.6.7.	SMS AT Commands	330
5.1.6.7.1.	Move Short Message to other memory - #SMSMOVE	330
5.1.6.7.2.	SMS Commnads Operation Mode - #SMSMODE	331
5.1.6.8.	E-mail Management AT Commands	332
5.1.6.8.1.	E-mail SMTP Server - #ESMTP	332
5.1.6.8.2.	E-mail Sender Address - #EADDR	332
5.1.6.8.3.	E-mail Authentication User Name - #EUSER	333
5.1.6.8.4.	E-mail Authentication Password - #EPASSW	333
5.1.6.8.5.	E-mail Sending - #EMAILD	334
5.1.6.8.6.	E-mail Parameters Save - #ESAV	335
5.1.6.8.7.	E-mail Parameters Reset - #ERST	335
5.1.6.8.8.	SMTP Read Message - #EMAILMSG	335
5.1.6.8.9.	Send mail with attachment - #SMTPCL	335



5.1.6.9.	HTTP Client AT Commands	338
5.1.6.9.1.	Configure HTTP Parameters - #HTTPCFG	338
5.1.6.9.2.	Send HTTP GET, HEAD or DELETE request - #HTTPQRY	340
5.1.6.9.3.	Send HTTP POST or PUT request - #HTTPSND	341
5.1.6.9.4.	receive HTTP server data - #HTTPCRV	343
5.1.6.10.	Easy Script® Extension - Python Interpreter, AT Commands	344
5.1.6.10.1.	Write Script - #WSCRIPT	344
5.1.6.10.2.	Select Active Script - #ESCRIP	345
5.1.6.10.3.	Script Execution Start Mode - #STARTMODESCR	346
5.1.6.10.4.	Execute Active Script - #EXECSCR	347
5.1.6.10.5.	Read Script - #RSCRIPT	347
5.1.6.10.6.	List Script Names - #LSCRIPT	348
5.1.6.10.7.	Delete Script - #DSCRIPT	350
5.1.6.10.8.	Reboot - #REBOOT	350
5.1.6.11.	SIM Toolkit Commands	351
5.1.6.11.1.	SIM Toolkit Interface Activation - #STIA	351
5.1.6.11.2.	SIM Toolkit Get Information - #STGI	357
5.1.6.11.3.	SIM Toolkit Send Response - #STSR	363
5.1.6.11.4.	SIM Toolkit terminal Attach - #STTA	364
5.1.6.12.	Phonebook AT Commands Set	365
5.1.6.12.1.	Read Group Entries - #CPBGR	365
5.1.6.12.2.	Write Group Entries - #CPBGW	366
5.1.6.13.	GPS AT Commands Set	367
5.1.6.13.1.	GPS Controller Power Management - \$GPSP	367
5.1.6.13.2.	GPS Reset - \$GPSR	367
5.1.6.13.3.	Unsolicited NMEA Data Configuration - \$GPSNMUN	368
5.1.6.13.4.	Get Acquired Position - \$GPSACP	370
5.1.6.13.5.	Save GPS Parameters Configuration - \$GPSSAV	371
5.1.6.13.6.	Restore To Default GPS Parameters - \$GPSRST	371
5.1.6.13.7.	GPS NVRAM Parameters Delete - \$GPSNVRAM	372
5.1.6.13.8.	GPS Quality of Service - \$GPSQOS	372
5.1.6.13.9.	GPS Start Location Service Request - \$GPSSLR	374
5.1.6.13.10.	GPS Stop Location Service Request - \$GPSSTOP	380
5.1.6.13.11.	Update SLP address - \$LCSSLP	380
5.1.6.13.12.	Update location information - \$LCSLUI	381
5.1.6.13.13.	Update terminal information - \$LCSTER	381
5.1.6.13.14.	Enable/Disable unsolicited response - \$LCLCS	382
5.1.6.13.15.	MT Location Request Mode - \$LCSLRMT	383
5.1.6.13.16.	Location request verification - \$LCSLRV	384
5.1.6.13.17.	LCS certificate - \$LTC	385
5.1.6.13.18.	Lock context for LCS use - \$LCSLK	386
5.1.6.14.	Audio Commands	387
5.1.6.14.1.	Audio Basic configuration	387
5.1.6.14.1.1.	Change Audio Path - #CAP	387
5.1.6.14.1.2.	Select Ringer Sound - #SRS	387
5.1.6.14.1.3.	Select Ringer Path - #SRP	388
5.1.6.14.1.4.	Handsfree Microphone Gain - #HFMICG	388
5.1.6.14.1.5.	Handset Microphone Gain - #HSMICG	389
5.1.6.14.1.6.	Handsfree Receiver Gain - #HFRECG	389
5.1.6.14.1.7.	Handset Receiver Gain - #HSRECG	389
5.1.6.14.1.8.	Set Handsfree Sidetone - #SHFSD	390
5.1.6.14.1.9.	Set Handset Sidetone - #SHSSD	390
5.1.6.14.1.10.	Speaker Mute Control - #SPKMUT	390
5.1.6.14.1.11.	Analog Microphone Gain - #ANAMICG	391
5.1.6.14.1.12.	Digital Microphone Gain - #DIGMICG	391
5.1.6.14.1.13.	Echo Reducer Configuration - #ECHOFCG	392
5.1.6.14.2.	Tones configuration	394
5.1.6.14.2.1.	Signaling Tones Mode - #STM	394



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

5.1.6.14.2.2.	Tone Playback - #TONE	394
5.1.6.14.2.3.	Extended tone generation - #TONEEXT	395
5.1.6.14.2.4.	Tone Classes Volume - #TSVOL	395
5.1.6.14.2.5.	User Defined Tone SET - #UDTSET command	397
5.1.6.14.2.6.	User Defined Tone SAVE - #UDTSAV command	398
5.1.6.14.2.7.	User Defined Tone Reset - #UDTRST command	398
5.1.6.14.3.	Audio profiles	399
5.1.6.14.3.1.	Audio Profile Factory Configuration - #PRST	399
5.1.6.14.3.2.	Audio Profile Configuration Save - #PSAV	399
5.1.6.14.3.3.	Audio Profile Selection - #PSEL	400
5.1.6.14.4.	Audio Filters	401
5.1.6.14.4.1.	Uplink Path Biquad Filters - #BIQUADIN	401
5.1.6.14.4.2.	Extended Uplink Biquad Filters - #BIQUADINEX	402
5.1.6.14.4.3.	Cascaded filters - #BIQUADOUT	403
5.1.6.14.4.4.	Extended Downlink Biquad Filters - #BIQUADOUTEX	404
5.1.6.14.5.	Echo canceller configuration	405
5.1.6.14.5.1.	Handsfree Echo Canceller - #SHFEC	405
5.1.6.14.5.2.	Handset Echo Canceller - #SHSEC	405
5.1.6.14.5.3.	Handsfree Automatic Gain Control - #SHFAGC	406
5.1.6.14.5.4.	Handset Automatic Gain Control - #SHSAGC	406
5.1.6.14.5.5.	Handsfree Noise Reduction - #SHFNR	407
5.1.6.14.5.6.	Handset Noise Reduction - #SHSNR	407
5.1.6.14.6.	Embedded DTMF decoder	408
5.1.6.14.6.1.	Embedded DTMF decoder enabling - #DTMF	408
5.1.6.14.7.	Digital Voice Interface	409
5.1.6.14.7.1.	Digital Voiceband Interface - #DVI	409
5.1.6.14.7.2.	Extended Digital Voiceband Interface - #DVIEXT	410
5.1.6.14.8.	Extended Digital Voiceband Interface - #DVICLK	411
5.1.6.14.9.	Miscellaneous audio commands	412
5.1.6.14.9.1.	PCM Play and Receive - #SPCM	412
5.1.6.14.9.2.	TeleType Writer - #TTY	413
5.1.6.15.	Jammed Detect & Report AT Commands	414
5.1.6.15.1.	Jammed Detect & Report - #JDR	414
5.1.6.15.2.	Open Audio Loop - #OAP	416
5.1.6.16.	OTA Commands	417
5.1.6.16.1.	OTA Set Network Access Point - #OTASNAP	417
5.1.6.16.2.	OTA Set User Answer - #OTASUAN	418
5.1.6.16.3.	OTA Set Ring Indicator - #OTASETRI	420
5.1.6.16.4.	Save IP Port and IP Address for OTA over IP - #OTAIPCFG	421
5.1.6.16.5.	Start an OTA Update over IP - #OTAIPUPD	422
5.1.6.16.6.	Set IP Port and Address for OTA over IP - #OTASNAPIP	423
5.1.6.16.7.	Set Access Point Name for OTA over IP - #OTASNAPIPCFG	424
5.1.6.17.	eCall AT Commands	425
5.1.6.17.1.	Initiate eCall - #CECALL	425
5.1.6.17.2.	Embedded IVS inband modem enabling - #ECALL	426
5.1.6.17.3.	Dial an Emergency Call - #EMRGD	426
5.1.6.17.4.	IVS push mode activation - #MSDPUSH	429
5.1.6.17.5.	Sending MSD data to IVS - AT#MSDSEND	429

6. LIST OF ACRONYMS430

6.1. DOCUMENT HISTORY432



1. Introduction

1.1. Scope

This document is aimed in providing an detailed specification and a comprehensive listing as a reference for the whole set of AT command.

1.2. Audience

Readers of this document should be familiar with Telit modules and their ease of controlling by means of AT Commands.

1.3. Contact Information, Support

For general contact, technical support, to report documentation errors and to order manuals, contact Telit Technical Support Center (TTSC) at:

TS-EMEA@telit.com

TS-NORTHAMERICA@telit.com

TS-LATINAMERICA@telit.com

TS-APAC@telit.com

Alternatively, use:

<http://www.telit.com/en/products/technical-support-center/contact.php>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.



1.4. Document Organization

This document contains the following chapters:

Chapter 1: “Introduction” provides a scope for this document, target audience, contact and support information, and text conventions.

Chapter 2: “Overview” about the aim of this document and implementation suggestions.

Chapter 3: “AT Commands” AT Commands Basic Definitions

Chapter 4: “AT Commands Availability Table” Differences between the products variants

Chapter 5: “AT Commands References” The core of this specification

1.5. Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.6. Related Documents

- 3GPP TS 27.007 specification and rules
http://www.3gpp.org/ftp/Specs/archive/27_series/27.007/
- 3GPP TS 27.005 specification and rules
http://www.3gpp.org/ftp/Specs/archive/27_series/27.005/
- Hayes standard AT command set



2. Overview

2.1. About the document

This document is to describe all AT commands implemented on the Telit wireless modules listed on the Applicability Table.



3. AT COMMANDS

The Telit wireless module family can be controlled via the serial interface using the standard AT commands². The Telit wireless module family is compliant with:

1. Hayes standard AT command set, in order to maintain the compatibility with existing SW programs.
2. 3GPP TS 27.007 specific AT command and GPRS specific commands.
3. 3GPP TS 27.005 specific AT commands for SMS (Short Message Service) and CBS (Cell Broadcast Service)

Moreover Telit wireless module family supports also Telit proprietary AT commands for special purposes.

The following is a description of how to use the AT commands with the Telit wireless module family.

3.1. Definitions

The following syntactical definitions apply:

- <CR>** **Carriage return character**, is the command line and result code terminator character, which value, in decimal ASCII between 0 and 255, is specified within parameter **S3**. The default value is 13.
- <LF>** **Linefeed character**, is the character recognised as line feed character. Its value, in decimal ASCII between 0 and 255, is specified within parameter **S4**. The default value is 10. The line feed character is output after carriage return character if verbose result codes are used (**V1** option used) otherwise, if numeric format result codes are used (**V0** option used) it will not appear in the result codes.
- <...>** Name enclosed in angle brackets is a syntactical element. They do not appear in the command line.
- [...]** Optional subparameter of a command or an optional part of TA information response is enclosed in square brackets. Brackets themselves do not appear in the command line. When subparameter is not given in AT commands which have a Read command, new value equals to its previous value. In AT commands which do not store the values of any of their subparameters, and so have not a Read command, which are called *action type* commands, action should be done on the basis of the recommended default setting of the subparameter.

² The AT is an ATTENTION command and is used as a prefix to other parameters in a string. The AT command combined with other parameters can be set up in the communications package or typed in manually as a command line instruction. combined with other parameters can be set up in the communications package or typed in manually as a command line instruction.



3.2. AT Command Syntax

The syntax rules followed by Telit implementation of either Hayes AT commands, GSM commands are very similar to those of standard basic and extended AT commands. There are two types of extended command:

- **Parameter type commands.** This type of commands may be “set” (to store a value or values for later use), “read” (to determine the current value or values stored), or “tested” (to determine ranges of values supported). Each of them has a test command (trailing =?) to give information about the type of its subparameters; they also have a Read command (trailing ?) to check the current values of subparameters.
- **Action type commands.** This type of command may be “executed” or “tested”.
 - “executed” to invoke a particular function of the equipment, which generally involves more than the simple storage of a value for later use
 - “tested” to determine:
 - if subparameters are associated with the action, the ranges of subparameters values that are supported; if the command has no subparameters, issuing the correspondent Test command (trailing =?) raises the result code “**ERROR**”.

Note: issuing the Read command (trailing ?) causes the command to be executed.

whether or not the equipment implements the Action Command (in this case issuing the correspondent Test command - trailing =? - returns the **OK** result code), and, if subparameters are associated with the action, the ranges of subparameters values that are supported.

Action commands don’t store the values of any of their possible subparameters.

Moreover:

The response to the Test Command (trailing =?) may be changed in the future by Telit to allow the description of new values/functionalities.

If all the subparameters of a parameter type command +**CMD** are optional, issuing **AT+CMD=<CR>** causes the **OK** result code to be returned and the previous values of the omitted subparameters to be retained.



3.2.1. String Type Parameters

A string, either enclosed between quotes or not, is considered to be a valid string type parameter input. According to V25.ter space characters are ignored on the command line and may be used freely for formatting purposes, unless they are embedded in numeric or quoted string constants; therefore a string containing a space character has to be enclosed between quotes to be considered a valid string type parameter (e.g. typing **AT+COPS=1,0,"A1"** is the same as typing **AT+COPS=1,0,A1**; typing **AT+COPS=1,0,"A BB"** is different from typing **AT+COPS=1,0,A BB**).

A string is always case sensitive.

A small set of commands requires always to write the input string parameters within quotes: this is explicitly reported in the specific descriptions.

3.2.2. Command Lines

A command line is made up of three elements: the **prefix**, the **body** and the **termination character**.

The **command line prefix** consists of the characters "**AT**" or "**at**", or, to repeat the execution of the previous command line, the characters "**A/**" or "**a/**" or **AT#**/ or **at#**/.

The **termination character** may be selected by a user option (parameter S3), the default being **<CR>**.

The basic structures of the command line are:

- **ATCMD1<CR>** where **AT** is the command line prefix, **CMD1** is the body of a **basic command** (nb: the name of the command never begins with the character "+") and **<CR>** is the command line terminator character
- **ATCMD2=10<CR>** where 10 is a subparameter
- **AT+CMD1;+CMD2=,10<CR>** These are two examples of **extended commands** (nb: the name of the command always begins with the character "+")³. They are delimited with semicolon. In the second command the subparameter is omitted.
- **+CMD1?<CR>** This is a Read command for checking current subparameter values
- **+CMD1=?<CR>** This is a test command for checking possible subparameter values

These commands might be performed in a single command line as shown below:

ATCMD1 CMD2=10+CMD1;+CMD2=,10;+CMD1?;+CMD1=?<CR>

³ The set of **proprietary AT commands** differentiates from the standard one because the name of each of them begins with either "@", "#", "\$" or "*". **Proprietary AT commands** follow the same syntax rules as **extended commands**



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

anyway it is always preferable to separate into different command lines the basic commands and the extended commands; furthermore it is suggested to avoid placing several action commands in the same command line, because if one of them fails, then an error message is received but it is not possible to argue which one of them has failed the execution.

If command **V1** is enabled (verbose responses codes) and all commands in a command line has been performed successfully, result code **<CR><LF>OK<CR><LF>** is sent from the TA to the TE, if subparameter values of a command are not accepted by the TA or command itself is invalid, or command cannot be performed for some reason, result code **<CR><LF>ERROR<CR><LF>** is sent and no subsequent commands in the command line are processed.

If command **V0** is enabled (numeric responses codes), and all commands in a command line has been performed successfully, result code **0<CR>** is sent from the TA to the TE, if sub-parameter values of a command are not accepted by the TA or command itself is invalid, or command cannot be performed for some reason, result code **4<CR>** and no subsequent commands in the command line are processed.

In case of errors depending on ME operation, **ERROR** (or **4**) response may be replaced by **+CME ERROR: <err>** or **+CMS ERROR: <err>**.



NOTE:

The command line buffer accepts a maximum of 80 characters. If this number is exceeded none of the commands will be executed and TA returns **ERROR**.

3.2.2.1. ME Error Result Code - +CME ERROR: <err>

This is NOT a command, it is the error response to +Cxxx 3GPP TS 27.007 commands.

Syntax: **+CME ERROR: <err>**

Parameter: **<err>** - error code can be either numeric or verbose (see +**CMEE**). The possible values of **<err>** are reported in the table:

Numeric Format	Verbose Format
	General Errors
0	phone failure
1	No connection to phone
2	phone-adaptor link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy



Numeric Format	Verbose Format
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	network time-out
32	network not allowed - emergency calls only
40	network personalization PIN required
41	network personalization PUK required
42	network subset personalization PIN required
43	network subset personalization PUK required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	corporate personalization PIN required
47	corporate personalization PUK required
General purpose error	
100	unknown
GPRS related errors to a failure to perform an Attach	
103	Illegal MS (#3)*
106	Illegal ME (#6)*
107	GPRS service not allowed (#7)*
111	PLMN not allowed (#11)*
112	Location area not allowed (#12)*
113	Roaming not allowed in this location area (#13)*
GPRS related errors to a failure to Activate a Context and others	
132	service option not supported (#32)*
133	requested service option not subscribed (#33)*
134	service option temporarily out of order (#34)*
148	unspecified GPRS error
149	PDP authentication failure
150	invalid mobile class
IP Easy related errors	
550	generic undocumented error
551	wrong state
552	wrong mode
553	context already activated
554	stack already active
555	activation failed
556	context not opened
557	cannot setup socket
558	cannot resolve DN
559	timeout in opening socket
560	cannot open socket
561	remote disconnected or time-out
562	connection failed



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

Numeric Format	Verbose Format
563	tx error
564	already listening
566	can not resume socket
567	wrong APN
568	wrong PDP
569	service not supported
570	QOS not accepted
571	NSAPI already used
572	LLC or SMDCP failure
573	network reject
Custom SIM Lock related errors	
586	MCL personalisation PIN required
FTP related errors	
600	generic undocumented error
601	wrong state
602	Can not activate
603	Can not resolve name
604	Can not allocate control socket
605	Can not connect control socket
606	Bad or no response from server
607	Not connected
608	Already connected
609	Context down
610	No photo available
611	Can not send photo
612	Resource used by other instance

*(values in parentheses are GSM 04.08 cause codes)



3.2.2.2. Message Service Failure Result Code - +CMS ERROR: <err>

This is NOT a command, it is the error response to +Cxxx 3GPP TS 27.005 commands.

Syntax: +CMS ERROR: <err>

Parameter: <err> - numeric error code.

The <err> values are reported in the table:

Numeric Format	Meaning
0...127	GSM 04.11 Annex E-2 values
128...255	3GPP TS 23.040 sub clause 9.2.3.22 values
300	ME failure
301	SMS service of ME reserved
302	operation not allowed
303	operation not supported
304	invalid PDU mode parameter
305	invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
330	SMSC address unknown
331	no network service
332	network time-out
340	no +CNMA acknowledgement expected
500	unknown error
512	FDN not allowed number



3.2.3. Information Responses And Result Codes

The TA response, in case of verbose response format enabled, for the previous examples command line could be as shown below:

- information response to +**CMD1**?
<CR><LF>+CMD1:2,1,10<CR><LF>
- information response to +**CMD1=?**
<CR><LF>+CMD1(0-2),(0,1),(0-15)<CR><LF>
- final result code **<CR><LF>OK<CR><LF>**

Moreover there are other two types of result codes:

- *result codes* that inform about progress of TA operation (e.g. connection establishment **CONNECT**)
- *result codes* that indicate occurrence of an event not directly associated with issuance of a command from TE (e.g. ring indication **RING**).

Here the basic result codes according to ITU-T V25Ter recommendation

<i>Result Codes</i>	
Numeric form	Verbose form
0	OK
1	CONNECT or CONNECT <text> ⁴
2	RING
3	NO CARRIER
4	ERROR
6	NO DIALTONE
7	BUSY
8	NO ANSWER
10	CONNECT 2400 ⁴
11	CONNECT 4800 ⁴
12	CONNECT 9600 ⁴
15	CONNECT 14400 ⁴
23	CONNECT 1200/75 ⁴

⁴ <text> can be "300", "1200", "2400", "4800", "9600", "14400" or "1200/75"



3.2.4. Command Response Time-Out

Every command issued to the Telit modules returns a result response, if response codes are enabled (default). The time needed to process the given command and return the response varies, depending on the command type. Commands that do not interact with the SIM or the network, and only involve internal setups or readings, have an immediate response. Commands that interact with the SIM or the network could take many seconds to send a response, depending on SIM configuration (e.g., number of contacts stored in the phonebook, number of stored SMS), or on the network the command may interact with.

3.2.5. Command Issuing Timing

The chain Command -> Response shall always be respected and a new command must not be issued before the module has terminated all the sending of its response result code (whatever it may be).

This applies especially to applications that “sense” the **OK** text and therefore may send the next command before the complete code **<CR><LF>OK<CR><LF>** is sent by the module.

It is advisable anyway to wait for at least 20ms between the end of the reception of the response and the issue of the next AT command.

If the response codes are disabled and therefore the module does not report any response to the command, then at least the 20ms pause time shall be respected.

3.3. Storage

3.3.1. Factory Profile And User Profiles

The Telit wireless modules stores the values set by several commands in the internal non volatile memory (NVM), allowing to remember this setting even after power off. In the NVM these values are set either as **factory profile** or as **user profiles**: there are **two customizable user profiles** and **one factory profile** in the NVM of the device: by default the device will start with user profile 0 equal to factory profile.

For backward compatibility each profile is divided into two sections, one **base section** which was historically the one that was saved and restored in early releases of code, and the **extended section** which includes all the remaining values.

The **&W** command is used to save the actual values of **both sections** of profiles into the NVM user profile.

Commands **&Y** and **&P** are both used to set the profile to be loaded at startup. **&Y** instructs the device to load at startup only the **base section**. **&P** instructs the device to load at startup the full profile: **base + extended sections**.

The **&F** command resets to factory profile values only the command of the base section of profile, while the **&F1** resets to factory profile values the full set of base + extended section commands.



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

The values set by other commands are stored in NVM outside the profile: some of them are stored always, without issuing any **&W**, some other are stored issuing specific commands (**+CSAS**, **#SLEDSAV**, **#VAUXSAV**, **#SKTSAV**, **#ESAV**); all of these values are read at power-up.

The values set by following commands are stored in the profile base section; they depend on the specific AT instance:

DTE SPEED	+IPR
DTE FORMAT	+ICF
GSM DATA MODE	+CBST
AUTOBAUD	+IPR
COMMAND ECHO	E
RESULT MESSAGES	Q
VERBOSE MESSAGES	V
EXTENDED MESSAGES	X
DSR (C107) OPTIONS	&S
DTR (C108) OPTIONS	&D
RI (C125) OPTIONS	\R
POWER SAVING	+CFUN
DEFAULT PROFILE	&Y
S REGISTERS	S0;S3;S4;S5;S7;S25;S30;S38
BEARER SERVICE NAME	+CBST

The values set by following commands are stored in the profile extended section and they depend on the specific AT instance (see **+CMUX**):

+FCLASS	+CSCS	+CR
+CREG	+CLIP	+CRLP
+CRC	+CLIR	+CSVM
+CCWA	+CUSD	+CAOC
+CSSN	+CIND	+CMER
+CPBS	+CMEE	+CGREG
+CGEREP	+CMGF	+CSDH
+CNMI	#QSS	#ECAM
#SMOV	#MWI	#NITZ
#SKIPESC	#CFF	#STIA
+CSTF	+CSDF	+CTZU
+CAPD	+CCWE	+CSIL
+CTZR	#NWEN	#PSNT
#SIMPR	+COLP	#CESTHLCK
+DR	\$GPSNUM	+CSTA
+NCIH		



The values set by following commands are stored in the profile extended section and they don't depend on the specific AT instance (see +**CMUX**):

+CALM	+CRSL	+CMUT ⁵
+CLVL ⁵	+VTD	+CSCB ⁵
#CAP ⁵	#SRS ⁵	#SRP ⁵
#STM ⁵	#TSVOL	#E2SMSRI
#PSEL	#CODEC	#SHFEC ⁵
#HFMICG ⁵	#HSMICG	#SHFSD ⁵
#SPKMUT	#NITZ	#E2SLRI
#HFRECG	#HSRECG	#SHFAGC
#SHSAGC	#SHSEC	#SHSNR
#SHFNR	#SHSSD	#DVI
#DVIEXT	#PSMRI	

The values set by following commands are automatically stored in NVM, without issuing any storing command and independently from the profile (unique values), and are automatically restored at startup:

#SELINT	+COPS ⁶	+CGCLASS
+CGDCONT	+CGQMIN	+CGQREQ
#ENS	#SCFG	#AUTOATT
#DNS	#ICMP	#GSMCONT
+CGSMS	+CGEOMIN	+CGEOREQ

The values set by following commands are stored in NVM on demand, issuing specific commands and independently from the profile:

+CSCA	+CSMP	+CSCB
-------	-------	-------

stored by +CSAS⁷ command and restored by +CRES⁹ command

#SLED		
-------	--	--

stored by #SLED SAV command

#VAUX		
-------	--	--

stored by #VAUXSAV command

#USERID	#PASSW	#PKTSZ
#DSTO	#SKTTO	#SKTSET
#SKTCT		

⁵ +CSCB is still stored in the profile extended section only for backward compatibility issues: its actual storing and restoring are accomplished issuing +CSAS and +CRES

⁶ It is partially stored in NVM; see command description.

⁷ Both commands +**CSAS** (see §3.x.3.2.5) and +**CRES** (see §3.x.3.2.6) deal with non-volatile memory, intending for it either the NVM and the SIM storage.



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

stored by #SKTSAV command and automatically restored at startup; factory default valutes are restored by #SKTRST command

#ESMTP	#EADDR	#EUSER
#EPASSW		

stored by #ESAV command and automatically restored at startup; factory default valutes are restored by #ERST command.

\$GPSP	\$GPSR	\$GPSNVRAM
\$GPSQOS	\$GPSSLR	\$GPSSTOP

stored by \$GPSSAV command and automatically restored at startup; factory default valutes are restored by \$GPSRST command

#BIQUADIN	# BIQUADINEX	# BIQUADOUT
# BIQUADOUTEX		

stored by #PSAV command and automatically restored at startup; factory default valutes are restored by #PRST command.



4.

The following table highlights the availability of commands which are not shared between all the versions of the product (**●** = Supported; **X** = Not Supported):

COMMAND	HE910-G	HE910-DG	HE910-D	HE910-GA	HE910-EUG	HE910-EUR	HE910-EUD	HE910-NAG	HE910-NAR	HE910-NAD	UE910-EUR	UE910-EUD	UE910-NAR	UE910-NAD
D	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A	•	•	•	•	•	•	•	•	•	•	•	•	•	•
S0	•	•	•	•	•	•	•	•	•	•	•	•	•	•
#RXDIV	•	•	•	•	X	X	X	X	X	X	X	X	X	X
\$GPSP	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSR	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSNMUN	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSACP	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSSAV	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSRST	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSNVRAM	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSQOS	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSLSR	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$GPSSTOP	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LCSLP	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LCSLUI	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LCSTER	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LICLS	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LCSLRMT	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LCSLRV	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LTC	•	•	X	•	•	X	X	•	X	X	X	X	X	X
\$LCSLK	•	•	X	•	•	X	X	•	X	X	X	X	X	X
#ANAMICG	X	X	X	X	X	X	X	X	X	X	•	X	•	X
#DIGMICG	X	X	X	X	X	X	X	X	X	X	•	X	•	X
#ECHOCFG	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SPCM	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#CAP	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SRS	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SRP	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#HFMICG	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#HSMICG	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#HFRECG	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#HSRECG	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHFSD	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHSSD	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SPKMUT	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#STM	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#TONE	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#TONEEXT	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#TSVOL	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#UDTSET	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#UDTSAV	•	X	X	•	X	•	X	X	•	X	•	X	•	X



80378ST10091A Rev. 5 – 2013-07-01

COMMAND	HE910-G	HE910-DG	HE910-D	HE910-GA	HE910-EUG	HE910-EUR	HE910-EUD	HE910-NAG	HE910-NAR	HE910-NAD	UE910-EUR	UE910-EUD	UE910-NAR	UE910-NAD
#UDTRST	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#PRST	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#PSAV	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#PSEL	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#BIQUADIN	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#BIQUADINEX	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#BIQUADOUT	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#BIQUADOUTEX	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHFEC	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHSEC	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHFAGC	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHSAGC	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHFNR	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SHSNR	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#DTMF	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#DVI	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#DVIEXT	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#DVICLK	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#SPCM	•	X	X	•	X	•	X	X	•	X	•	X	•	X
#TTY	•	X	X	•	X	•	X	X	•	X	•	X	•	X



NOTE *: This is a **data only** product, with restrictions in the execution of this commands.



5. AT Commands References

5.1. Command Line General Format

5.1.1. Command Line Prefixes

5.1.1.1. Starting A Command Line - AT

AT - Starting A Command Line		SELINT 2
AT	The prefix AT , or at , is a two-character abbreviation (ATtention), always used to start a command line to be sent from TE to TA, with the only exception of AT#/ prefix	
Reference	3GPP TS 27.007	

5.1.1.1.2. Last Command Automatic Repetition - A/

A/ - Last Command Automatic Repetition		SELINT 2
A/	<p>If the prefix A/ or a/ is issued, the MODULE immediately execute once again the body of the preceding command line. No editing is possible and no termination character is necessary. A command line may be repeated multiple times through this mechanism, if desired.</p> <p>If A/ is issued before any command line has been executed, the preceding command line is assumed to have been empty (that results in an OK result code).</p> <p>Note: this command works only at fixed IPR.</p> <p>Note: the custom prefix AT#/ has been defined: it causes the last command to be executed again too; but it doesn't need a fixed IPR.</p>	
Reference	V25ter	

5.1.1.1.3. Repeat Last Command - AT#/

AT#/ - Repeat Last Command		SELINT 2
AT#/ 	The prefix is used to execute again the last received command.	



5.1.2. General Configuration Commands

5.1.2.1.1. Select Interface Style - #SELINT

#SELINT - Select Interface Style	SELINT 2
AT#SELINT=[<v>]	Set command sets the AT command interface style depending on parameter <v>. Parameter: <v> - AT command interface style 2 - switches the AT command interface style of the product, to the new products like HE910
AT#SELINT?	Read command reports the current interface style.
AT#SELINT=?	Test command reports the available range of values for parameter <v>.
Note	Issuing AT#SELINT=<v> when the 3GPP TS 27.010 multiplexing protocol control channel has been enabled (see + CMUX) causes an ERROR result code to be returned.



5.1.3. Hayes Compliant AT Commands

5.1.3.1. Generic Modem Control

5.1.3.1.1. Set To Factory-Defined Configuration - &F

&F - Set To Factory-Defined Configuration		SELINT 2
AT&F[<value>]	<p>Execution command sets the configuration parameters to default values specified by manufacturer; it takes in consideration hardware configuration switches and other manufacturer-defined criteria.</p> <p>Parameter: <value>: 0 - just the factory profile base section parameters are considered. 1 - either the factory profile base section and the extended section are considered (full factory profile).</p> <p>Note: if parameter <value> is omitted, the command has the same behaviour as AT&F0</p>	
Reference	V25ter.	

5.1.3.1.2. Soft Reset - Z

Z - Soft Reset		SELINT 2
ATZ[<n>]	<p>Execution command loads the base section of the specified user profile and the extended section of the default factory profile.</p> <p>Parameter: <n> 0..1 - user profile number</p> <p>Note: any call in progress will be terminated.</p> <p>Note: if parameter <n> is omitted, the command has the same behaviour as ATZ0.</p>	
Reference	V25ter.	



5.1.3.1.3. Select Active Service Class - +FCLASS

+FCLASS - Select Active Service Class		SELINT 2
AT+FCLASS=<n>	Set command sets the wireless module in specified connection mode (data, voice), hence all the calls done afterwards will be data or voice. Parameter: <n> 0 - data 8 - voice	
AT+FCLASS?	Read command returns the current configuration value of the parameter <n>.	
AT+FCLASS=?	Test command returns all supported values of the parameters <n>.	
Reference	3GPP TS 27.007	

5.1.3.1.4. Default Reset Basic Profile Designation - &Y

&Y - Default Reset Basic Profile Designation		SELINT 2
AT&Y[<n>]	Execution command defines the basic profiles which will be loaded on startup. Parameter: <n> 0..1 - profile (default is 0): the wireless module is able to store 2 complete configurations (see &W). Note: differently from command Z<n> , which loads just once the desired profile, the one chosen through command &Y will be loaded on every startup. Note: if parameter is omitted, the command has the same behaviour as AT&Y0	

5.1.3.1.5. Default Reset Full Profile Designation - &P

&P - Default Reset Full Profile Designation		SELINT 2
AT&P[<n>]	Execution command defines which full profile will be loaded on startup. Parameter: <n> 0..1 – profile number: the wireless module is able to store 2 full configurations (see command &W). Note: differently from command Z<n> , which loads just once the desired profile, the one chosen through command &P will be loaded on every startup. Note: if parameter is omitted, the command has the same behaviour as AT&P0	
Reference	Telit Specifications	



5.1.3.1.6. Store Current Configuration - &W

&W - Store Current Configuration		SELINT 2
AT&W[<n>]	<p>Execution command stores on profile <n> the complete configuration of the device.</p> <p>Parameter: <n> 0..1 - profile</p> <p>Note: if parameter is omitted, the command has the same behaviour of AT&W0.</p>	

5.1.3.1.7. Store Telephone Number - &Z

&Z - Store Telephone Number In The Wireless Module Internal Phonebook		SELINT 2
AT&Z<n>=<nr>	<p>Execution command stores in the record <n> the telephone number <nr>. The records cannot be overwritten, they must be cleared before rewriting.</p> <p>Parameters: <n> - phonebook record <nr> - telephone number (string type)</p> <p>Note: the wireless module has a built in non volatile memory in which 10 telephone numbers of a maximum 24 digits can be stored</p> <p>Note: to delete the record <n> the command AT&Z<n>=<CR> must be issued.</p> <p>Note: the records in the module memory can be viewed with the command &N, while the telephone number stored in the record <i>n</i> can be dialed by giving the command ATDS=<n>.</p>	

5.1.3.1.8. Display Stored Numbers - &N

&N - Display Internal Phonebook Stored Numbers		SELINT 2
AT&N[<n>]	<p>Execution command returns the telephone number stored at the <n> position in the internal memory.</p> <p>Parameter: <n> - phonebook record number</p> <p>Note: if parameter <n> is omitted then all the internal records are shown.</p>	



5.1.3.1.9. Manufacturer Identification - +GMI

+GMI - Manufacturer Identification		SELINT 2
AT+GMI	Execution command returns the manufacturer identification.	
Reference	V.25ter	

5.1.3.1.10. Model Identification - +GMM

+GMM - Model Identification		SELINT 2
AT+GMM	Execution command returns the model identification.	
Reference	V.25ter	

5.1.3.1.11. Revision Identification - +GMR

+GMR - Revision Identification		SELINT 2
AT+GMR	Execution command returns the software revision identification.	
Reference	V.25ter	

5.1.3.1.12. Capabilities List - +GCAP

+GCAP - Capabilities List		SELINT 2
AT+GCAP	Execution command returns the equipment supported command set list. Where: +CGSM: GSM ETSI command set +FCLASS: Fax command set +DS: Data Service common modem command set +MS: Mobile Specific command set +ES: WCDMA data Service common modem command set	
Reference	V.25ter	

5.1.3.1.13. Serial Number - +GSN

+GSN - Serial Number		SELINT 2
AT+GSN	Execution command returns the device board serial number. Note: The number returned is not the IMSI, it is only the board number	
Reference	V.25ter	



5.1.3.1.14. Display Configuration And Profile - &V

&V - Display Current Base Configuration And Profile		SELINT 2
AT&V	<p>Execution command returns some of the base configuration parameters settings.</p> <p>Note: the row of information about CTS (C106) OPTIONS is in the output of &V only for compatibility reasons and represents only a dummy value.</p>	

5.1.3.1.15. Display Configuration And Profile - &V0

&V0 - Display Current Configuration And Profile		SELINT 2
AT&V0	<p>Execution command returns all the configuration parameters settings.</p> <p>Note: this command is the same as &V, it is included only for backwards compatibility.</p> <p>Note: the row of information about CTS (C106) OPTIONS is in the output of &V0 only for compatibility reasons and represents only a dummy value.</p>	

5.1.3.1.16. S Registers Display - &V1

&V1 - S Registers Display		SELINT 2												
AT&V1	<p>Execution command returns the value of the S registers in decimal and hexadecimal value in the format:</p> <table border="0"> <thead> <tr> <th>REG</th><th>DEC</th><th>HEX</th></tr> </thead> <tbody> <tr> <td><reg0></td><td><dec></td><td><hex></td></tr> <tr> <td><reg1></td><td><dec></td><td><hex></td></tr> <tr> <td>...</td><td></td><td></td></tr> </tbody> </table> <p>where <regn> - S register number 000..005 007 012 025 038 <dec> - current value in decimal notation <hex> - current value in hexadecimal notation</p>	REG	DEC	HEX	<reg0>	<dec>	<hex>	<reg1>	<dec>	<hex>	...			
REG	DEC	HEX												
<reg0>	<dec>	<hex>												
<reg1>	<dec>	<hex>												
...														



5.1.3.1.17. Extended S Registers Display - &V3

&V3 - Extended S Registers Display		SELINT 2												
AT&V3	<p>Execution command returns the value of the S registers in decimal and hexadecimal value in the format:</p> <table> <thead> <tr> <th>REG</th><th>DEC</th><th>HEX</th></tr> </thead> <tbody> <tr> <td><reg0></td><td><dec></td><td><hex></td></tr> <tr> <td><reg1></td><td><dec></td><td><hex></td></tr> <tr> <td>...</td><td></td><td></td></tr> </tbody> </table> <p>where <regn> - S register number 000..005 007 012 025 030 038 <dec> - current value in decimal notation <hex> - current value in hexadecimal notation</p>		REG	DEC	HEX	<reg0>	<dec>	<hex>	<reg1>	<dec>	<hex>	...		
REG	DEC	HEX												
<reg0>	<dec>	<hex>												
<reg1>	<dec>	<hex>												
...														

5.1.3.1.18. Display Last Connection Statistics - &V2

&V2 - Display Last Connection Statistics		SELINT 2
AT&V2	<p>Execution command returns the last connection statistics & connection failure reason.</p>	

5.1.3.1.19. Single Line Connect Message - \V

\V - Single Line Connect Message		SELINT 2
AT\V<n>	<p>Execution command set single line connect message.</p> <p>Parameter: <n> 0 - off 1 - on</p>	



5.1.3.1.20. Country Of Installation - +GCI

+GCI - Country Of Installation		SELINT 2
AT+GCI=<code>	Set command selects the installation country code according to ITU-T.35 Annex A. Parameter: <code> 59 - it currently supports only the Italy country code	
AT+GCI?	Read command reports the currently selected country code.	
AT+GCI=?	Test command reports the supported country codes.	
Reference	V25ter.	

5.1.3.1.21. Line Signal Level - %L

%L - Line Signal Level		SELINT 2
AT%L	It has no effect and is included only for backward compatibility with landline modems	

5.1.3.1.22. Line Quality - %Q

%Q - Line Quality		SELINT 2
AT%Q	It has no effect and is included only for backward compatibility with landline modems	

5.1.3.1.23. Speaker Loudness - L

L - Speaker Loudness		SELINT 2
ATL<n>	It has no effect and is included only for backward compatibility with landline modems	

5.1.3.1.24. Speaker Mode - M

M - Speaker Mode		SELINT 2
ATM<n>	It has no effect and is included only for backward compatibility with landline modems	



5.1.3.2. DTE - Modem Interface Control

5.1.3.2.1. Command Echo - E

E - Command Echo		SELINT 2
ATE[<n>]	<p>Set command enables/disables the command echo.</p> <p>Parameter: <n> 0 - disables command echo 1 - enables command echo (factory default) , hence command sent to the device are echoed back to the DTE before the response is given.</p> <p>Note: if parameter is omitted, the command has the same behaviour of ATE0</p>	
Reference	V25ter	

5.1.3.2.2. Quiet Result Codes - Q

Q - Quiet Result Codes		SELINT 2
ATQ[<n>]	<p>Set command enables or disables the result codes.</p> <p>Parameter: <n> 0 - enables result codes (factory default) 1 - disables result codes 2 - disables result codes (only for backward compatibility)</p> <p>Note: After issuing either ATQ1 or ATQ2 every information text transmitted in response to commands is not affected</p> <p>Note: if parameter is omitted, the command has the same behaviour of ATQ0</p>	
Example	<p><i>After issuing ATQ1 or ATQ2</i></p> <p>AT+CGACT=? +CGACT: (0-1) nothing is appended to the response</p>	
Reference	V25ter	



5.1.3.2.3. Response Format - V

V - Response Format	SELINT 2								
<p>ATV[<n>]</p> <p>Set command determines the contents of the header and trailer transmitted with result codes and information responses. It also determines if result codes are transmitted in a numeric form or an alphanumeric form (see [§3.2.3 Information Responses And Result Codes] for the table of result codes).</p> <p>Parameter:</p> <p><n></p> <p>0 - limited headers and trailers and numeric format of result codes</p> <table border="1" data-bbox="536 831 1358 922"> <tr> <td>information responses</td><td><text><CR><LF></td></tr> <tr> <td>result codes</td><td><numeric code><CR></td></tr> </table> <p>1 - full headers and trailers and verbose format of result codes (factory default)</p> <table border="1" data-bbox="536 1055 1358 1238"> <tr> <td>information responses</td><td><CR><LF> <text><CR><LF></td></tr> <tr> <td>result codes</td><td><CR><LF> <verbose code><CR><LF></td></tr> </table> <p>Note: the <text> portion of information responses is not affected by this setting.</p> <p>Note: if parameter is omitted, the command has the same behaviour of ATV0</p>	information responses	<text><CR><LF>	result codes	<numeric code><CR>	information responses	<CR><LF> <text><CR><LF>	result codes	<CR><LF> <verbose code><CR><LF>	
information responses	<text><CR><LF>								
result codes	<numeric code><CR>								
information responses	<CR><LF> <text><CR><LF>								
result codes	<CR><LF> <verbose code><CR><LF>								
Reference	V25ter								



5.1.3.2.4. Extended Result Codes - X

X - Extended Result Codes		SELINT 2
ATX[<n>]	<p>Set command selects the result code messages subset used by the modem to inform the DTE of the result of the commands.</p> <p>Parameter: <n> - (factory default is 1) 0 - on entering dial-mode CONNECT result code is given; OK, CONNECT, RING, NO CARRIER, ERROR, NO ANSWER result codes are enabled . Dial tone and busy detection (NO DIALTONE and BUSY result codes) are disabled. 1..4 - on entering dial-mode CONNECT <text> result code is given; all the other result codes are enabled.</p> <p>Note: If parameter is omitted, the command has the same behaviour of ATX0</p>	
Note	For complete control on CONNECT response message see also +DR command.	
Reference	V25ter	

5.1.3.2.5. Identification Information - I

I - Identification Information		SELINT 2
ATI[<n>]	<p>Execution command returns one or more lines of information text followed by a result code.</p> <p>Parameter: <n> 0 - numerical identifier 1 - module checksum 2 - checksum check result 3 - manufacturer 4 - product name 5 - DOB version</p> <p>Note: if parameter is omitted, the command has the same behaviour of ATI0</p>	
Reference	V25ter	



5.1.3.2.6. Data Carrier Detect (DCD) Control - &C

&C - Data Carrier Detect (DCD) Control		SELINT 2
AT&C[<n>]	<p>Set command controls the RS232 DCD output behaviour.</p> <p>Parameter: <n></p> <ul style="list-style-type: none"> 0 - DCD remains high always. 1 - DCD follows the Carrier detect status: if carrier is detected DCD is high, otherwise DCD is low. (factory default) 2 - DCD off while disconnecting <p>Note: if parameter is omitted, the command has the same behaviour of AT&C0</p>	
Reference	V25ter	

5.1.3.2.7. Data Terminal Ready (DTR) Control - &D

&D - Data Terminal Ready (DTR) Control		SELINT 2
AT&D[<n>]	<p>Set command controls the Module behaviour to the RS232 DTR transitions.</p> <p>Parameter: <n></p> <ul style="list-style-type: none"> 0 - device ignores DTR transitions (factory default); if +CVHU current setting is different from 2 then every setting AT&D0 is equivalent to AT&D5 1 - when the MODULE is connected, the High to Low transition of DTR pin sets the device in command mode, the current connection is NOT closed; if +CVHU current setting is different from 2 then issuing AT&D1 is equivalent to AT&D5 2 - when the MODULE is connected , the High to Low transition of DTR pin sets the device in command mode and the current connection is closed; if +CVHU current setting is different from 2 then issuing AT&D2 is equivalent to AT&D5 3 - device ignores DTR transitions; if +CVHU current setting is different from 2 then issuing AT&D3 is equivalent to AT&D5 4 - C108/1 operation is disabled; if +CVHU current setting is different from 2 then issuing AT&D4 is equivalent to AT&D5 5 - C108/1 operation is enabled; same behaviour as for <n>=2 <p>Note: if a connection has been set up issuing either #SKTD or #SKTOP, then AT&D1 has the same effect as AT&D2. If a connection has been set up issuing AT#SD then AT&D1 and AT&D2 have different effect, as described above.</p> <p>Note: if AT&D2 has been issued and the DTR has been tied Low, autoanswering is inhibited and it is possible to answer only issuing command ATA.</p>	



&D - Data Terminal Ready (DTR) Control		SELINT 2
	<p>Note: if parameter is omitted, the command has the same behaviour of AT&D0</p> <p>Note: if AT&D2 has been issued the call is drop on falling DTR edge and NO CARRIER exits on rising DTR edge.</p>	
Reference	V25ter	

5.1.3.2.8. Flow Control - &K

&K - Flow Control		SELINT 2
AT&K[<n>]	<p>Set command controls the RS232 flow control behaviour.</p> <p>Parameter: <n> 0 - no flow control 3 - hardware bi-directional flow control (both RTS/CTS active) (factory default)</p> <p>Note: if parameter is omitted, the command has the same behaviour as AT&K0</p> <p>Note: &K has no Read Command. To verify the current setting of &K, simply check the settings of the active profile issuing AT&V.</p> <p>Note: Hardware flow control (AT&K3) is not active in command mode.</p>	

5.1.3.2.9. Data Set Ready (DSR) Control - &S

&S - Data Set Ready (DSR) Control		SELINT 2
AT&S[<n>]	<p>Set command controls the RS232 DSR pin behaviour.</p> <p>Parameter: <n> 0 - always High 1 - follows the GSM traffic channel indication. 2 - High when connected 3 - High when device is ready to receive commands (factory default).</p> <p>Note: if option 1 is selected then DSR is tied High when the device receives from the network the GSM traffic channel indication.</p> <p>Note: in power saving mode the DSR pin is always tied Low.</p> <p>Note: if parameter is omitted, the command has the same behaviour of AT&S0</p>	



5.1.3.2.10. Ring (RI) Control - \R

\R - Ring (RI) Control		SELINT 2
AT\R[<n>]	<p>Set command controls the RING output pin behaviour.</p> <p>Parameter: <n> 0 - RING on during ringing and further connection 1 - RING on during ringing (factory default) 2 - RING follows the ring signal</p> <p>Note: to check the ring option status use the &V command.</p> <p>Note: if parameter is omitted, the command has the same behaviour of AT\R0</p>	

5.1.3.2.11. Fixed DTE Interface Rate - +IPR

+IPR - Fixed DTE Interface Rate		SELINT 2
AT+IPR=<rate>	<p>Set command specifies the DTE speed at which the device accepts commands during command mode operations; it may be used to fix the DTE-DCE interface speed.</p> <p>Parameter: <rate> 300 1200 2400 4800 9600 19200 38400 57600 115200 (default value) 230400 460800 921600</p>	
AT+IPR?	Read command returns the current value of + IPR parameter.	
AT+IPR=?	<p>Test command returns the list of fixed-only <rate> values in the format:</p> <p>+IPR: (list of fixed-only <rate> values)</p>	
Reference	V25ter	



5.1.3.2.12. DTE-Modem Local Flow Control - +IFC

+IFC - DTE-Modem Local Flow Control		SELINT 2
AT+IFC=<by_te>,<by_ta>	<p>Set command selects the flow control behaviour of the serial port in both directions: from DTE to modem (<by_ta> option) and from modem to DTE (<by_te>)</p> <p>Parameters:</p> <p><by_te> - flow control option for the data received by DTE 0 - flow control None 2 - C105 (RTS) (factory default)</p> <p><by_ta> - flow control option for the data sent by modem 0 - flow control None 2 - C106 (CTS) (factory default)</p> <p>Note: only possible commands are AT+IFC=0,0 and AT+IFC=2,2.</p>	
AT+IFC?	Read command returns active flow control settings.	
AT+IFC=?	Test command returns all supported values of the parameters <by_te> and <by_ta>.	
Reference	V25ter	

5.1.3.2.13. DTE-Modem Character Framing - +ICF

+ICF - DTE-Modem Character Framing		SELINT 2
AT+ICF=<format>[,<parity>]	<p>Set command defines the asynchronous character framing to be used when autobauding is disabled.</p> <p>Parameters:</p> <p><format> - determines the number of bits in the data bits, the presence of a parity bit, and the number of stop bits in the start-stop frame. 1 - 8 Data, 2 Stop 2 - 8 Data, 1 Parity, 1 Stop 3 - 8 Data, 1 Stop 5 - 7 Data, 1 Parity, 1 Stop</p> <p><parity> - determines how the parity bit is generated and checked, if present; setting this subparameter is mandatory and has a meaning only if <format> subparameter is either 2 or 5 otherwise is not allowed. 0 - Odd 1 - Even</p>	
AT+ICF?	Read command returns current settings for subparameters <format> and <parity>. If current setting of subparameter <format> is neither 2 nor 5, the current setting of subparameter <parity> will always be represented as 0.	
AT+ICF=?	Test command returns the ranges of values for the parameters <format> and <parity>	
Reference	V25ter	
Example	8N2 AT+ICF = 1	



+ICF - DTE-Modem Character Framing	SELINT 2
	<p>OK</p> <p><i>8O1</i> AT+ICF = 2,0 OK</p> <p><i>8E1</i> AT+ICF = 2,1 OK</p> <p><i>8N1</i> AT+ICF = 3 OK</p> <p><i>7O1</i> AT+ICF = 5,0 OK</p> <p><i>7E1</i> AT+ICF = 5,1 OK</p>



5.1.3.3.1. Dial - D

D – Dial	SELINT 2
	<p>memory storage (see +CPBS).</p> <p>If “;” is present a voice call is performed.</p> <p>Parameter:</p> <p><n> - active phonebook memory storage entry location; it should be in the range of locations available in the active phonebook memory storage.</p>
ATDL	Issues a call to the last number dialed.
ATDS=<nr>[;]	<p>Issues a call to the number stored in the MODULE internal phonebook position number <nr>.</p> <p>If “;” is present, a voice call is performed.</p> <p>Parameter:</p> <p><nr> - internal phonebook position to be called (See commands &N and &Z)</p>
ATD<number>I[;] ATD<number>i[;]	<p>Issues a call overwriting the CLIR supplementary service subscription default value for this call</p> <p>If “;” is present a voice call is performed.</p> <p>I - invocation, restrict CLI presentation i - suppression, allow CLI presentation</p>
ATD<number>G[;] ATD<number>g[;]	<p>Issues a call checking the CUG supplementary service information for the current call. Refer to +CCUG command.</p> <p>If “;” is present a voice call is performed.</p>
ATD*<gprs_sc> [*<addr>][*(<L2P>] [*(<cid>)]#	<p>This command is specific of GPRS functionality and causes the MT to perform whatever actions are necessary to establish communication between the TE and the external PDN.</p> <p>Parameters:</p> <p><gprs_sc> - GPRS Service Code, a digit string (value 99) which identifies a request to use the GPRS</p> <p><addr> - string that identifies the called party in the address space applicable to the PDP.</p> <p><L2P> - a string which indicates the layer 2 protocol to be used. For communications software that does not support arbitrary characters in the dial string, the following numeric equivalents shall be used:</p> <p>1 - PPP</p> <p><cid> - a digit which specifies a particular PDP context definition (see +CGDCONT command).</p>
Note	Data only products do not start the call and command answer is ERROR if a voice call is requested.
Note	The escape sequence causes a closure of the link.
Example	<p><i>To dial a number in SIM phonebook entry 6:</i></p> <p>ATD>SM6 OK</p> <p><i>To have a voice call to the 6-th entry of active phonebook:</i></p> <p>ATD>6; OK</p>



D – Dial		SELINT 2
	<i>To call the entry with alphanumeric field "Name":</i> ATD>"Name"; OK	
Reference	V25ter.	

5.1.3.3.2. Tone Dial - T

T - Tone Dial		SELINT 2
ATT	Set command has no effect is included only for backward compatibility with landline modems.	
Reference	V25ter.	

5.1.3.3.3. Pulse Dial - P

P - Pulse Dial		SELINT 2
ATP	Set command has no effect is included only for backward compatibility with landline modems.	
Reference	V25ter.	

5.1.3.3.4. Answer - A

A – Answer		SELINT 2
ATA	Execution command is used to answer to an incoming call if automatic answer is disabled. Note: This command MUST be the last in the command line and must be followed immediately by a <CR> character.	
Note	Data only products do not start the call and command answer is ERROR if a voice call is requested.	
Reference	V25ter.	

5.1.3.3.5. Disconnect - H

H – Disconnect		SELINT 2
ATH	Execution command is used to close the current conversation (voice or data). Note: this command can be issued only in command mode; when a data conversation is active the device is in on-line mode (commands are not sensed and characters are sent to the other party), hence escape sequence is required before issuing this command, otherwise if &D1 option is active, DTR pin has to be tied Low to return in command mode.	
Reference	V25ter.	



5.1.3.3.6. Return To On Line Mode - O

O - Return To On Line Mode		SELINT 2
ATO	Execution command is used to return to on-line mode from command mode. If there's no active connection it returns NO CARRIER . Note: After issuing this command, if the device is in conversation, to send other commands to the device you must return to command mode by issuing the escape sequence (see register S2).	
Note	This command doesn't apply to PPP but only to CSD call	
Note	The escape sequence causes a closure of the link.	
Reference	V25ter.	

5.1.3.4. Modulation Control

5.1.3.4.1. Line Quality And Auto Retrain - %E

%E - Line Quality Monitor And Auto Retrain Or Fallback/Fallforward		SELINT 2
AT%E<n>	Execution command has no effect and is included only for backward compatibility with landline modems.	

5.1.3.5. Compression Control

5.1.3.5.1. Data Compression - +DS

+DS - Data Compression		SELINT 2
AT+DS=[<n>]	Set command sets the V42 compression parameter. Parameter: <n> 0 - no compression, it is currently the only supported value; the command has no effect, and is included only for backward compatibility	
AT+DS?	Read command returns current value of the data compression parameter.	
AT+DS=?	Test command returns all supported values of the parameter <n>	
Reference	V25ter	



5.1.3.5.2. Data Compression Reporting - +DR

+DR - Data Compression Reporting		SELINT 2
AT+DR=<n>	<p>Set command enables/disables the data compression reporting upon connection.</p> <p>Parameter: <n> 0 - data compression reporting disabled; 1 - data compression reporting enabled upon connection.</p> <p>Note: if enabled, the following intermediate result code is transmitted before the final result code:</p> <p>+DR: <compression> (the only supported value for <compression> is “NONE”)</p>	
AT+DR?	Read command returns current value of <n>.	
AT+DR=?	Test command returns all supported values of the parameter <n>	
Reference	V25ter	



5.1.3.6. S Parameters

Basic commands that begin with the letter “S” are known as “**S-Parameters**”. The number following the “S” indicates the “parameter number” being referenced. If the number is not recognized as a valid parameter number, an **ERROR** result code is issued.

If no value is given for the subparameter of an **S-Parameter**, an **ERROR** result code will be issued and the stored value left unchanged.

Reference: V25ter

5.1.3.6.1. Number Of Rings To Auto Answer - S0

S0 - Number Of Rings To Auto Answer		SELINT 2
ATS0=[<n>]	Set command sets the number of rings required before device automatically answers an incoming call. Parameter: <n> - number of rings 0 - auto answer disabled (factory default) 1..255 - number of rings required before automatic answer.	
ATS0?	Read command returns the current value of S0 parameter .	
Note	Data only products ignore command setting and have auto answer disabled if incoming call is a voice call.	
Reference	V25ter	

5.1.3.6.2. Ring Counter - S1

S1 - Ring Counter		SELINT 2
ATS1	S1 is incremented each time the device detects the ring signal of an incoming call. S1 is cleared as soon as no ring occur. Note: the form ATS1 has no effect.	
ATS1?	Read command returns the value of this parameter.	



5.1.3.6.3. Command Line Termination Character - S3

S3 - Command Line Termination Character		SELINT 2
ATS3=[<char>]	<p>Set command sets the value of the character either recognized by the device as command line terminator and generated by the device as part of the header, trailer, and terminator for result codes and information text, along with S4 parameter.</p> <p>Parameter: <char> - command line termination character (decimal ASCII) 0..127 - factory default value is 13 (ASCII <CR>)</p> <p>Note: the “previous” value of S3 is used to determine the command line termination character for entering the command line containing the S3 setting command. However the result code issued shall use the “new” value of S3 (as set during the processing of the command line)</p>	
ATS3?	<p>Read command returns the current value of S3 parameter.</p> <p>Note: the format of the numbers in output is always 3 digits, left-filled with 0s</p>	
Reference	V25ter	

5.1.3.6.4. Response Formatting Character - S4

S4 - Response Formatting Character		SELINT 2
ATS4=[<char>]	<p>Set command sets the value of the character generated by the device as part of the header, trailer, and terminator for result codes and information text, along with the S3 parameter.</p> <p>Parameter: <char> - response formatting character (decimal ASCII) 0..127 - factory default value is 10 (ASCII LF)</p> <p>Note: if the value of S4 is changed in a command line the result code issued in response of that command line will use the new value of S4.</p>	
ATS4?	<p>Read command returns the current value of S4 parameter.</p> <p>Note: the format of the numbers in output is always 3 digits, left-filled with 0s</p>	
Reference	V25ter	



5.1.3.6.5. Command Line Editing Character - S5

S5 - Command Line Editing Character		SELINT 2
ATS5=[<char>]	Set command sets the value of the character recognized by the device as a request to delete from the command line the immediately preceding character. Parameter: <char> - command line editing character (decimal ASCII) 0..127 - factory default value is 8 (ASCII BS)	
ATS5?	Read command returns the current value of S5 parameter . Note: the format of the numbers in output is always 3 digits, left-filled with 0s	
Reference	V25ter	

5.1.3.6.6. Connection Completion Time-Out - S7

S7 - Connection Completion Time-Out		SELINT 2
ATS7=[<tout>]	Set command sets the amount of time, in seconds, that the device shall allow between either answering a call (automatically or by A command) or completion of signalling of call addressing information to network (dialing), and establishment of a connection with the remote device. Parameter: <tout> - number of seconds 1..255 - factory default value is 60	
ATS7?	Read command returns the current value of S7 parameter . Note: the format of the numbers in output is always 3 digits, left-filled with 0s	
Reference	V25ter	

5.1.3.6.7. – Carrier Off With Firm Time - S10

S10 –Carrier Off With Firm Time		SELINT 2
ATS10	Execution command has no effect and is included only for backward compatibility with landline modems	



5.1.3.6.8. Delay To DTR Off - S25

S25 -Delay To DTR Off	SELINT 2
ATS25=[<time>]	<p>Set command defines the amount of time, in hundredths of second, that the device will ignore the DTR for taking the action specified by command &D.</p> <p>Parameter: <time> - expressed in hundredths of a second 0..255 - factory default value is 5.</p> <p>Note: the delay is effective only if its value is greater than 5.</p> <p>Note: command not yet implemented</p> <p>Note: in power saving (e.g. CFUN 5 with DTR low) DTR has to be off at least 3 seconds for taking the action specified by command &D, independently of S25 parameter.</p>
ATS25?	<p>Read command returns the current value of S25 parameter.</p> <p>Note: the format of the numbers in output is always 3 digits, left-filled with 0s</p>



5.1.4. 3GPP TS 27.007 AT Commands

5.1.4.1. General

5.1.4.1.1. Request Manufacturer Identification - +CGMI

+CGMI - Request Manufacturer Identification		SELINT 2
AT+CGMI	Execution command returns the device manufacturer identification code without command echo.	
AT+CGMI=?	Test command returns OK result code.	
Reference	3GPP TS 27.007	

5.1.4.1.2. Request Model Identification - +CGMM

+CGMM - Request Model Identification		SELINT 2
AT+CGMM	Execution command returns the device model identification code without command echo.	
AT+CGMM=?	Test command returns OK result code.	
Reference	3GPP TS 27.007	

5.1.4.1.3. Request Revision Identification - +CGMR

+CGMR - Request Revision Identification		SELINT 2
AT+CGMR	Execution command returns device software revision number without command echo.	
AT+CGMR=?	Test command returns OK result code.	
Reference	3GPP TS 27.007	

5.1.4.1.4. Request Product Serial Number Identification - +CGSN

+CGSN - Request Product Serial Number Identification		SELINT 2
AT+CGSN	Execution command returns the product serial number, identified as the IMEI of the mobile, without command echo.	
AT+CGSN=?	Test command returns OK result code.	
Reference	3GPP TS 27.007	



5.1.4.1.5. Select TE Character Set - +CSCS

+CSCS - Select TE Character Set		SELINT 2
AT+CSCS= [<chset>]	Set command sets the current character set used by the device. Parameter: <chset> - character set "GSM" - GSM default alphabet (3GPP TS 23.038) "IRA" - international reference alphabet (ITU-T T.50) "8859-1" - ISO 8859 Latin 1 character set "PCCP437" - PC character set Code Page 437 "UCS2" - 16-bit universal multiple-octet coded character set (ISO/IEC10646)	
AT+CSCS?	Read command returns the current value of the active character set.	
AT+CSCS=?	Test command returns the supported values for parameter <chset>.	
Reference	3GPP TS 27.007	

5.1.4.1.6. International Mobile Subscriber Identity (IMSI) - +CIMI

+CIMI - Request International Mobile Subscriber Identify (IMSI)		SELINT 2
AT+CIMI	Execution command returns the value of the Internal Mobile Subscriber Identity stored in the SIM without command echo. Note: a SIM card must be present in the SIM card housing, otherwise the command returns ERROR .	
AT+CIMI=?	Test command returns OK result code.	
Reference	3GPP TS 27.007	



5.1.4.1.7. Multiplexing Mode - +CMUX

+CMUX - Multiplexing Mode	SELINT 2
AT+CMUX=<mode>[,<subset>[,<port_speed>[,<N1>[,<T1>[,<N2>[,<T2>[,<T3>[,<k>]]]]]]]	<p>Set command is used to enable/disable the 3GPP TS 27.010 multiplexing protocol control channel.</p> <p>Parameters:</p> <p><mode> multiplexer transparency mechanism 0 - basic option; it is currently the only supported value.</p> <p><subset> 0 - UIH frames used only; it is currently the only supported value.</p> <p><port_speed> transmission rate 5 - 115 200 bit/s (default)</p> <p><N1> maximum frame size 1-1509, the default is 121</p> <p><T1> acknowledgement timer in units of ten milliseconds 1-255: where 10 is default (100 ms)</p> <p><N2> maximum number of re-transmissions 0-100: currently only the range 0-5 is supported, the default is 3</p> <p><T2> response timer for the multiplexer control channel in units of ten milliseconds 2-255: where 30 is default (300 ms). Note: T2 must be longer than T1.</p> <p><T3> wake up response timer in seconds 1-255: currently not supported, in case of read command 0 is returned</p> <p><k> window size, for Advanced operation with Error Recovery options 1-7: currently not supported, in case of read command 0 is returned</p> <p>Note: all the CMUX protocol parameters are fixed as defined in GSM07.10 and cannot be changed.</p>
AT+CMUX?	<p>Read command returns the current value of <mode>, <subset>, <port_speed>, <N1>, <T1>, <N2>, <T2>, <T3> and <k> parameters, in the format:</p> <p>+CMUX: <mode>,<subset>,<port_speed>,<N1>,<T1>,<N2>,<T2>,<T3>,<k></p>
AT+CMUX=?	<p>Test command returns the range of supported values for parameters <mode>, <subset>, <port_speed>, <N1>, <T1>, <N2>, <T2>, <T3> and <k>.</p>
Reference	3GPP TS 27.007, 3GPP TS 27.010



5.1.4.2. Call Control

5.1.4.2.1. Hang Up Call - +CHUP

+CHUP - Hang Up Call		SELINT 2
AT+CHUP	Execution command cancels all active and held calls, also if a multi-party session is running.	
AT+CHUP=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	

5.1.4.2.2. Select Bearer Service Type - +CBST

+CBST - Select Bearer Service Type		SELINT 2
AT+CBST= [<speed> [,<name> [,<ce>]]]	<p>Set command sets the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated. This setting is also used during mobile terminated data call setup, in case of single numbering scheme calls.</p> <p>Parameters:</p> <p><speed> - data rate</p> <ul style="list-style-type: none"> 0 - autobauding (automatic selection of the speed, factory default) 4 - 2400 bps (V.22bis) 5 - 2400 bps (V.26ter) 6 - 4800 bps (V.32) 7 - 9600 bps (V.32) 12 - 9600 bps (V.34) 14 - 14400 bps (V.34) 15 - 19200 bps (V.34) 16 - 28800 bps (V.34) 17 - 33600 bps (V.34) 68 - 2400 bps (V.110 or X.31 flag stuffing) 70 - 4800 bps (V.110 or X.31 flag stuffing) 71 - 9600 bps (V.110 or X.31 flag stuffing) 75 - 14400 bps (V.110 or X.31 flag stuffing) 79 - 19200 bps (V.110 or X.31 flag stuffing) 80 - 28800 bps (V.110 or X.31 flag stuffing) 81 - 38400 bps (V.110 or X.31 flag stuffing) 82 - 48000 bps (V.110 or X.31 flag stuffing) 83 - 56000 bps (V.110 or X.31 flag stuffing) 84 - 64000 bps (X.31 flag stuffing) 115 - 56000 bps (bit transparent) 116 - 64000 bps (bit transparent) 120 - 32000 bps (PIAFS32k) 121 - 64000 bps (PIAFS64k) 130 - 28800 bps (multimedia) 131 - 32000 bps (multimedia) 	



+CBST - Select Bearer Service Type		SELINT 2
	<p>132 – 33600 bps (multimedia) 133 – 56000 bps (multimedia) 134 – 64000 bps (multimedia) <name> - bearer service name 0 - data circuit asynchronous (factory default) 1 - data circuit synchronous <ce> - connection element 0 - transparent 1 - non transparent (default)</p> <p>Note: the settings AT+CBST=0,0,0 AT+CBST=14,0,0 AT+CBST=75,0,0 are not supported.</p> <p>Note: if <name>=1 then <speed>=0,4,6,7,14,68,70,71,75 is not supported.</p> <p>Note: the following settings are recommended AT+CBST=71,0,1 for mobile-to-mobile calls AT+CBST=7,0,1 for mobile-to-fix calls</p>	
AT+CBST?	Read command returns current value of the parameters <speed>, <name> and <ce>	
AT+CBST=?	Test command returns the supported range of values for the parameters.	
Reference	3GPP TS 27.007	



5.1.4.2.3. Radio Link Protocol - +CRLP

+CRLP - Radio Link Protocol		SELINT 2
AT+CRLP=[<iws>[,<mws>[,<T1>[,<N2>[,<ver>]]]]]	<p>Set command sets Radio Link Protocol (RLP) parameters used when non-transparent data calls are originated</p> <p>Parameters:</p> <p><iws> - IWF window Dimension 1..61 - factory default value is 61</p> <p><mws> - MS window Dimension 1..61 - default value is 61</p> <p><T1> - acknowledge timer (10 ms units). 39..255 - default value is 48</p> <p><N2> - retransmission attempts 1..255 - default value is 6</p> <p><ver> - protocol version 0</p>	
AT+CRLP?	Read command returns the current value of the RLP protocol parameters.	
AT+CRLP=?	Test command returns supported range of values of the RLP protocol parameters.	
Reference	3GPP TS 27.007	

5.1.4.2.4. Service Reporting Control - +CR

+CR - Service Reporting Control		SELINT 2
AT+CR=[<mode>]	<p>Set command controls whether or not intermediate result code +CR is returned from TA to TE.</p> <p>Parameter:</p> <p><mode></p> <p>0 - disables +CR reporting (factory default)</p> <p>1 - enables +CR reporting: the intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before the intermediate result code CONNECT is transmitted. Its format is:</p> <p>+CR: <serv></p> <p>where:</p> <p><serv></p> <p>ASYNC - asynchronous transparent</p> <p>SYNC - synchronous transparent</p>	



+CR - Service Reporting Control		SELINT 2
	<p>REL ASYNC - asynchronous non-transparent REL SYNC - synchronous non-transparent.</p> <p>Note: this command replaces V.25ter [14] command Modulation Reporting Control (+MR), which is not appropriate for use with a GSM terminal.</p>	
AT+CR?	<p>Read command returns whether or not intermediate result code +CR is enabled, in the format:</p> <p>+CR: <mode></p>	
AT+CR=?	Test command returns the supported range of values of parameter <mode>.	
Reference	3GPP TS 27.007	

5.1.4.2.5. Extended Error Report - +CEER

+CEER - Extended Error Report		SELINT 2
AT+CEER	<p>Execution command returns one or more lines of information text <report> offering the TA user an extended error report, in the format:</p> <p>+CEER: <report></p> <p>This report regards some error condition that may occur:</p> <ul style="list-style-type: none"> the failure in the last unsuccessful call setup (originating or answering) the last call release <p>Note: if none of the previous conditions has occurred since power up then “Normal, unspecified” condition is reported</p>	
AT+CEER=?	Test command returns OK result code.	
Reference	3GPP TS 27.007, GSM 04.08	

5.1.4.2.6. Cellular Result Codes - +CRC

+CRC - Cellular Result Codes		SELINT 2
AT+CRC= [<mode>]	<p>Set command controls whether or not the extended format of incoming call indication is used.</p> <p>Parameter: <mode> 0 - disables extended format reporting (factory default) 1 - enables extended format reporting:</p> <p>When enabled, an incoming call is indicated to the TE with unsolicited result code +CRING: <type></p>	



+CRC - Cellular Result Codes		SELINT 2
	<p>instead of the normal RING.</p> <p>where</p> <p><type> - call type:</p> <p>ASYNC - asynchronous transparent data</p> <p>SYNC - synchronous transparent data</p> <p>REL ASYNC - asynchronous non-transparent data</p> <p>REL SYNC - synchronous non-transparent data</p> <p>VOICE - normal voice (TS 11)</p>	
AT+CRC?	Read command returns current value of the parameter <mode> .	
AT+CRC=?	Test command returns supported values of the parameter <mode> .	
Reference	3GPP TS 27.007	

5.1.4.2.7. Voice Hung Up Control - +CVHU

+CVHU - Voice Hang Up Control		SELINT 2
AT+CVHU= [<mode>]	<p>Set command selects whether ATH or "drop DTR" shall cause a voice connection to be disconnected or not.</p> <p>Parameter:</p> <p><mode></p> <p>0 - "Drop DTR" ignored but OK result code given. ATH disconnects.</p> <p>1 - "Drop DTR" and ATH ignored but OK result code given.</p> <p>2 - "Drop DTR" behavior according to &D setting. ATH disconnects (factory default).</p>	
AT+CVHU?	<p>Read command reports the current value of the <mode> parameter, in the format:</p> <p>+CVHU: <mode></p>	
AT+CVHU=?	Test command reports the range of supported values for parameter <mode>	

5.1.4.2.8. Select type of address - +CSTA

+CSTA - Select Type of Address		SELINT 2
AT+CSTA= [<type>]	<p>Set command selects the type of number for further dialing commands (D) according to GSM/UMTS specifications.</p> <p>Parameter:</p> <p><type>: type of address octet in integer format (refer TS 24.008, subclause 10.5.4.7); default 145 when dialing string includes international access code character "+", otherwise 129</p>	
AT+CSTA?	<p>Read command returns the current value of <type> in the format:</p> <p>+CSTA: <type></p>	



+CSTA – Select Type of Address		SELINT 2
AT+CSTA=?	Test command reports the range for the parameter <type>	

5.1.4.3. Network Service Handling

5.1.4.3.1. Subscriber Number - +CNUM

+CNUM - Subscriber Number		SELINT 2
AT+CNUM	<p>Execution command returns the MSISDN (if the phone number of the device has been stored in the SIM card) in the format:</p> <p>+CNUM: <alpha>,<number>,<type>[<CR><LF> +CNUM: <alpha>,<number>,<type>[...]]</p> <p>where: <alpha> - alphanumeric string associated to <number>; used character set should be the one selected with +CSCS. <number> - string containing the phone number in the format <type> <type> - type of number: 129 - national numbering scheme 145 - international numbering scheme (contains the character "+").</p>	
AT+CNUM=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	

5.1.4.3.2. Read Operator Names - +COPN

+COPN - Read Operator Names		SELINT 2
AT+COPN	<p>Execution command returns the list of operator names from the ME in the format:</p> <p>+COPN: <numeric1>,<alpha1>[<CR><LF> +COPN: <numeric2>,<alpha2>[...]]</p> <p>where: <numericn> - string type, operator in numeric format (see +COPS) <alphan> - string type, operator in long alphanumeric format (see +COPS)</p> <p>Note: each operator code <numericn> that has an alphanumeric equivalent <alphan> in the ME memory is returned</p>	
AT+COPN=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	



5.1.4.3.3. Network Registration Report - +CREG

+CREG - Network Registration Report		SELINT 2
AT+CREG= [<mode>]	<p>Set command enables/disables network registration reports depending on the parameter <mode>.</p> <p>Parameter: <mode> 0 - disable network registration unsolicited result code (factory default) 1 - enable network registration unsolicited result code 2 - enable network registration unsolicited result code with network Cell identification data</p> <p>If <mode>=1, network registration result code reports:</p> <p>+CREG: <stat></p> <p>where <stat> 0 - not registered, ME is not currently searching a new operator to register to 1 - registered, home network 2 - not registered, but ME is currently searching a new operator to register to 3 - registration denied 4 - unknown 5 - registered, roaming</p> <p>If <mode>=2, network registration result code reports:</p> <p>+CREG: <stat>[,<Lac>,<Ci>[,<AcT>]]</p> <p>where: <Lac> - Local Area Code for the currently registered on cell <Ci> - Cell Id for the currently registered on cell <AcT>: access technology of the registered network: 0 GSM 2 UTRAN</p> <p>Note: <Lac>, and<Ci> and <AcT> are reported only if <mode>=2 and the mobile is registered on some network cell.</p>	
AT+CREG?	<p>Read command reports the <mode> and <stat> parameter values in the format:</p> <p>+CREG: <mode>,<stat>[,<Lac>,<Ci>[,<AcT>]]</p> <p>Note: <Lac>, and<Ci> and <AcT> are reported only if <mode>=2 and the mobile is registered on some network cell.</p>	



+CREG - Network Registration Report		SELINT 2
AT+CREG=?	Test command returns the range of supported <mode>	
Example	<p>AT OK at+creg? +CREG: 0,2</p> <p>OK (the MODULE is in network searching state) at+creg? +CREG: 0,2</p> <p>OK at+creg? +CREG: 0,2</p> <p>OK at+creg? +CREG: 0,2</p> <p>OK at+creg? +CREG: 0,1</p> <p>OK (the MODULE is registered) at+creg? +CREG: 0,1</p> <p>OK</p>	
Reference	3GPP TS 27.007	

5.1.4.3.4. Operator Selection - +COPS

+COPS - Operator Selection		SELINT 2
AT+COPS= [<mode> [,<format> [,<oper>[,< Act>]]]]	<p>Set command forces an attempt to select and register the GSM network operator. <mode> parameter defines whether the operator selection is done automatically or it is forced by this command to operator <oper>.</p> <p>The operator <oper> shall be given in format <format>.</p> <p>Parameters:</p> <p><mode></p> <ul style="list-style-type: none"> 0 - automatic choice (the parameter <oper> will be ignored) (factory default) 1 - manual choice (<oper> field shall be present) 2 - deregister from GSM network; the MODULE is kept unregistered until a +COPS with <mode>=0, 1 or 4 is issued 3 - set only <format> parameter (the parameter <oper> will be ignored) 4 - manual/automatic (<oper> field shall be present); if manual selection fails, automatic mode (<mode>=0) is entered <p><format></p> <ul style="list-style-type: none"> 0 - alphanumeric long form (max length 16 digits) 2 - Numeric 5 or 6 digits [country code (3) + network code (2 or 3)] 	



+COPS - Operator Selection	SELINT 2
	<p><oper>: network operator in format defined by <format> parameter.</p> <p><AcT> access technology selected:</p> <p>0 GSM</p> <p>2 UTRAN</p> <p>Note: <mode> parameter setting is stored in NVM and available at next reboot, if it is not 3 (i.e.: set only <format> parameter).</p> <p>Note: if <mode>=1 or 4, the selected network is stored in NVM too and is available at next reboot (this will happen even with a new SIM inserted)</p> <p>Note: <format> parameter setting is never stored in NVM</p>
AT+COPS?	<p>Read command returns current value of <mode>,<format>,<oper> and <AcT> in format <format>; if no operator is selected, <format>, <oper> and <AcT> are omitted</p> <p>+COPS: <mode>[, <format>, <oper>,< AcT>]</p>
AT+COPS=?	<p>Test command returns a list of quadruplets, each representing an operator present in the network.</p> <p>The quadruplets in the list are separated by commas:</p> <p>+COPS: [list of supported (<stat> ,<oper (in <format>=0)>,, <oper (in <format>=2)>,< AcT>)s][,((list of supported <mode>s), (list of supported<format>s)]</p> <p>where</p> <p><stat> - operator availability</p> <p>0 - unknown</p> <p>1 - available</p> <p>2 - current</p> <p>3 - forbidden</p> <p><AcT> access technology selected:</p> <p>0 GSM</p> <p>2 UTRAN</p> <p>Note: since with this command a network scan is done, this command may require some seconds before the output is given.</p>
Reference	3GPP TS 27.007



5.1.4.3.5. Select Wireless Network - +WS46

+WS46 - PCCA STD-101 Select Wireless Network		SELINT 2
AT+WS46=[<n>]	Set command selects the cellular network (Wireless Data Service, WDS) to operate with the TA (WDS-Side Stack Selection). Parameter: <n> - integer type, it is the WDS-Side Stack to be used by the TA . 12 - GSM digital cellular 22 UTRAN only 25 3GPP Systems (both GERAN and UTRAN) (factory default) NOTE: <n> parameter setting is stored in NVM and available at next reboot.	
AT+WS46?	Read command reports the currently selected cellular network, in the format: + WS46: <n>	
AT+WS46=?	Test command reports the range for the parameter <n>.	
Reference	3GPP TS 27.007	

5.1.4.3.6. Facility Lock/Unlock - +CLCK

+CLCK - Facility Lock/Unlock		SELINT 2
AT+CLCK= <fac>,<mode> [,<passwd> [,<class>]]	Execution command is used to lock or unlock a ME on a network facility. Parameters: <fac> - facility "PS" - PH-SIM (lock Phone to SIM card) MT asks password when other than current SIM card inserted; MT may remember certain amount of previously used cards thus not requiring password when they are inserted "PF" - lock Phone to the very First inserted SIM card (MT asks password when other than the first SIM card is inserted) "SC" - SIM (PIN request) (device asks SIM password at power-up and when this lock command issued) "AO" - BAOC (Barr All Outgoing Calls) "OI" - BOIC (Barr Outgoing International Calls) "OX" - BOIC-exHC (Barr Outgoing International Calls except to Home Country) "AI" - BAIC (Barr All Incoming Calls) "IR" - BIC-Roam (Barr Incoming Calls when Roaming outside the home country) "AB" - All Barring services (applicable only for <mode>=0) "AG" - All outGoing barring services (applicable only for <mode>=0) (not yet supported) "AC" - All inComing barring services (applicable only for <mode>=0) "FD" - SIM fixed dialing memory feature (if PIN2 authentication has not been done during the current session, PIN2 is required as <passwd>) "PN" - network Personalisation "PU" - network subset Personalisation	



+CLCK - Facility Lock/Unlock		SELINT 2
	<p>"PP" - service Provider Personalization "PC" - Corporate Personalization "MC" – Multi Country Lock <mode> - defines the operation to be done on the facility 0 - unlock facility 1 - lock facility 2 - query status <passwd> - shall be the same as password specified for the facility from the DTE user interface or with command Change Password +CPWD <class> - sum of integers each representing a class of information (default is 7) 1 - voice (telephony) 2 - data (refers to all bearer services) 4 - fax (facsimile services) 8 - short message service 16 - data circuit sync 32 - data circuit async 64 - dedicated packet access 128 - dedicated PAD access</p> <p>Note: when <mode>=2 and command successful, it returns: +CLCK: <status>[,<class1>[<CR><LF>+CLCK: <status>,<class2>[...]]</p> <p>where <status> - the current status of the facility 0 - not active 1 - active <classn> - class of information of the facility</p>	
AT+CLCK=?	Test command reports all the facilities supported by the device.	
Reference	3GPP TS 27.007	
Example	<p><i>Querying such a facility returns an output on three rows, the first for voice, the second for data, the third for fax:</i></p> <p>AT+CLCK="AO",2 +CLCK: <status>,1 +CLCK: <status>,2 +CLCK: <status>,4</p>	



5.1.4.3.7. Change Facility Password - +CPWD

+CPWD - Change Facility Password		SELINT 2
AT+CPWD=<fac>,<oldpwd>,<newpwd>	<p>Execution command changes the password for the facility lock function defined by command Facility Lock +CLCK.</p> <p>Parameters:</p> <p><fac> - facility “SC” - SIM (PIN request) “AB” - All barring services “P2” - SIM PIN2 “PS” - SIM VO</p> <p><oldpwd> - string type, it shall be the same as password specified for the facility from the ME user interface or with command +CPWD.</p> <p><newpwd> - string type, it is the new password</p> <p>Note: parameter <oldpwd> is the old password while <newpwd> is the new one.</p>	
AT+CPWD=?	Test command returns a list of pairs (<fac> , <pwdlength>) which presents the available facilities and the maximum length of their password (<pwdlength>)	
Example	at+cpwd=? +CPWD: ("SC",8),("AB",4),("P2",8),("PS",8) OK	
Reference	3GPP TS 27.007	

5.1.4.3.8. Calling Line Identification Presentation - +CLIP

+CLIP - Calling Line Identification Presentation		SELINT 2
AT+CLIP=[<n>]	<p>Set command enables/disables the presentation of the CLI (Calling Line Identity) at the TE. This command refers to the GSM supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the CLI of the calling party when receiving a mobile terminated call.</p> <p>Parameters:</p> <p><n> 0 - disables CLI indication (factory default) 1 - enables CLI indication</p> <p>If enabled the device reports after each RING the response:</p> <p>+CLIP: <number>,<type>,"",128,<alpha>,<CLI_validity></p> <p>where:</p> <p><number> - string type phone number of format specified by <type></p>	



+CLIP - Calling Line Identification Presentation	SELINT 2
	<p><type> - type of address octet in integer format 128 - both the type of number and the numbering plan are unknown 129 - unknown type of number and ISDN/Telephony numbering plan 145 - international type of number and ISDN/Telephony numbering plan (contains the character "+")</p> <p><alpha> - string type; alphanumeric representation of <number> corresponding to the entry found in phonebook; used character set should be the one selected with command Select TE character set +CSCS.</p> <p><CLI_validity> 0 - CLI valid 1 - CLI has been withheld by the originator. 2 - CLI is not available due to interworking problems or limitation or originating network.</p> <p>Note: in the +CLIP: response they are currently not reported either the subaddress information (it's always " " after the 2nd comma) and the subaddress type information (it's always 128 after the 3rd comma)</p>
AT+CLIP?	<p>Read command returns the presentation status of the CLI in the format:</p> <p>+CLIP: <n>,<m> where: <n> 0 - CLI presentation disabled 1 - CLI presentation enabled <m> - status of the CLIP service on the GSM network 0 - CLIP not provisioned 1 - CLIP provisioned 2 - unknown (e.g. no network is present)</p> <p>Note: This command issues a status request to the network, hence it may take a few seconds to give the answer due to the time needed to exchange data with it.</p>
AT+CLIP=?	Test command returns the supported values of parameter <n>
Reference	3GPP TS 27.007
Note	The command changes only the report behaviour of the device, it does not change CLI supplementary service setting on the network.



5.1.4.3.9. Calling Line Identification Restriction - +CLIR

+CLIR - Calling Line Identification Restriction		SELINT 2
AT+CLIR=[<n>]	<p>Set command overrides the CLIR subscription when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite command. This command refers to CLIR-service (GSM 02.81) that allows a calling subscriber to enable or disable the presentation of the CLI to the called party when originating a call.</p> <p>Parameter: <n> - facility status on the Mobile 0 - CLIR facility according to CLIR service network status 1 - CLIR facility active (CLI not sent) 2 - CLIR facility not active (CLI sent)</p>	
AT+CLIR?	<p>Read command gives the default adjustment for all outgoing calls (<n>) and also triggers an interrogation of the provision status of the CLIR service (<m>), where <n> - facility status on the Mobile 0 - CLIR facility according to CLIR service network status 1 - CLIR facility active (CLI not sent) 2 - CLIR facility not active (CLI sent)</p> <p><m> - facility status on the Network 0 - CLIR service not provisioned 1 - CLIR service provisioned permanently 2 - unknown (e.g. no network present, etc.) 3 - CLI temporary mode presentation restricted 4 - CLI temporary mode presentation allowed</p>	
AT+CLIR=?	Test command reports the supported values of parameter <n>.	
Reference	3GPP TS 27.007	
Note	This command sets the default behaviour of the device in outgoing calls.	



5.1.4.3.10. Connected line identification presentation - +COLP

+COLP – Connected Line Identification Presentation		SELINT 2
AT+COLP=[<n>]	<p>This command refers to the GSM/UMTS supplementary service COLP (Connected Line Identification Presentation) that enables a calling subscriber to get the connected line identity (COL) of the called party after setting up a mobile originated call. The command enables or disables the presentation of the COL at the TE. It has no effect on the execution of the supplementary service COLR in the network.</p> <p>Parameters: <n> 0 - disables COL indication (factory default) 1 - enables COL indication</p> <p>When enabled (and called subscriber allows),</p> <p>+COLP: <number>,<type></p> <p>intermediate result code is returned from TA to TE before any +CR or ITU-T Recommendation V.250 responses, where</p> <p><number> - string type phone number of format specified by <type> <type> - type of address octet in integer format 129 - unknown type of number and ISDN/Telephony numbering plan 145 - international type of number and ISDN/Telephony numbering plan (contains the character "+")</p> <p>Note: if COL information is needed, it is recommended to set DIALMODE to 1 (see AT#DIALMODE command), in order to have network information available for display before returning to command mode.</p>	
AT+COLP?	<p>Read command gives the status of <n>, and also triggers an interrogation of the provision status of the COLP service according 3GPP TS 22.081 (given in <m>) in the format:</p> <p>+COLP: <n>,<m></p> <p>where: <n> 0 - COL presentation disabled 1 - COL presentation enabled</p> <p><m> - status of the COLP service on the GSM network 0 - COLP not provisioned</p>	



+COLP – Connected Line Identification Presentation		SELINT 2
	<p>1 - COLP provisioned 2 - unknown (e.g. no network is present)</p> <p>Note: This command issues a status request to the network, hence it may take a few seconds to give the answer due to the time needed to exchange data with it.</p>	
AT+COLP=?	Test command reports the range for the parameter <n>	

5.1.4.3.11. Connected line identification restriction status - +COLR

+COLR – Connected Line Identification Restriction status		SELINT 2
AT+COLR	<p>This command refers to the GSM/UMTS supplementary service COLR (Connected Line Identification Restriction) that enables a called subscriber to restrict the possibility of presentation of connected line identity (COL) to the calling party after receiving a mobile terminated call. The command displays the status of the COL presentation in the network. It has no effect on the execution of the supplementary service COLR in the network.</p> <p>Execution command triggers an interrogation of the activation status of the COLR service according 3GPP TS 22.081 (given in <m>):</p> <p>+COLR: <m></p> <p>where:</p> <p><m>: integer type (parameter shows the subscriber COLR service status in the network)</p> <ul style="list-style-type: none"> 0 COLR not provisioned 1 COLR provisioned 2 unknown (e.g. no network, etc.) <p>Activation, deactivation, registration and erasure of the supplementary service COLR are not applicable.</p>	
AT+COLR=?	Test command tests for command existence	



5.1.4.3.12. Call Forwarding Number And Conditions - +CCFC

+CCFC - Call Forwarding Number And Condition	SELINT 2
<p>AT+CCFC= <reason>, <cmd>[,<number>[,< type>[,<class> [,,<time>]]]</p>	<p>Execution command controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported.</p> <p>Parameters:</p> <p><reason></p> <ul style="list-style-type: none"> 0 - unconditional 1 - mobile busy 2 - no reply 3 - not reachable 4 - all calls (not with query command) 5 - all conditional calls (not with query command) <p><cmd></p> <ul style="list-style-type: none"> 0 - disable 1 - enable 2 - query status 3 - registration 4 - erasure <p><number> - string type phone number of forwarding address in format specified by <type> parameter</p> <p><type> - type of address octet in integer format :</p> <ul style="list-style-type: none"> 129 - national numbering scheme 145 - international numbering scheme (contains the character "+") <p><class> - sum of integers each representing a class of information which the command refers to; default 7 (voice + data + fax)</p> <ul style="list-style-type: none"> 1 - voice (telephony) 2 - data 4 - fax (facsimile services) 8 - short message service 16 - data circuit sync 32 - data circuit async 64 - dedicated packet access 128 - dedicated PAD access <p><time> - time in <i>seconds</i> to wait before call is forwarded; it is valid only when <reason> "no reply" is enabled (<cmd>=1) or queried (<cmd>=2)</p> <p>1..30 - automatically rounded to a multiple of 5 seconds (default is 20)</p> <p>Note: when <cmd>=2 and command successful, it returns:</p> <p>+CCFC: <status>,<class1>[,<number>,<type>[,,<time>]] [<CR><LF> +CCFC: <status>,<class2>[,<number>,<type>[,,<time>]] [...]]</p>



+CCFC - Call Forwarding Number And Condition		SELINT 2
	<p>where:</p> <p><status> - current status of the network service 0 - not active 1 - active</p> <p><class> - same as <class></p> <p><time> - it is returned only when <reason>=2 (“no reply”) and <cmd>=2.</p> <p>The other parameters are as seen before.</p>	
AT+CCFC=?	Test command reports supported values for the parameter <reason>.	
Reference	3GPP TS 27.007	
Note	When querying the status of a network service (<cmd>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class>.	

5.1.4.3.13. Call Waiting - +CCWA

+CCWA - Call Waiting		SELINT 2
AT+CCWA= [<n>[,<cmd> [,<class>]]]	<p>Set command allows the control of the call waiting supplementary service. Activation, deactivation, and status query are supported.</p> <p>Parameters:</p> <p><n> - enables/disables the presentation of an unsolicited result code: 0 - disable 1 - enable</p> <p><cmd> - enables/disables or queries the service at network level: 0 - disable 1 - enable 2 - query status</p> <p><class> - is a sum of integers each representing a class of information which the command refers to; default is 7 (voice + data + fax) 1 - voice (telephony) 2 - data 4 - fax (facsimile services) 8 - short message service 16 - data circuit sync 32 - data circuit async 64 - dedicated packet access 128 - dedicated PAD access</p> <p>Note: the response to the query command is in the format:</p> <p>+CCWA: <status>,<class1>[<CR><LF> +CCWA: <status>,<class2>[...]]</p>	



+CCWA - Call Waiting	SELINT 2
	<p>where <status> represents the status of the service: 0 - inactive 1 - active <classn> - same as <class></p> <p>Note: the unsolicited result code enabled by parameter <n> is in the format::</p> <p>+CCWA: <number>,<type>,<class>,[<alpha>][,<cli_validity>] where: <number> - string type phone number of calling address in format specified by <type> <type> - type of address in integer format <class> - see before <alpha> - string type; alphanumeric representation of <number> corresponding to the entry found in phonebook; used character set should be the one selected with +CSCS. <cli_validity> 0 - CLI valid 1 - CLI has been withheld by the originator 2 - CLI is not available due to interworking problems or limitations of originating network</p> <p>Note: if parameter <cmd> is omitted then network is not interrogated.</p> <p>Note: in the query command the class parameter must not be issued.</p> <p>Note: the difference between call waiting report disabling (AT+CCWA = 0,1,7) and call waiting service disabling (AT+CCWA = 0,0,7) is that in the first case the call waiting indication is sent to the device by network but this last one does not report it to the DTE; instead in the second case the call waiting indication is not generated by the network. Hence the device results busy to the third party in the 2nd case while in the 1st case a ringing indication is sent to the third party.</p> <p>Note: The command AT+CCWA=1,0 has no effect a non sense and must not be issued..</p>
AT+CCWA?	Read command reports the current value of the parameter <n> .
AT+CCWA=?	Test command reports the supported values for the parameter <n> .
Reference	3GPP TS 27.007



5.1.4.3.14. Call Holding Services - +CHLD

+CHLD - Call Holding Services		SELINT 2
AT+CHLD=[<n>]	<p>Execution command controls the network call hold service. With this service it is possible to disconnect temporarily a call and keep it suspended while it is retained by the network, contemporary it is possible to connect another party or make a multiparty connection.</p> <p>Parameter: <n></p> <ul style="list-style-type: none"> 0 - releases all held calls, or sets the UDUB (User Determined User Busy) indication for a waiting call. (only from version D) 1 - releases all active calls (if any exist), and accepts the other (held or waiting) call 1X - releases a specific active call X 2 - places all active calls (if any exist) on hold and accepts the other (held or waiting) call. 2X - places all active calls on hold except call X with which communication shall be supported (only from version D). 3 - adds an held call to the conversation 4 - connects the two calls and disconnects the subscriber from both calls (Explicit Call Transfer (ECT)) <p>Note: "X" is the numbering (starting with 1) of the call given by the sequence of setting up or receiving the calls (active, held or waiting) as seen by the served subscriber. Calls hold their number until they are released. New calls take the lowest available number.</p> <p>Note: where both a held and a waiting call exist, the above procedures apply to the waiting call (i.e. not to the held call) in conflicting situation.</p>	
AT+CHLD=?	<p>Test command returns the list of supported <n>s.</p> <p>+CHLD: (0,1,1X,2,2X,3,4)</p>	
Reference	3GPP TS 27.007	
Note	ONLY for VOICE calls	



5.1.4.3.15. Call deflection - +CTFR

+CTFR – Call deflection		SELINT 2
AT+CTFR=<number>[,<type>]	<p>Set command is used to request a service that causes an incoming alerting call to be forwarded to a specified number. This is based on the GSM/UMTS supplementary service CD (Call Deflection; refer 3GPP TS 22.072).</p> <p>Parameters:</p> <p><number>: string type phone number of format specified by <type></p> <p><type>: type of address octet in integer format; default 145 when dialing string includes international access code character "+", otherwise 129</p> <p>Note: Call Deflection is only applicable to an incoming voice call</p>	
AT+CTFR=?	Test command tests for command existence	

5.1.4.3.16. Unstructured Supplementary Service Data - +CUSD

+CUSD - Unstructured Supplementary Service Data		SELINT 2
AT+CUSD=[<n>[,<str>[,<dcs>]]]	<p>Set command allows control of the Unstructured Supplementary Service Data (USSD [GSM 02.90]).</p> <p>Parameters:</p> <p><n> - is used to disable/enable the presentation of an unsolicited result code.</p> <ul style="list-style-type: none"> 0 - disable the result code presentation in the DTA 1 - enable the result code presentation in the DTA 2 - cancel an ongoing USSD session (not applicable to read command response) <p><str> - USSD-string (when <str> parameter is not given, network is not interrogated)</p> <ul style="list-style-type: none"> - If <dcs> indicates that GSM338 default alphabet is used ME/TA converts GSM alphabet into current TE character set (see +CSCS). - If <dcs> indicates that 8-bit data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number; e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65). <p><dcs> - GSM 3.38 Cell Broadcast Data Coding Scheme in integer format (default is 0).</p> <p>Note: the unsolicited result code enabled by parameter <n> is in the format:</p> <p>+CUSD: <m>[,<str>,<dcs>] to the TE</p>	



+CUSD - Unstructured Supplementary Service Data		SELINT 2
	<p>where:</p> <p><m>:</p> <ul style="list-style-type: none"> 0 - no further user action required (network initiated USSD-Notify, or no further information needed after mobile initiated operation). 1 - further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation) 2 - USSD terminated by the network 3 - other local client has responded 4 - operation not supported 5 - network time out 	
AT+CUSD?	Read command reports the current value of the parameter <n>	
AT+CUSD=?	Test command reports the supported values for the parameter <n>	
Reference	3GPP TS 27.007	
Note	Only mobile initiated operations are supported	

5.1.4.3.17. Advice Of Charge - +CAOC

+CAOC - Advice Of Charge		SELINT 2
AT+CAOC= <mode>	<p>Set command refers to the Advice of Charge supplementary services that enable subscriber to get information about the cost of calls; the command also includes the possibility to enable an unsolicited event reporting of the Current Call Meter (CCM) information.</p> <p>Parameter:</p> <p><mode></p> <ul style="list-style-type: none"> 0 - query CCM value 1 - disables unsolicited CCM reporting 2 - enables unsolicited CCM reporting <p>Note: the unsolicited result code enabled by parameter <mode> is in the format:</p> <p>+CCCM: <ccm></p> <p>where:</p> <p><ccm> - current call meter in home units, string type: three bytes of the CCM value in hexadecimal format (e.g. "00001E" indicates decimal value 30)</p> <p>Note: the unsolicited result code +CCCM is sent when the CCM value changes, but not more than every 10 seconds.</p>	
AT+CAOC?	<p>Read command reports the value of parameter <mode> in the format:</p> <p>+CAOC: <mode></p>	



+CAOC - Advice Of Charge		SELINT 2
AT+CAOC=?	Test command reports the supported values for <mode> parameter.	
Reference	3GPP TS 27.007	
Note	+CAOC command returns an estimate of the cost of the current call only, produced by the MS and based on the information provided by either AoCI or AOCC supplementary services; it is not stored in the SIM.	

5.1.4.3.18. List Current Calls - +CLCC

+CLCC - List Current Calls		SELINT 2
AT+CLCC	<p>Execution command returns the list of current calls and their characteristics in the format:</p> <p>[+CLCC:<id1>,<dir>,<stat>,<mode>,<mpty>,<number>,<type> ,<alpha>[<CR><LF>+CLCC:<id2>,<dir>,<stat>,<mode>,<mpty>,<number>,<type>,<alpha>[...]]]</p> <p>where:</p> <p><idn> - call identification number <dir> - call direction 0 - mobile originated call 1 - mobile terminated call <stat> - state of the call 0 - active 1 - held 2 - dialing (MO call) 3 - alerting (MO call) 4 - incoming (MT call) 5 - waiting (MT call) <mode> - call type 0 - voice 1 - data 9 - unknown <mpty> - multiparty call flag 0 - call is not one of multiparty (conference) call parties 1 - call is one of multiparty (conference) call parties <number> - string type phone number in format specified by <type> <type> - type of phone number octet in integer format 129 - national numbering scheme 145 - international numbering scheme (contains the character "+") <alpha> - string type; alphanumeric representation of <number> corresponding to the entry found in phonebook; used character set should be the one selected with +CSCS.</p> <p>Note: If no call is active then only OK message is sent. This command is useful in</p>	



+CLCC - List Current Calls		SELINT 2
	conjunction with command +CHLD to know the various call status for call holding.	
AT+CLCC=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	

5.1.4.3.19. SS Notification - +CSSN

+CSSN - SS Notification		SELINT 2
AT+CSSN=[<n>[,<m>]]	<p>It refers to supplementary service related network initiated notifications. Set command enables/disables the presentation of notification result codes from TA to TE.</p> <p>Parameters:</p> <p><n> - sets the +CSSI result code presentation status 0 - disable 1 - enable</p> <p><m> - sets the +CSSU result code presentation status 0 - disable 1 - enable</p> <p>When <n>=1 and a supplementary service notification is received after a mobile originated call setup, an unsolicited code:</p> <p>+CSSI: <code1> is sent to TE before any other MO call setup result codes, where: <code1>: 0 - unconditional call forwarding is active 1 - some of the conditional call forwardings are active 2 - call has been forwarded 3 - call is waiting 5 - outgoing calls are barred 6 - incoming calls are barred</p> <p>When <m>=1 and a supplementary service notification is received during a mobile terminated call setup or during a call, an unsolicited result code:</p> <p>+CSSU: <code2> is sent to TE, where: <code2>: 0 - this is a forwarded call (MT call setup) 2 - call has been put on hold (during a voice call) 3 - call has been retrieved (during a voice call).</p>	
AT+CSSN?	Read command reports the current value of the parameters.	
AT+CSSN=?	Test command reports the supported range of values for parameters <n>, <m>.	
Reference	3GPP TS 27.007	



5.1.4.3.20. Closed User Group - +CCUG

+CCUG - Closed User Group Supplementary Service Control		SELINT 2
AT+CCUG= [<n>,<index> [,<info>]]]	<p>Set command allows control of the Closed User Group supplementary service [GSM 02.85].</p> <p>Parameters:</p> <p><n></p> <p>0 - disable CUG temporary mode (factory default).</p> <p>1 - enable CUG temporary mode: it enables to control the CUG information on the air interface as a default adjustment for all following outgoing calls.</p> <p><index></p> <p>0..9 - CUG index</p> <p>10 - no index (preferential CUG taken from subscriber data) (default)</p> <p><info></p> <p>0 - no information (default)</p> <p>1 - suppress Outgoing Access (OA)</p> <p>2 - suppress preferential CUG</p> <p>3 - suppress OA and preferential CUG</p>	
AT+CCUG?	Read command reports the current value of the parameters	
AT+CCUG=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	

5.1.4.3.21. Preferred Operator List - +CPOL

+CPOL - Preferred Operator List		SELINT 2
AT+CPOL= [<index>][,<format> [,<oper>[,<GSM_AcT> >, <GSM_Compact_Ac T>,<UTRAN_AcT>]]]	<p>Execution command writes an entry in the SIM list of preferred operators.</p> <p>Parameters:</p> <p><index> - integer type; the order number of operator in the SIM preferred operator list</p> <p>1..n</p> <p><format></p> <p>2 - numeric <oper></p> <p><oper> - string type</p> <p><GSM_AcT> - GSM access technology</p> <p>0 – access technology not selected</p> <p>1 – access technology selected</p> <p><GSM_Compact_AcT> - GSM compact access technology</p> <p>0 – access technology not selected</p> <p>1 – access technology selected</p> <p><UTRAN_AcT> - UTRAN access technology</p> <p>0 – access technology not selected</p> <p>1 – access technology selected</p>	



+CPOL - Preferred Operator List		SELINT 2
	Note: if <index> is given but <oper> is left out, entry is deleted. If <oper> is given but <index> is left out, <oper> is put in the next free location. If only <format> is given, the format of the <oper> in the read command is changed.	
AT+CPOL?	Read command returns all used entries from the SIM list of preferred operators.	
AT+CPOL=?	Test command returns the whole <index> range supported by the SIM and the range for the parameter <format>	
Reference	3GPP TS 27.007	

5.1.4.3.22. Selection of preferred PLMN list - +CPLS

+CPLS – Selection of preferred PLMN list		SELINT 2
AT+CPLS=<list>	<p>The execution command is used to select a list of preferred PLMNs in the SIM/USIM.</p> <p>Parameters: <list>:</p> <ul style="list-style-type: none"> 0 - User controlled PLMN selector with Access Technology EFPLMNwAcT, if not found in the SIM/UICC then PLMN preferred list EFPLMNsel (this file is only available in SIM card or GSM application selected in UICC) 1 - Operator controlled PLMN selector with Access Technology EFOPLMNwAcT 2 - HPLMN selector with Access Technology EFHPLMNwAcT <p>Note: the value set by command is directly stored in NVM and doesn't depend on the specific CMUX instance.</p>	
AT+CPLS?	Read command returns the selected PLMN selector <list> from the SIM/USIM.	
AT+CPLS=?	Test command returns the whole index range supported <list> s by the SIM/USIM.	



5.1.4.4. Mobile Equipment Control

5.1.4.4.1. Phone Activity Status - +CPAS

+CPAS - Phone Activity Status		SELINT 2
AT+CPAS	<p>Execution command reports the device status in the form:</p> <p>+CPAS: <pas></p> <p>Where:</p> <p><pas> - phone activity status</p> <ul style="list-style-type: none"> 0 - ready (device allows commands from TA/TE) 1 - unavailable (device does not allow commands from TA/TE) 2 - unknown (device is not guaranteed to respond to instructions) 3 - ringing (device is ready for commands from TA/TE, but the ringer is active) 4 - call in progress (device is ready for commands from TA/TE, but a call is in progress) 	
AT+CPAS=?	<p>Test command reports the supported range of values for <pas>.</p> <p>Note: although +CPAS is an execution command, ETSI 07.07 requires the Test command to be defined.</p>	
Example	<p>ATD03282131321; OK AT+CPAS +CPAS: 4 <i>the called phone has answered to your call</i></p> <p>OK ATH OK</p>	
Reference	3GPP TS 27.007	



5.1.4.4.2. Set Phone functionality - +CFUN

+CFUN - Set Phone Functionality	SELINT 2
AT+CFUN= [<fun>[,<rst>]]	<p>Set command selects the level of functionality in the ME.</p> <p>Parameters:</p> <p><fun> - is the power saving function mode</p> <p>0 - minimum functionality, NON-CYCLIC SLEEP mode: in this mode, the AT interface is not accessible. Consequently, once you have set <fun> level 0, do not send further characters. Otherwise these characters remain in the input buffer and may delay the output of an unsolicited result code. The first wake-up event, or rising RTS line, stops power saving and takes the ME back to full functionality level <fun>=1.</p> <p>1 - mobile full functionality with power saving disabled (factory default)</p> <p>4 - disable both TX and RX</p> <p>5 - mobile full functionality with power saving enabled</p> <p>7 - CYCLIC SLEEP mode: in this mode, the serial interface is periodically enabled while CTS is active. If characters are recognized on the serial interface, the ME stays active for 2 seconds after the last character was sent or received. ME exits SLEEP mode only, if AT+CFUN=1 is entered</p> <p>9 - just as 0 but with different wake-up events (see SW User Guide)</p> <p><rst> - reset flag</p> <p>0 - do not reset the ME before setting it to <fun> functionality level</p> <p>1 - reset the device. The device is fully functional after the reset. This value is available only for <fun> = 1</p> <p>Note: issuing AT+CFUN=4[,0] actually causes the module to perform either a network deregistration and a SIM deactivation.</p> <p>Note: if power saving enabled, it reduces the power consumption during the idle time, thus allowing a longer standby time with a given battery capacity.</p> <p>Note: to place the module in power saving mode, set the <fun> parameter at value = 5 and the line DTR (RS232) must be set to OFF. Once in power saving, the CTS line switch to the OFF status to signal that the module is really in power saving condition.</p> <p>During the power saving condition, before sending any AT command on the serial line, the DTR must be set to ON (0V) to exit from power saving and it must be waited for the CTS (RS232) line to go in ON status.</p> <p>Until the DTR line is ON, the module will not return back in the power saving condition</p> <p>Note: the power saving function does not affect the network behaviour of the module, even during the power save condition the module remains registered on the network and reachable for incoming calls or SMS. If a call incomes during the power save, then the module will wake up and proceed normally with the unsolicited incoming call code</p>



+CFUN - Set Phone Functionality		SELINT 2
	<p>Note: when the module detects USB port is connected, then the power saving mode is not allowed</p> <p>Note: in CYCLIC SLEEP mode (AT+CFUN=7) CTS line toggles slowly, the toggle delay is about 2 seconds</p> <p>Note: in CYCLIC SLEEP mode (AT+CFUN=7) during incoming voice call the CTS line continues to toggle</p> <p>Note: if AT#ENS=1 then AT+CFUN=0 has the same functionality of AT+CFUN=4</p>	
AT+CFUN?	Read command reports the current setting of <fun> .	
AT+CFUN=?	Test command returns the list of supported values for <fun> and <rst> .	
Reference	3GPP TS 27.007	

5.1.4.4.3. Enter PIN - +CPIN

+CPIN - Enter PIN		SELINT 2
AT+CPIN=<pin>[,<newpin>]	<p>Set command sends to the device a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.).</p> <p>If the PIN required is SIM PUK or SIM PUK2, the <newpin> is required. This second pin, <newpin> will replace the old pin in the SIM.</p> <p>The command may be used to change the SIM PIN by sending it with both parameters <pin> and <newpin> when PIN request is pending; if no PIN request is pending the command will return an error code and to change the PIN the command +CPWD must be used instead.</p> <p>Parameters: <pin> - string type value <newpin> - string type value.</p> <p>To check the status of the PIN request use the command AT+CPIN?</p> <p>Note: If all parameters are omitted then the behaviour of Set command is the same as Read command.</p>	
AT+CPIN?	<p>Read command reports the PIN/PUK/PUK2 request status of the device in the form: +CPIN: <code></p> <p>where:</p> <p><code> - PIN/PUK/PUK2 request status code</p> <p>READY - ME is not pending for any password</p> <p>SIM PIN - ME is waiting SIM PIN to be given</p> <p>SIM PUK - ME is waiting SIM PUK to be given</p> <p>PH-SIM PIN - ME is waiting phone-to-SIM card password to be given</p> <p>PH-FSIM PIN - ME is waiting phone-to-very first SIM card password to be given</p> <p>PH-FSIM PUK - ME is waiting phone-to-very first SIM card unblocking password to be given</p> <p>SIM PIN2 - ME is waiting SIM PIN2 to be given; this <code> is returned only</p>	



+CPIN - Enter PIN	SELINT 2
	<p>when the last executed command resulted in PIN2 authentication failure (i.e. +CME ERROR: 17)</p> <p>SIM PUK2 - ME is waiting SIM PUK2 to be given; this <code> is returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18)</p> <p>PH-NET PIN - ME is waiting network personalization password to be given</p> <p>PH-NET PUK - ME is waiting network personalization unblocking password to be given</p> <p>PH-NETSUB PIN - ME is waiting network subset personalization password to be given</p> <p>PH-NETSUB PUK - ME is waiting network subset personalization unblocking password to be given</p> <p>PH-SP PIN - ME is waiting service provider personalization password to be given</p> <p>PH-SP PUK - ME is waiting service provider personalization unblocking password to be given</p> <p>PH-CORP PIN - ME is waiting corporate personalization password to be given</p> <p>PH-CORP PUK - ME is waiting corporate personalization unblocking password to be given</p> <p>Note: Pin pending status at startup depends on PIN facility setting, to change or query the default power up setting use the command AT+CLCK=SC,<mode>,<pin></p>
AT+CPIN=?	Test command returns OK result code.
Example	<pre>AT+CMEE=1 OK AT+CPIN? +CME ERROR: 10 error: you have to insert the SIM AT+CPIN? +CPIN: READY you inserted the SIM and device is not waiting for PIN to be given OK</pre>
Reference	3GPP TS 27.007



5.1.4.4. Signal Quality - +CSQ

+CSQ - Signal Quality	SELINT 2
AT+CSQ	<p>Execution command reports received signal quality indicators in the form:</p> <p>+CSQ: <rssi>,<ber> where <rssi> - received signal strength indication 0 - (-113) dBm or less 1 - (-111) dBm 2..30 - (-109)dBm..(-53)dBm / 2 dBm per step 31 - (-51)dBm or greater 99 - not known or not detectable <ber> - bit error rate (in percent) 0 - less than 0.2% 1 - 0.2% to 0.4% 2 - 0.4% to 0.8% 3 - 0.8% to 1.6% 4 - 1.6% to 3.2% 5 - 3.2% to 6.4% 6 - 6.4% to 12.8% 7 - more than 12.8% 99 - not known or not detectable</p> <p>Note: this command should be used instead of the %Q and %L commands, since GSM relevant parameters are the radio link ones and no line is present, hence %Q and %L have no meaning.</p> <p>Note: in GSM, the received signal strength indication is the average of the received signal level measurement samples in dBm, taken on a channel within the reporting period of length one SACCH multi frame, and is mapped as above. For UMTS, the current radio signal strength indicates CPICH RSCP in levels. According to specification 3GPP TS25.133 the level range is from 0 to 91, with</p> <p>0 less than (-115) dBm 1 (-115) dBm...(-114) dBm . . . 91 (-25) dBm or greater 99 - not known or not detectable</p> <p>Values between -115dbm and -120dbm will all be represented by level 0 To be compliant with 3GPP TS27.007 specification, the above 0...91 levels are mapped to range 0...31:</p> <p>3GPP TS25.133 Level Scaled (displayed) RSSI</p>



+CSQ - Signal Quality		SELINT 2
	<div>3 or less</div> <div>4...65</div> <div>66...91</div> <div>99</div>	<div>0</div> <div>Level /2 - 1</div> <div>31</div> <div>99</div>
AT+CSQ=?	Test command returns the supported range of values of the parameters <rss> and <ber>. Note: although +CSQ is an execution command without parameters, ETSI 07.07 requires the Test command to be defined.	
Reference	3GPP TS 27.007	

5.1.4.4.5. Indicator Control - +CIND

+CIND - Indicator Control		SELINT 2
AT+CIND= [<state> [,<state>[,...]]	Set command is used to control the registration state of ME indicators, in order to automatically send the +CIEV URC, whenever the value of the associated indicator changes. The supported indicators (<descr>) and their order appear from test command AT+CIND=? Parameter: <state> - registration state <ul style="list-style-type: none"> 0 - the indicator is deregistered; there's no unsolicited result code (+CIEV URC) automatically sent by the ME to the application, whenever the value of the associated indicator changes; the value can be directly queried with +CIND? 1 - the indicator is registered: an unsolicited result code (+CIEV URC) is automatically sent by the ME to the application, whenever the value of the associated indicator changes; it is still possible to query the value through +CIND? (default) Note: When the ME is switched on all of the indicators are in registered mode.	
AT+CIND?	Read command returns the current value of ME indicators, in the format: +CIND: <ind>[,<ind>[,...]] Note: the order of the values <ind>s is the same as that in which the associated indicators appear from test command AT+CIND=?	
AT+CIND=?	Test command returns pairs, where string value <descr> is a description (max. 16 chars) of the indicator and compound value is the supported values for the indicator, in the format: +CIND: ((<descr>, (list of supported <ind>s))[,(<descr>, (list of supported <ind>s))[,...]]) where: <descr> - indicator names as follows (along with their <ind> ranges) <ul style="list-style-type: none"> "battchg" - battery charge level <ind> - battery charge level indicator range 0..5	



+CIND - Indicator Control	SELINT 2
	<p>99 - not measurable</p> <p>“signal” - signal quality</p> <p><ind> - signal quality indicator range</p> <p>0..7</p> <p>99 - not measurable</p> <p>“service” - service availability</p> <p><ind> - service availability indicator range</p> <p>0 - not registered to any network</p> <p>1 - registered</p> <p>“sounder” - sounder activity</p> <p><ind> - sounder activity indicator range</p> <p>0 - there’s no any sound activity</p> <p>1 - there’s some sound activity</p> <p>“message” - message received</p> <p><ind> - message received indicator range</p> <p>0 - there is no unread short message at memory location “SM”</p> <p>1 - unread short message at memory location “SM”</p> <p>“call” - call in progress</p> <p><ind> - call in progress indicator range</p> <p>0 - there’s no calls in progress</p> <p>1 - at least a call has been established</p> <p>“roam” - roaming</p> <p><ind> - roaming indicator range</p> <p>0 - registered to home network or not registered</p> <p>1 - registered to other network</p> <p>“smsfull” - a short message memory storage in the MT has become full (1), or memory locations are available (0)</p> <p><ind> - short message memory storage indicator range</p> <p>0 - memory locations are available</p> <p>1 - a short message memory storage in the MT has become full.</p> <p>“rsi” - received signal (field) strength</p> <p><ind> - received signal strength level indicator range</p> <p>0 - signal strength \leq (-112) dBm</p> <p>1..4 - signal strength in (-97) dBm..(-66) dBm (15 dBm steps)</p> <p>5 - signal strength \geq (-51) dBm</p> <p>99 - not measurable</p>
Example	<p><i>Next command causes all the indicators to be registered</i></p> <p>AT+CIND=1,1,1,1,1,1,1,1</p> <p><i>Next command causes all the indicators to be de-registered</i></p> <p>AT+CIND=0,0,0,0,0,0,0,0</p> <p><i>Next command to query the current value of all indicators</i></p> <p>AT+CIND?</p> <p>CIND: 4,0,1,0,0,0,0,2</p> <p>OK</p>
Note	See command +CMER



+CIND - Indicator Control		SELINT 2
Reference	3GPP TS 27.007	

5.1.4.4.6. Mobile Equipment Event Reporting - +CMER

+CMER - Mobile Equipment Event Reporting		SELINT 2
AT+CMER= [<mode> [,<keyp> [,<disp> [,<ind> [,<bfr>]]]]	<p>Set command enables/disables sending of unsolicited result codes from TA to TE in the case of indicator state changes (n.b.: sending of URCs in the case of key pressings or display changes are currently not implemented).</p> <p>Parameters:</p> <p><mode> - controls the processing of unsolicited result codes</p> <p>0 - buffer +CIEV Unsolicited Result Codes.</p> <p>1 - discard +CIEV Unsolicited Result Codes when TA-TE link is reserved (e.g. on-line data mode); otherwise forward them directly to the TE.</p> <p>2 - buffer +CIEV Unsolicited Result Codes in the TA when TA-TE link is reserved (e.g. on-line data mode) and flush them to the TE after reservation; otherwise forward them directly to the TE.</p> <p>3 - forward +CIEV Unsolicited Result Codes directly to the TE; when TA is in on-line data mode each +CIEV URC is replaced with a Break (100 ms), and is stored in a buffer; once the ME goes into command mode (after +++ was entered), all URCs stored in the buffer will be output.</p> <p><keyp> - keypad event reporting</p> <p>0 - no keypad event reporting</p> <p><disp> - display event reporting</p> <p>0 - no display event reporting</p> <p><ind> - indicator event reporting</p> <p>0 - no indicator event reporting</p> <p>2 - indicator event reporting</p> <p><bfr> - TA buffer clearing</p> <p>0 - TA buffer of unsolicited result codes is cleared when <mode> 1..3 is entered</p> <p>1 - TA buffer of unsolicited result codes is flushed to the TE when <mode> 1...3 is entered (OK response shall be given before flushing the codes)</p> <p>Note: After AT+CMER has been switched on with e.g. AT+CMER=2,0,0,2 command (i.e. <bfr> is 0), URCs for all registered indicators will be issued only first time, if previous <mode> was 0, for backward compatibility. Values shown by the indicators will be current indicators values, not buffered ones. Subsequent AT+CMER commands with <mode> different from 0 and <bfr> equal to 0 will not flush the codes, even if <mode> was set again to 0 before. To flush the codes, <bfr> must be set to 1.</p> <p>Although it is possible to issue the command when SIM PIN is pending, it will answer ERROR if “message” or “smsfull” indicators are enabled in AT+CIND, because with pending PIN it is not possible to give a correct indication about SMS status. To issue the command when SIM PIN is pending you have to disable “message” and “smsfull” indicators in AT+CIND first.</p>	



+CMER - Mobile Equipment Event Reporting		SELINT 2
AT+CMER?	Read command returns the current setting of parameters, in the format: +CMER: <mode>,<keyp>,<disp>,<ind>,<bfr>	
AT+CMER=?	Test command returns the range of supported values for parameters <mode>,<keyp>,<disp>,<ind>,<bfr>, in the format: +CMER: (list of supported <mode>s),(list of supported <keyp>s), (list of supported <disp>s),(list of supported <ind>s),(list of supported <bfr>s)	
Reference	3GPP TS 27.007	

5.1.4.4.7. Select Phonebook Memory Storage - +CPBS

+CPBS - Select Phonebook Memory Storage		SELINT 2
AT+CPBS= <storage>[, <password>]	<p>Set command selects phonebook memory storage <storage>, which will be used by other phonebook commands.</p> <p>Parameter: <storage></p> <ul style="list-style-type: none"> "SM" - SIM phonebook "FD" - SIM fixed dialing-phonebook (FDN)(only phase 2/2+ SIM) "LD" - SIM last-dialing-phonebook (+CPBF is not applicable for this storage) "MC" - device missed (unanswered received) calls list (+CPBF is not applicable for this storage) "RC" - ME received calls list (+CPBF is not applicable for this storage). "MB" - mailbox numbers stored on SIM; it is possible to select this storage only if the mailbox service is provided by the SIM (see #MBN). "DC" - ME last-dialing-phonebook (+CPBF is not applicable for this storage). "ME" - ME phonebook "EN" - SIM emergency numbers phonebook (+CPBW and +CPBF not applicable for this storage). "ON" - SIM own numbers (MSISDNs) phonebook (+CPBF is not applicable for this storage). "SD" - SIM Service Dialling Numbers (SDN) phonebook (+CPBW is not applicable for this storage). <p><password>: string type value representing the PIN2-code required when selecting PIN2-code locked <storage> above "FD"</p> <p>Note: If "SM" is the currently selected phonebook, selecting "FD" phonebook with "AT+CPBS="FD"" command simply selects the FDN as the phonebook upon which all subsequent +CPBW, +CPBF and +CPBR commands act; the command does not deactivate "SM" phonebook, and does not activate FDN</p>	



+CPBS - Select Phonebook Memory Storage		SELINT 2
	Note: if <password> parameter is given, PIN2 will be verified, even if it is not required, i.e. it has already been inserted and verified during current session	
AT+CPBS?	Read command returns the actual values of the parameter <storage> , the number of occupied records <used> and the maximum index number <total> , in the format: +CPBS: <storage>,<used>,<total> Note: For <storage>="MC" : if there are more than one missed calls from the same number the read command will return only the last call	
AT+CPBS=?	Test command returns the supported range of values for the parameters <storage> .	
Reference	3GPP TS 27.007	

5.1.4.4.8. Read Phonebook Entries - +CPBR

+CPBR - Read Phonebook Entries		SELINT 2
AT+CPBR= <index1> [,<index2>]	<p>Execution command returns phonebook entries in location number range <index1>..<index2> from the current phonebook memory storage selected with +CPBS. If <index2> is omitted, only location <index1> is returned.</p> <p>Parameters: <index1> - integer type, value in the range of location numbers of the currently selected phonebook memory storage (see +CPBS). <index2> - integer type, value in the range of location numbers of the currently selected phonebook memory storage (see +CPBS).</p> <p>The response format is: [+CPBR: <index1>,<number>,<type>,<text>[,<hidden>][,<group>][,<adnumber>][,<adtype>][,<secondtext>][,<email>]] [<CR><LF> +CPBR: <index2>,<number>,<type>,<text>[,<hidden>][,<group>][,<adnumber>][,<adtype>][,<secondtext>][,<email>]] [...]]</p> <p>where: <indexn> - the location number of the phonebook entry <number> - string type phone number of format <type> <type> - type of phone number octet in integer format 129 - national numbering scheme 145 - international numbering scheme (contains the character "+") <text> - the alphanumeric text associated to the number; used character set should be the one selected with command +CSCS. <group>: string type field of maximum length <glength> indicating a group the entry may belong to; character set as specified by command</p>	



+CPBR - Read Phonebook Entries		SELINT 2
	3. if “MB” memory storage has been selected (see +CPBS) and the SIM supports the Extension6 service	
Note	Remember to select the PB storage with +CPBS command before issuing PB commands.	
Reference	3GPP TS 27.007	

5.1.4.4.9. Find Phonebook Entries - +CPBF

+CPBF - Find Phonebook Entries		SELINT 2
AT+CPBF= <findtext>	<p>Execution command returns phonebook entries (from the current phonebook memory storage selected with +CPBS) which alphanumeric field start with string <findtext>.</p> <p>Parameter: <findtext> - string type; used character set should be the one selected with command +CSCS.</p> <p>The command returns a report in the form:</p> <p>[+CPBF: <index1>,<number>,<type>,<text>[,<hidden>][,<group>][,<adnumber>][,<adtype>][,<secondtext>][,<email>]<CR><LF> +CPBF: <index2>,<number>,<type>,<text>[,<hidden>][,<group>][,<adnumber>][,<adtype>][,<secondtext>][,<email>][...]]]</p> <p>where: <indexn> - the location number of the phonebook entry <number> - string type phone number of format <type> <type> - type of phone number octet in integer format 129 - national numbering scheme 145 - international numbering scheme (contains the character "+") <text> - the alphanumeric text associated to the number; used character set should be the one selected with command +CSCS. <group>: string type field of maximum length <glength> indicating a group the entry may belong to; character set as specified by command Select TE Character Set +CSCS <adnumber>: additional number ; string type phone number of format <adtype> <adtype>: type of address octet in integer format <secondtext>: string type field of maximum length <slength> indicating a second text field associated with the number; character set as specified</p>	



+CPBF - Find Phonebook Entries	SELINT 2
	<p>by command Select TE Character Set +CSCS</p> <p><email>: string type field of maximum length <length> indicating an email address; character set as specified by command Select TE Character Set +CSCS</p> <p><hidden>: indicates if the entry is hidden or not</p> <p>0: phonebook entry not hidden</p> <p>1: phonebook entry hidden</p> <p>Note: +CPBF is not applicable if the current selected storage (see +CPBS) is either “MC”, either “RC” or “LD”.</p> <p>Note: if <findtext>="" the command returns all the phonebook records.</p> <p>Note: if no PB records satisfy the search criteria then an ERROR message is reported.</p>
AT+CPBF=?	<p>Test command reports the maximum lengths of <number> and <text> fields, in the format:</p> <p>+CPBF:</p> <p><nlength>,<tlength>,<glength>,<slength>,<elength></p> <p>where:</p> <p><nlength> - maximum length of field <number>, integer type</p> <p><tlength> - maximum length of field <text>, integer type</p> <p><glength>: integer type value indicating the maximum length of field <group></p> <p><slength>: integer type value indicating the maximum length of field <secondtext></p> <p><elength>: integer type value indicating the maximum length of field <email></p> <p>Note: the value of <nlength> could vary, depending on the availability of Extension service, in the following situations:</p> <ol style="list-style-type: none"> 1. if “SM” memory storage has been selected (see +CPBS) and the SIM supports the Extension1 service 2. if “FD” memory storage has been selected (see +CPBS) and the SIM supports the Extension2 service 1. if “MB” memory storage has been selected (see +CPBS) and the SIM supports the Extension6 service
Note	Remember to select the PB storage with +CPBS command before issuing PB commands.
Reference	3GPP TS 27.007



5.1.4.4.10. Write Phonebook Entry - +CPBW

+CPBW - Write Phonebook Entry	SELINT 2
<p>AT+CPBW= [<index>] [,<number> [<type> [,<text>[,<group>[[,<adnumber>[,<ad dtype>[,<second text>[,<email>[[,<hidden>]]]]]]]]]</p>	<p>Execution command writes phonebook entry in location number <index> in the current phonebook memory storage selected with +CPBS.</p> <p>Parameters:</p> <p><index> - integer type, value in the range of location numbers of the currently selected phonebook memory storage (see +CPBS).</p> <p><number> - string type, phone number in the format <type></p> <p><type> - the type of number 129 - national numbering scheme 145 - international numbering scheme (contains the character "+")</p> <p><text> - the text associated to the number, string type; used character set should be the one selected with command +CSCS.</p> <p><group>: string type field of maximum length <length> indicating a group the entry may belong to; character set as specified by command Select TE Character Set +CSCS</p> <p><adnumber>: additional number ; string type phone number of format <adtype></p> <p><adtype>: type of address octet in integer format</p> <p><secondtext>: string type field of maximum length <length> indicating a second text field associated with the number; character set as specified by command Select TE Character Set +CSCS</p> <p><email>: string type field of maximum length <length> indicating an email address; character set as specified by command Select TE Character Set +CSCS</p> <p><hidden>: indicates if the entry is hidden or not 0: phonebook entry not hidden 1: phonebook entry hidden</p> <p>Note: If record number <index> already exists, it will be overwritten.</p> <p>Note: if either <number>, <type> and <text> are omitted, the phonebook entry in location <index> is deleted.</p> <p>Note: if <index> is omitted or <index>=0, the number <number> is stored in the first free phonebook location. (example at+cpbw=0,"+390404192701",129,"Text" and at+cpbw=",+390404192701",129,"Text")</p> <p>Note: if either "LD", "MC" or "RC" memory storage has been selected (see +CPBS) it is possible just to delete the phonebook entry in location <index>, therefore parameters <number>, <type> and <text> must be omitted.</p>



+CPBW - Write Phonebook Entry	SELINT 2
	<p>Note: before defining <group> string, it is recommended to check, with #CPBGR command, the predefined group names, that could be already stored in USIM in Grouping information Alpha String (GAS) file. If all records in such file are already occupied, +CPBW command will return ERROR when trying to use a new group name that is not in the predefined GAS names. To define a new custom group string, it is necessary to overwrite with it one of the old predefined strings, using #CPBGW command.</p>
<p>AT+CPBW=?</p>	<p>Test command returns location range supported by the current storage as a compound value, the maximum length of <number> field, supported number format of the storage and maximum length of <text> field. The format is:</p> <p>+CPBW: (list of supported <index>s),<nlength>, (list of supported <type>s),<tlength> , <glength> , <slength> , <elength></p> <p>where:</p> <p><nlength> - integer type value indicating the maximum length of field <number>.</p> <p><tlength> - integer type value indicating the maximum length of field <text></p> <p><glength>: integer type value indicating the maximum length of field <group></p> <p><slength>: integer type value indicating the maximum length of field <secondtext></p> <p><elength>: integer type value indicating the maximum length of field <email></p> <p>Note: the value of <nlength> could vary, depending on the availability of Extension service, in the following situations:</p> <ol style="list-style-type: none"> 1. if “SM” memory storage has been selected (see +CPBS) and the SIM supports the Extension1 service 2. if “FD” memory storage has been selected (see +CPBS) and the SIM supports the Extension2 service 3. if “MB” memory storage has been selected (see +CPBS) and the SIM supports the Extension6 service
Reference	3GPP TS 27.007
Note	Remember to select the PB storage with +CPBS command before issuing PB commands.



5.1.4.4.11. Clock Management - +CCLK

+CCLK - Clock Management		SELINT 2
AT+CCLK=<time>	<p>Set command sets the real-time clock of the ME.</p> <p>Parameter: <time> - current time as quoted string in the format: "yy/MM/dd,hh:mm:ss±zz" yy - year (two last digits are mandatory), range is 00..99 MM - month (two last digits are mandatory), range is 01..12 dd - day (two last digits are mandatory); The range for dd(day) depends either on the month and on the year it refers to. Available ranges are: (01..28) (01..29) (01..30) (01..31) Trying to enter an out of range value will raise an error</p> <p>hh - hour (two last digits are mandatory), range is 00..23 mm - minute (two last digits are mandatory), range is 00..59 ss - seconds (two last digits are mandatory), range is 00..59 ±zz - time zone (indicates the difference, expressed in quarter of an hour, between the local time and GMT; two last digits are mandatory), range is -47..+48</p>	
AT+CCLK?	<p>Read command returns the current setting of the real-time clock, in the format <time>.</p> <p>Note: the three last characters of <time>, i.e. the time zone information, are returned by +CCLK? only if the #NITZ URC '<i>extended</i>' format has been enabled (see #NITZ).</p>	
AT+CCLK=?	Test command returns the OK result code.	
Example	<p>AT+CCLK="02/09/07,22:30:00+00" OK AT+CCLK? +CCLK: "02/09/07,22:30:25" OK</p>	
Reference	3GPP TS 27.007	



5.1.4.4.12. Alarm Management - +CALA

+CALA - Alarm Management	SELINT 2
<p>AT+CALA= <time>[,<n>[,<type> [,<text>[,<recurr> [,<silent>]]]]]</p>	<p>Set command stores in the internal Real Time Clock an alarm time with respective settings. It is possible to set up a recurrent alarm for one or more days in the week. Currently just one alarm can be set.</p> <p>When the RTC time reaches the alarm time then the alarm starts, the behaviour of the MODULE depends upon the setting <type> and if the device was already ON at the moment when the alarm time had come.</p> <p>Parameters:</p> <p><time> - current alarm time as quoted string "" - (empty string) deletes the current alarm and resets all the +CALA parameters to the "factory default" configuration "hh:mm:ss±zz" - format to be used only when issuing +CALA with parameter <recurr> too. "yy/MM/dd,hh:mm:ss±zz" - generic format: it's the same as defined for +CCLK (see)</p> <p><n> - index of the alarm 0 - The only value supported is 0.</p> <p><type> - alarm behaviour type 0 - reserved for other equipment use. 1 - the MODULE simply wakes up fully operative as if the ON/OFF button had been pressed. If the device is already ON at the alarm time, then it does nothing (default). 2 - the MODULE wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the MODULE issues an unsolicited code every 3s:</p> <p style="text-align: center;">+CALA: <text></p> <p style="text-align: center;">where <text> is the +CALA optional parameter previously set.</p> <p>The device keeps on sending the unsolicited code every 3s until a #WAKE or #SHDN command is received or a 90 seconds timer expires. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s then it shuts down.</p> <p>3 - the MODULE wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the MODULE starts playing the alarm tone on the selected path for the ringer (see command #SRP) The device keeps on playing the alarm tone until a #WAKE or #SHDN command is received or a 90 s time-out occurs. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s then it shuts down.</p> <p>4 - the MODULE wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the MODULE brings the pin GPIO6 high, provided its <direction> has been set to alarm output, and keeps it</p>



+CALA - Alarm Management	SELINT 2
	<p>in this state until a #WAKE or #SHDN command is received or a 90 seconds timer expires. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s then it shuts down.</p> <p>5 - the MODULE will make both the actions as for type=2 and <type>=3.</p> <p>6 - the MODULE will make both the actions as for type=2 and <type>=4.</p> <p>7 - the MODULE will make both the actions as for type=3 and <type>=4.</p> <p>8 - the MODULE wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the MODULE sets High the RI output pin. The RI output pin remains High until next #WAKE issue or until a 90s timer expires. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s. After that it shuts down.</p> <p><text> - unsolicited alarm code text string. It has meaning only if <type> is equal to 2 or 5 or 6.</p> <p><recurr> - string type value indicating day of week for the alarm in one of the following formats: “<1..7>[,<1..7>[, ...]]” - it sets a recurrent alarm for one or more days in the week; the digits 1 to 7 corresponds to the days in the week (Monday is 1). “0” - it sets a recurrent alarm for all days in the week.</p> <p><silent> - integer type indicating if the alarm is silent or not. 0 - the alarm will not be silent; 1 - the alarm will be silent.</p> <p>During the "alarm mode" the device will not make any network scan and will not register to any network and therefore is not able to dial or receive any call or SMS, the only commands that can be issued to the MODULE in this state are the #WAKE and #SHDN, every other command must not be issued during this state.</p> <p>Note: it is mandatory to set at least once the RTC (issuing +CCLK) before it is possible to issue +CALA with <type>=8</p>
AT+CALA?	<p>Read command returns the list of current active alarm settings in the ME, in the format:</p> <p>[+CALA: <time>,<n>,<type>,<[<text>]>,<recurr>,<silent>]</p>
AT+CALA=?	<p>Test command returns the list of supported index values (currently just 0), alarm types, maximum length of the text to be displayed, maximum length of <recurr> and supported <silent>s, in the format:</p> <p>+CALA: (list of supported <n>s),(list of supported <type>s),<tlength>,<rlength>,(list of supported <silent>s)</p>
Example	<p>AT+CALA="02/09/07,23:30:00+00" OK</p>
Reference	<p>ETSI 07.07, ETSI 27.007</p>



5.1.4.4.13. Delete Alarm - +CALD

+CALD - Delete Alarm		SELINT 2
AT+CALD=<n>	Execution command deletes an alarm in the ME Parameter: <n> - alarm index 0	
AT+CALD=?	Test command reports the range of supported values for <n> parameter.	
Reference	3G TS 27.007	

5.1.4.4.14. Postpone alarm - +CAPD

+CAPD – postpone or dismiss an alarm		SELINT 2
AT+CAPD=[<sec>]	Set command postpones or dismisses a currently active alarm. Parameters: <sec>: integer type value indicating the number of seconds to postpone the alarm (maximum 60 seconds). If <sec> is set to 0 (default), the alarm is dismissed.	
AT+CAPD=?	Test command reports the supported range of values for parameter <sec>	

5.1.4.4.15. Setting date format - +CSDF

+CSDF – setting date format		SELINT 2
AT+CSDF=[<mode> [,<auxmode>]]	<p>This command sets the date format of the date information presented to the user, which is specified by use of the <mode> parameter. The <mode> affects the date format on the phone display and doesn't affect the date format of the AT command serial interface, so it not used.</p> <p>The command also sets the date format of the TE-TA interface, which is specified by use of the <auxmode> parameter (i.e., the <auxmode> affects the <time> of AT+CCLK and AT+CALA). If the parameters are omitted then this sets the default value of <mode>.</p> <p>Parameters: <mode>: 1 DD-MMM-YYYY (default) 2 DD-MM-YY 3 MM/DD/YY 4 DD/MM/YY 5 DD.MM.YY</p>	



	<p>6 YYMMDD 7 YY-MM-DD</p> <p><auxmode>: 1 yy/MM/dd (default) 2 yyyy/MM/dd</p> <p>Note: The <time> format of +CCLK and +CALA is "yy/MM/dd,hh:mm:ss+zz" when <auxmode>=1 and it is "yyyy/MM/dd,hh:mm:ss+zz" when <auxmode>=2.</p>
AT+CSDF?	<p>Read command reports the currently selected <mode> and <auxmode> in the format: +CSDF: <mode>,<auxmode></p>
AT+CSDF=?	<p>Test command reports the supported range of values for parameters <mode> and <auxmode></p>

5.1.4.4.16. Setting time format - +CSTF

+CSTF – setting time format	SELINT 2
AT+CSTF=[<mode>]	<p>This command sets the time format of the time information presented to the user, which is specified by use of the <mode> parameter. The <mode> affects the time format on the phone display and doesn't affect the time format of the AT command serial interface, so it not actually not used.</p> <p>Parameters: <mode>: 1 HH:MM (24 hour clock; default) 2 HH:MM a.m./p.m.</p>
AT+CSTF?	<p>Read command reports the currently selected <mode> in the format: +CSTF: <mode></p>
AT+CSTF=?	<p>Test command reports the supported range of values for parameter <mode></p>



5.1.4.4.17. Time Zone reporting - +CTZR

+CTZR – Time Zone reporting		SELINT 2
AT+CTZR=<onoff>	<p>This command enables and disables the time zone change event reporting. If the reporting is enabled the MT returns the unsolicited result code +CTZV: <tz> whenever the time zone is changed.</p> <p>Parameters: <onoff>: 0 Disable time zone change event reporting (default) 1 Enable time zone change event reporting</p>	
AT+CTZR?	Read command reports the currently selected <onoff> in the format: +CTZR: <onoff>	
AT+CTZR=?	Test command reports the supported range of values for parameter <onoff>	

5.1.4.4.18. Automatic Time Zone update - +CTZU

+CTZU – automatic Time Zone update		SELINT 2
AT+CTZU=<onoff>	<p>This command enables and disables automatic time zone update via NITZ.</p> <p>Parameters: <onoff>: 0 Disable automatic time zone update via NITZ (default) 1 Enable automatic time zone update via NITZ</p> <p>Note: despite of the name, the command AT+CTZU=1 enables automatic update of the date and time set by AT+CCLK command (not only time zone). This happens when a Network Identity and Time Zone (NITZ) message is sent by the network. This command is the ETSI standard equivalent of Telit custom command AT#NITZ=1. If command AT+CTZU=1, or AT#NITZ=1 (or both) has been issued, NITZ message will cause a date and time update.</p>	
AT+CTZU?	Read command reports the currently selected <onoff> in the format: +CTZU: <onoff>	
AT+CTZU=?	Test command reports the supported range of values for parameter <onoff>	



5.1.4.4.19. Restricted SIM Access - +CRSM

+CRSM - Restricted SIM Access	SELINT 2
<p>AT+CRSM= <command> [,<fileid> [,<P1>,<P2>,<P3> [,<data>]]]</p>	<p>Execution command transmits to the ME the SIM <command> and its required parameters. ME handles internally all SIM-ME interface locking and file selection routines. As response to the command, ME sends the actual SIM information parameters and response data.</p> <p>Parameters:</p> <p><command> - command passed on by the ME to the SIM</p> <p>176 - READ BINARY 178 - READ RECORD 192 - GET RESPONSE 214 - UPDATE BINARY 220 - UPDATE RECORD 242 - STATUS</p> <p><fileid> - identifier of an elementary data file on SIM. Mandatory for every command except STATUS.</p> <p><P1>,<P2>,<P3> - parameter passed on by the ME to the SIM; they are mandatory for every command except GET RESPONSE and STATUS</p> <p>0..255</p> <p><data> - information to be read/written to the SIM (hexadecimal character format).</p> <p>The response of the command is in the format:</p> <p>+CRSM: <sw1>,<sw2>[,<response>]</p> <p>where:</p> <p><sw1>,<sw2> - information from the SIM about the execution of the actual command either on successful or on failed execution.</p> <p><response> - on a successful completion of the command previously issued it gives the requested data (hexadecimal character format). It's not returned after a successful UPDATE BINARY or UPDATE RECORD command.</p> <p>Note: this command requires PIN authentication. However commands READ BINARY and READ RECORD can be issued before PIN authentication and if the SIM is blocked (after three failed PIN authentication attempts) to access the contents of the Elementary Files.</p> <p>Note: use only decimal numbers for parameters <command>, <fileid>, <P1>, <P2> and <P3>.</p>
AT+CRSM=?	Test command returns the OK result code
Reference	3GPP TS 27.007, GSM 11.11



5.1.4.4.20. Generic SIM access - +CSIM

+CSIM – Generic SIM access	SELINT 2
AT+CSIM=<length>,<command>	<p>The ME shall send the <command> as it is to the SIM. As response to the command, ME sends back the actual SIM <response> to the TA as it is.</p> <p>Parameters:</p> <p><length>: number of the characters that are sent to TE in <command> or <response> (two times the actual length of the command or response)</p> <p><command>: command passed on by the ME to the SIM in the format as described in GSM 11.11 (hexadecimal character format)</p> <p>The response of the command is in the format: +CSIM: <length>,<response></p> <p>where:</p> <p><response> : response to the command passed on by the SIM to the ME in the format as described in GSM 11.11 (hexadecimal character format).</p> <p>Error case:</p> <p>+CME ERROR: <err></p> <p>possible <err> values (numeric format followed by verbose format):</p> <ul style="list-style-type: none"> 3 operation not allowed (<i>operation mode is not allowed by the ME</i>) 4 operation not supported (<i>wrong format or parameters of the command</i>) 13 SIM failure (<i>SIM no response</i>)
AT+CSIM=?	<p>Test command returns the OK result code.</p>
<p>Example</p>	<pre> STATUS AT+CSIM=10,"A0F2000002" +CSIM: 8,"00009000" OK STATUS AT+CSIM=10,A0F2000016 +CSIM:48,"000002A87F2002000000000000099300220800838A838A9000" OK SELECT EF 6F07 AT+CSIM=14,A0A40000026F07 +CSIM: 4,"9F0F" OK </pre>



+CSIM – Generic SIM access		SELINT 2
	<p><i>GET RESPONSE</i> AT+CSIM=10,A0C000000F +CSIM: 34,"000000096F0704001A001A010200009000"</p> <p>OK</p> <p><i>SELECT EF 6F30</i> AT+CSIM=14,A0A40000026F30 +CSIM: 4,"9F0F"</p> <p>OK</p> <p><i>READ BINARY</i> AT+CSIM=10,A0B00000FC +CSIM:508,"FFFFFF130083130090130054130030130065130038130080130180130001131109130130130098130077130059130043130081130095130140130023130016330420130041FFFFFFFFFFFF21436542F41922F28822F201FFFFFFFFFFFF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF</p>	



5.1.4.4.21. Alert Sound Mode - +CALM

+CALM - Alert Sound Mode		SELINT 2
AT+CALM= <mode>	<p>Set command is used to select the general alert sound mode of the device.</p> <p>Parameter: <mode> 0 - normal mode 1 - silent mode; no sound will be generated by the device, except for alarm sound 2 - stealth mode; no sound will be generated by the device</p> <p>Note: if silent mode is selected then incoming calls will not produce alerting sounds but only the unsolicited messages RING or +CRING.</p>	
AT+CALM?	Read command returns the current value of parameter <mode>.	
AT+CALM=?	<p>Test command returns the supported values for the parameter <mode> as compound value.</p> <p>+CALM: (0-2)</p>	
Reference	3GPP TS 27.007	

5.1.4.4.22. Ringer Sound Level - +CRSL

+CRSL - Ringer Sound Level		SELINT 2
AT+CRSL=<level>	<p>Set command is used to select the incoming call ringer sound level of the device.</p> <p>Parameter: <level> - ringer sound level 0 - Off 1 - low 2 - middle 3 - high 4 - progressive</p>	
AT+CRSL?	Read command reports the current <level> setting of the call ringer in the format: +CRSL: <level>	
AT+CRSL=?	<p>Test command reports <level> supported values as compound value.</p> <p>+CRSL: (0-4)</p>	
Reference	3GPP TS 27.007	



5.1.4.4.23. Loudspeaker Volume Level - +CLVL

+CLVL - Loudspeaker Volume Level		SELINT 2
AT+CLVL=<level>	Set command is used to select the volume of the internal loudspeaker audio output of the device. Parameter: <level> - loudspeaker volume 0..max - the value of max can be read by issuing the Test command AT+CLVL=?	
AT+CLVL?	Read command reports the current <level> setting of the loudspeaker volume in the format: +CLVL: <level>	
AT+CLVL=?	Test command reports <level> supported values range in the format: +CLVL: (0-max)	
Reference	3GPP TS 27.007	

5.1.4.4.24. Microphone Mute Control - +CMUT

+CMUT - Microphone Mute Control		SELINT 2
AT+CMUT=<n>	Set command enables/disables the muting of the microphone audio line during a voice call. Parameter: <n> 0 - mute off, microphone active (factory default) 1 - mute on, microphone muted. Note: this command mutes/activates both microphone audio paths, internal mic and external mic.	
AT+CMUT?	Read command reports whether the muting of the microphone audio line during a voice call is enabled or not, in the format: +CMUT: <n>	
AT+CMUT=?	Test command reports the supported values for <n> parameter.	
Reference	3GPP TS 27.007	



5.1.4.4.25. Silence command - +CSIL

+CSIL – silence command		SELINT 2
AT+CSIL=[<mode>]	<p>This command enables/disables the silent mode. When the phone is in silent mode, all signalling tones from MT are suppressed.</p> <p>Parameters: <mode>: 0 Silent mode off (default) 1 Silent mode on</p>	
AT+CSIL?	<p>Read command reports the currently selected <mode> in the format: +CSIL: <mode></p>	
AT+CSIL=?	<p>Test command reports the supported range of values for parameter <mode></p>	

5.1.4.4.26. Accumulated Call Meter - +CACM

+CACM - Accumulated Call Meter		SELINT 2
AT+CACM=[<pwd>]	<p>Set command resets the Advice of Charge related Accumulated Call Meter stored in SIM (ACM): it contains the total number of home units for both the current and preceding calls.</p> <p>Parameter: <pwd> - to access this command PIN2; if PIN2 has been already input once after startup, it is required no more</p>	
AT+CACM?	<p>Read command reports the current value of the SIM ACM in the format: +CACM: <acm></p> <p>where: <acm> - accumulated call meter in home units, string type: three bytes of the ACM value in hexadecimal format (e.g. “00001E” indicates decimal value 30)</p> <p>Note: the value <acm> is in home units; price per unit and currency are defined with command +CPUC</p>	
AT+CACM=?	<p>Test command returns the OK result code</p>	
Reference	3GPP TS 27.007	



5.1.4.4.27. Accumulated Call Meter Maximum - +CAMP

+CAMP - Accumulated Call Meter Maximum		SELINT 2
AT+CAMP= [<acmm> [,<pwd>]]	<p>Set command sets the Advice of Charge related Accumulated Call Meter Maximum Value stored in SIM (ACMmax). This value represents the maximum number of home units allowed to be consumed by the subscriber. When ACM reaches <acmm> value further calls are prohibited.</p> <p>Parameter: <acmm> - ACMmax value, integer type: it is the maximum number of home units allowed to be consumed by the subscriber. <pwd> - PIN2; if PIN2 has been already input once after startup, it is required no more</p> <p>Note: <acmm> = 0 value disables the feature.</p>	
AT+CAMP?	<p>Read command reports the ACMmax value stored in SIM in the format:</p> <p>+CAMP : <acmm></p> <p>where: <acmm> - ACMmax value in home units, string type: three bytes of the ACMmax value in hexadecimal format (e.g. "00001E" indicates decimal value 30)</p>	
AT+CAMP=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	

5.1.4.4.28. Price per Unit and Currency Table - +CPUC

+CPUC - Price Per Unit And Currency Table		SELINT 2
AT+CPUC= <currency>, <ppu>[,<pwd>]	<p>Set command sets the values of Advice of Charge related Price per Unit and Currency Table stored in SIM (PUCT). The PUCT information can be used to convert the home units (as used in commands +CAOC, +CACM and +CAMP) into currency units.</p> <p>Parameters: <currency> - string type; three-character currency code (e.g. "LIT", "L. ", "USD", "DEM" etc.); used character set should be the one selected with command +CSCS. <ppu> - price per unit, string type (dot is used as decimal separator) e.g. "1989.27" <pwd> - SIM PIN2; if PIN2 has been already input once after startup, it is required no more</p>	
AT+CPUC?	Read command reports the current values of <currency> and <ppu> parameters in the format:	



+CPUC - Price Per Unit And Currency Table		SELINT 2
	+CPUC : <currency>,<ppu>	
AT+CPUC=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	

5.1.4.4.29. Call meter maximum event - +CCWE

+CCWE – Call Meter maximum event		SELINT 2
AT+CCWE=<mode>	<p>Set command is used to enable/disable sending of an unsolicited result code +CCWV shortly before the ACM (Accumulated Call Meter) maximum value is reached. The warning is issued approximately when 30 seconds call time remains. It is also issued when starting a call if less than 30 seconds call time remains.</p> <p>Parameters: <mode>: 0 Disable the call meter warning event (default) 1 Enable the call meter warning event</p> <p>Note: the set command will respond with an error if the Accumulated Call Meter service is not active in SIM</p>	
AT+CCWE?	<p>Read command reports the currently selected <mode> in the format:</p> <p>+CCWE: <mode></p>	
AT+CCWE=?	<p>Test command reports the supported range of values for parameter <mode></p>	

5.1.4.4.30. Set voice mail number - +CSVM

+CSVM – Set Voice Mail Number		SELINT 2
AT+CSVM=<mode>[,<number>[,<type>]]	<p>The number to the voice mail server is set with this command. The parameters <number> and <type> can be left out if the parameter <mode> is set to 0.</p> <p>Parameters: <mode> 0 – disable the voice mail number 1 – enable the voice mail number (factory default) <number> - string type phone number of format specified by <type> <type> - type of address octet in integer format 129 - unknown type of number and ISDN/Telephony numbering plan</p>	



+CSVM – Set Voice Mail Number		SELINT 2
	<p>145 - international type of number and ISDN/Telephony numbering plan (contains the character "+")</p> <p>Note: Set command only checks for parameters values validity; it does not any actual write to SIM to update voice mail number.</p>	
AT+CSVM?	<p>Read command returns the currently selected voice mail number and the status (i.e. enabled/disabled) in the format</p> <p>+CSVM:<mode>,<number>,<type></p>	
AT+CSVM=?	<p>Test command reports the range for the parameters <mode> and <type>.</p>	

5.1.4.4.31. Available AT Commands - +CLAC

+CLAC - Available AT Commands		SELINT 2
AT+CLAC	<p>Execution command causes the ME to return the AT commands that are available for the user, in the following format:</p> <p><AT cmd1>[<CR><LF><AT cmd2>[...]]</p> <p>where:</p> <p><AT cmdn> - defines the AT command including the prefix AT</p>	
AT+CLAC=?	Test command returns the OK result code	
Reference	3GPP TS 27.007	



5.1.4.5. Mobile Equipment Errors

5.1.4.5.1. Report Mobile Equipment Error - +CMEE

+CMEE - Report Mobile Equipment Error		SELINT 2
AT+CMEE=[<n>]	<p>Set command enables/disables the report of result code:</p> <p>+CME ERROR: <err></p> <p>as an indication of an error relating to the +Cxxx commands issued.</p> <p>When enabled, device related errors cause the +CME ERROR: <err> final result code instead of the default ERROR final result code. ERROR is anyway returned normally when the error message is related to syntax, invalid parameters, or DTE functionality.</p> <p>Parameter: <n> - enable flag 0 - disable +CME ERROR:<err> reports, use only ERROR report. 1 - enable +CME ERROR:<err> reports, with <err> in numeric format 2 - enable +CME ERROR: <err> reports, with <err> in verbose format</p>	
AT+CMEE?	<p>Read command returns the current value of subparameter <n>:</p> <p>+CMEE: <n></p>	
AT+CMEE=?	<p>Test command returns the range of values for subparameter <n></p>	
Note	+CMEE has no effect on the final result code +CMS	
Reference	3GPP TS 27.007	



5.1.4.6. Voice Control

5.1.4.6.1. DTMF Tones Transmission - +VTS

+VTS - DTMF Tones Transmission		SELINT 2
AT+VTS= <dtmfstring> [,duration]	<p>Execution command allows the transmission of DTMF tones.</p> <p>Parameters:</p> <p><dtmfstring> - string of <dtmf>s, i.e. ASCII characters in the set (0-9), #, *, (A-D), P; it allows the user to send a sequence of DTMF tones, each of them with a duration that was defined through +VTD command.</p> <p><duration> - duration of a tone in 1/100 sec.; this parameter can be specified only if the length of first parameter is just one ASCII character</p> <p>0 - a single DTMF tone will be transmitted for a duration depending on the network, no matter what the current +VTD setting is.</p> <p>1..255 - a single DTMF tone will be transmitted for a time <duration> (in 10 ms multiples), no matter what the current +VTD setting is.</p> <p>Note: this commands operates in voice mode only (see +FCLASS).</p> <p>Note: the character P does not correspond to any DTMF tone, but it is interpreted as a pause of 3 seconds between the preceding and succeeding DTMF string elements</p>	
AT+VTS=?	<p>Test command provides the list of supported <dtmf>s and the list of supported <duration>s in the format:</p> <p>(list of supported <dtmf>s)[,(list of supported <duration>s)]</p>	
Reference	3GPP TS 27.007 and TIA IS-101	



5.1.4.6.2. Tone Duration - +VTD

+VTD - Tone Duration		SELINT 2
AT+VTD= <duration>	Set command sets the length of tones transmitted with +VTS command. Parameter: <duration> - duration of a tone 0 - the duration of every single tone is dependent on the network (factory default) 1..255 - duration of every single tone in 1/10 sec.	
AT+VTD?	Read command reports the current Tone Duration, in the format: <duration>	
AT+VTD=?	Test command provides the list of supported <duration>s in the format: (list of supported <duration>s)	
Reference	3GPP TS 27.007 and TIA IS-101	



5.1.4.7. Commands For GPRS

5.1.4.7.1. GPRS Mobile Station Class - +CGCLASS

+CGCLASS - GPRS mobile station class		SELINT 2
AT+CGCLASS=[<class>]	Set command sets the GPRS class according to <class> parameter. Parameter: <class> - GPRS class “A” - UMTS (factory default) “B” - GSM/GPRS “CG” - class C in GPRS only mode (GPRS only) “CC” - class C in circuit switched only mode (GSM only) Note: the setting is saved in NVM (and available on following reboot).	
AT+CGCLASS?	Read command returns the current value of the GPRS class in the format: +CGLASS: <class>	
AT+CGCLASS=?	Test command reports the range for the parameter <class>	

5.1.4.7.2. GPRS Attach Or Detach - +CGATT

+CGATT - GPRS Attach Or Detach		SELINT 2
AT+CGATT=[<state>]	Execution command is used to attach the terminal to, or detach the terminal from, the GPRS service depending on the parameter <state>. Parameter: <state> - state of GPRS attachment 0 - detached 1 - attached	
AT+CGATT?	Read command returns the current GPRS service state.	
AT+CGATT=?	Test command requests information on the supported GPRS service states.	
Example	AT+CGATT? +CGATT: 0 OK AT+CGATT=? +CGATT: (0,1) OK AT+CGATT=1 OK	
Reference	3GPP TS 27.007	



5.1.4.7.3. GPRS Event Reporting - +CGEREP

+CGEREP - GPRS Event Reporting	SELINT 2
AT+CGEREP= [<mode>[,<bfr>]]	<p>Set command enables or disables sending of unsolicited result codes +CGEV: XXX (see below) from TA to TE in the case of certain events occurring in the TA or the network.</p> <p>Parameters:</p> <p><mode> - controls the processing of URCs specified with this command</p> <ul style="list-style-type: none"> 0 - Buffer unsolicited result codes in the TA. If TA result code buffer is full, the oldest one can be discarded. No codes are forwarded to the TE. 1 - Discard unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE. 2 - Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when TA-TE link becomes available; otherwise forward them directly to the TE. <p><bfr> - controls the effect on buffered codes when <mode> 1 or 2 is entered:</p> <ul style="list-style-type: none"> 0 - TA buffer of unsolicited result codes defined within this command is cleared when <mode>=1 or 2 is entered. 1 - TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode>=1 or 2 is entered (OK response shall be given before flushing the codes) <p style="text-align: center;">Unsolicited Result Codes</p> <p>The following unsolicited result codes and the corresponding events are defined:</p> <p>+CGEV: REJECT <PDP_type>, <PDP_addr> A network request for PDP context activation occurred when the TA was unable to report it to the TE with a +CRING unsolicited result code and was automatically rejected</p> <p>+CGEV: NW REACT <PDP_type>, <PDP_addr>, [<cid>] The network has requested a context reactivation. The <cid> that was used to reactivate the context is provided if known to TA</p> <p>+CGEV: NW DEACT <PDP_type>, <PDP_addr>, [<cid>] The network has forced a context deactivation. The <cid> that was used to activate the context is provided if known to TA</p> <p>+CGEV: ME DEACT <PDP_type>, <PDP_addr>, [<cid>] The mobile equipment has forced a context deactivation. The <cid> that was used to activate the context is provided if known to TA</p> <p>+CGEV: NW DETACH The network has forced a GPRS detach. This implies that all active contexts have been deactivated. These are not reported separately</p>



+CGEREP - GPRS Event Reporting		SELINT 2
	+CGEV: ME DETACH The mobile equipment has forced a GPRS detach. This implies that all active contexts have been deactivated. These are not reported separately +CGEV: ME CLASS <class> The mobile equipment has forced a change of MS class. The highest available class is reported (see +CGCLASS)	
AT+CGEREP?	Read command returns the current <mode> and <bfr> settings, in the format: +CGEREP: <mode>,<bfr>	
AT+CGEREP=?	Test command reports the supported range of values for the +CGEREP command parameters.	
Reference	3GPP TS 27.007	

5.1.4.7.4. GPRS Network Registration Status - +CGREG

+CGREG - GPRS Network Registration Status		SELINT 2
AT+CGREG=[<n>]	Set command controls the presentation of an unsolicited result code +CGREG: (see format below). Parameter: <n> - result code presentation mode 0 - disable network registration unsolicited result code 1 - enable network registration unsolicited result code; if there is a change in the terminal GPRS network registration status, it is issued the unsolicited result code: +CGREG: <stat> where: <stat> - registration status 0 - not registered, terminal is not currently searching a new operator to register to 1 - registered, home network 2 - not registered, but terminal is currently searching a new operator to register to 3 - registration denied 4 - unknown 5 - registered, roaming 2 - enable network registration and location information unsolicited result code; if there is a change of the network cell, it is issued the unsolicited result code: +CGREG: <stat>[,<lac>,<ci>[,<AcT>,<rac>]]	



+CGREG - GPRS Network Registration Status		SELINT 2
	<p>where:</p> <p><stat> - registration status (see above for values)</p> <p><lac> - location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)</p> <p><ci> - cell ID in hexadecimal format.</p> <p><AcT>: access technology of the registered network:</p> <p>0 GSM</p> <p>2 UTRAN</p> <p><rac>: string type; one byte routing area code in hexadecimal format</p> <p>Note: <lac>, <Ci>, <AcT> and <rac> are reported only if <mode>=2 and the mobile is registered on some network cell.</p>	
AT+CGREG?	<p>Read command returns the status of result code presentation mode <n> and the integer <stat> which shows whether the network has currently indicated the registration of the terminal in the format:</p> <p>+CGREG: <n>,<stat>[,<lac>,<ci>[,<AcT>,<rac>]]</p> <p>Note: <lac>, <Ci>, <AcT> and <rac> are reported only if <mode>=2 and the mobile is registered on some network cell.</p>	
AT+CGREG=?	Test command returns supported values for parameter <n>	
Reference	3GPP TS 27.007	

5.1.4.7.5. Define PDP Context - +CGDCONT

+CGDCONT - Define PDP Context	SELINT 2
AT+CGDCONT= [<cid> [,<PDP_type> [,<APN> [,<PDP_addr> [,<d_comp> [,<h_comp> [,<pd1> [...[,pdN]]]]]]]]]	<p>Set command specifies PDP context parameter values for a PDP context identified by the (local) context identification parameter, <cid></p> <p>Parameters:</p> <p><cid> - (PDP Context Identifier) numeric parameter which specifies a particular PDP context definition.</p> <p>1..<i>max</i> - where the value of <i>max</i> is returned by the Test command</p> <p><PDP_type> - (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol</p> <p>"IP" - Internet Protocol</p> <p>"IPv6" - Internet Protocol version 6</p> <p><APN> - (Access Point Name) a string parameter which is a logical name that is used to select the GGSN or the external packet data network. If the value is empty ("") or omitted, then the subscription value will be requested.</p> <p><PDP_addr> - a string parameter that identifies the terminal in the address space applicable to the PDP. The allocated address may be read using the +CGPADDR command.</p> <p><d_comp> - numeric parameter that controls PDP data compression</p>



+CGDCONT - Define PDP Context		SELINT 2
	<p>0 - off (default if value is omitted) 1 - on</p> <p><h_comp> - numeric parameter that controls PDP header compression 0 - off (default if value is omitted) 1 - on</p> <p><pd1>, ..., <pdN> - zero to N string parameters whose meanings are specific to the <PDP_type></p> <p>Note: a special form of the Set command, +CGDCONT=<cid>, causes the values for context number <cid> to become undefined.</p>	
AT+CGDCONT?	Read command returns the current settings for each defined context in the format: +CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>[,<pd1>[,...[,pdN]]][<CR><LF>+CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>[,<pd1>[,...[,pdN]]][...]]	
AT+CGDCONT=?	Test command returns values supported as a compound value	
Example	<p>AT+CGDCONT=1,"IP","APN","10.10.10.10",0,0 OK AT+CGDCONT? +CGDCONT: 1,"IP","APN","10.10.10.10",0,0 OK AT+CGDCONT=? +CGDCONT: (1-5),"IP",,(0-1),(0-1) OK</p>	
Reference	3GPP TS 27.007	



5.1.4.7.6. Quality Of Service Profile - +CGQMIN

+CGQMIN - Quality Of Service Profile (Minimum Acceptable)		SELINT 2
AT+CGQMIN= [<cid> [,<precedence> [,<delay> [,<reliability> [,<peak> [,<mean>]]]]]]	Set command allows to specify a minimum acceptable profile which is checked by the terminal against the negotiated profile returned in the Activate PDP Context Accept message. Parameters: <cid> - PDP context identification (see +CGDCONT command). <precedence> - precedence class <delay> - delay class <reliability> - reliability class <peak> - peak throughput class <mean> - mean throughput class If a value is omitted for a particular class then this class is not checked. Note: a special form of the Set command, +CGQMIN=<cid> causes the requested profile for context number <cid> to become undefined. Note: set command can modify the 3G QoS according to 3GPP 23.107 (see +CGEQMIN).	
AT+CGQMIN?	Read command returns the current settings for each defined context in the format: +CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[<CR><LF>+CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[...]] If no PDP context has been defined, it has no effect and OK result code is returned.	
AT+CGQMIN=?	Test command returns as a compound value the type of the current PDP context and the supported values for the subparameters in the format: +CGQMIN: <PDP_Type>,(list of supported <precedence>s), (list of supported <delay>s),(list of supported <reliability>s), (list of supported <peak>s),(list of supported <mean>s) Note: only the “IP” <PDP_Type> is currently supported.	
Example	AT+CGQMIN=1,0,0,3,0,0 OK AT+CGQMIN? +CGQMIN: 1,0,0,5,0,0 OK AT+CGQMIN=? +CGQMIN: “IP”,(0-3),(0-4),(0-5),(0-9),(0-18,31) OK	
Reference	3GPP TS 27.007; GSM 03.60	



5.1.4.7.7. Quality Of Service Profile - +CGQREQ

+CGQREQ - Quality Of Service Profile (Requested)	SELINT 2
AT+CGQREQ= [<cid> [,<precedence> [,<delay> [,<reliability> [,<peak> [,<mean>]]]]]]	Set command allows to specify a Quality of Service Profile that is used when the terminal sends an Activate PDP Context Request message to the network. It specifies a profile for the context identified by the (local) context identification parameter, <cid>. <p>Parameters:</p> <cid> - PDP context identification (see +CGDCONT command). <precedence> - precedence class <delay> - delay class <reliability> - reliability class <peak> - peak throughput class <mean> - mean throughput class <p>If a value is omitted for a particular class then this class is not checked.</p> <p>Note: a special form of the Set command, +CGQREQ=<cid> causes the requested profile for context number <cid> to become undefined.</p> <p>Note: set command can modify the 3G QoS according to 3GPP 23.107 (see +CGEQREQ).</p>
AT+CGQREQ?	Read command returns the current settings for each defined context in the format: <p>+CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[<CR><LF>+CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[...]]</p> <p>If no PDP context has been defined, it has no effect and OK result code is returned.</p>
AT+CGQREQ=?	Test command returns as a compound value the type of the current PDP context and the supported values for the subparameters in the format: <p>+CGQREQ: <PDP_Type>,(list of supported <precedence>s), (list of supported <delay>s),(list of supported <reliability>s), (list of supported <peak>s),(list of supported <mean>s)</p> <p>Note: only the “IP” <PDP_Type> is currently supported.</p>
Example	AT+CGQREQ? +CGQREQ: 1,0,0,3,0,0 <p>OK</p> AT+CGQREQ=1,0,0,3,0,0 OK <p>AT+CGQREQ=? +CGQREQ: "IP",(0-3),(0-4),(0-5),(0-9),(0-18,31)</p>

 


HE910/UE910 AT Commands Reference Guide
80378ST10091A Rev. 5 – 2013-07-01

+CGQREQ - Quality Of Service Profile (Requested)		SELINT 2
	OK	
Reference	3GPP TS 27.007; GSM 03.60	



+CGEQREQ – 3G Quality Of Service Profile (Requested)	SELINT 2
AT+CGEQREQ= [,<cid> [,<Traffic class> [,<Maximum bitrate UL> [,<Maximum bitrate DL> [,<Guaranteed bitrate UL> [,<Guaranteed bitrate DL> [,<Delivery order> [,<Maximum SDU size> [,<SDU error ratio> [,<Residual bit error ratio> [,<Delivery of erroneous SDUs> [,<Transfer delay> [,<Traffic handling priority> [,<Source statistics descriptor> [,<Signalling indication>]]]]]]]]]]]]]]]	<p>Set command allows to specify a 3G quality of service profile for the context identified by the(local) context identification parameter <cid> which is used when the MT sends an Activate PDP Context Request message to the network.</p> <p>Parameters:</p> <p><cid> - PDP context identification (see +CGDCONT command).</p> <p><Traffic class> - Traffic class 0 - conversational 1 - streaming 2 - interactive 3 - background 4 - subscribed value (default value)</p> <p><Maximum bitrate UL> - Maximum bitrate Up Link (kbits/s). This parameter should be provided if the <Traffic class> is specified as conversational or streaming. 0 - subscribed value (default value) 1...568 576...8640</p> <p><Maximum bitrate DL> - Maximum bitrate down link (kbits/s). This parameter should be provided if the <Traffic class> is specified as conversational or streaming. 0 - subscribed value (default value) 1...568 576...8640 8700...16000</p> <p><Guaranteed bitrate UL> - the guaranteed bitrate up link(kbits/s). This parameter should be provided if the <Traffic class> is specified as conversational or streaming. 0 - subscribed value (default value) 1...568 576...8640</p> <p><Guaranteed bitrate DL> - the guaranteed bitrate down link(kbits/s). This parameter should be provided if the <Traffic class> is specified as conversational or streaming. 0 - subscribed value (default value) 1...568 576...8640</p>



	<p>200...950 1000...4000</p> <p><Traffic handling priority> - Traffic handling priority 0 - subscribed value (default value) 1...3</p> <p><Source Statistics Descriptor> - Characteristics of the source of the submitted SDUs for a PDP context. This parameter should be provided if the <Traffic class> is specified as conversational or streaming. 0 - Characteristics of SDUs is unknown (default value) 1 - Characteristics of SDUs corresponds to a speech source</p> <p><Signalling Indication> - Signalling content of submitted SDUs for a PDP context. This parameter should be provided if the <Traffic class> is specified as interactive. 0 - PDP context is not optimized for signalling (default value) 1 - PDP context is optimized for signalling <PDP_type> (see +CGDCONT command).</p> <p>Note: a special form of the Set command, +CGEQREQ=<cid> causes the requested profile for context number <cid> to become undefined.</p> <p>Note: the current settings are stored in NVM. Note: set command can modify the 2G QoS according to 3GPP 23.107 (see +CGQREQ).</p>
AT+CGEQREQ?	<p>Read command returns the current settings for each defined context in the format:</p> <p>[+CGEQREQ: <cid>,<Traffic class>,<Maximum bitrate UL>,<Maximum bitrate DL>,<Guaranteed bitrate UL>,<Guaranteed bitrate DL>,<Delivery order>,<Maximum SDU size>,<SDU error ratio>,<Residual bit error ratio>,<Delivery of erroneous SDUs>,<Transfer delay>,<Traffic handling>,<Source statistics descriptor>,<Signalling indication><CR><LF>] [+CGEQREQ:...]</p> <p>If no PDP context has been defined, it has no effect and OK result code is returned.</p>
AT+CGEQREQ=?	<p>Test command returns as a compound value the type of the current PDP context and the supported values for the subparameters in the format:</p> <p>+CGEQREQ: <PDP_Type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of</p>



	<p>supported<SDU error ratio>s),(list of supported<Residual bit error ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of supported <Transfer delay>s),(list of supported <Traffic handling priority>s), (list of supported <Source statistics descriptor>s), (list of supported <Signalling indication>s)</p> <p>Note: only the “IP” PDP Type is currently supported.</p>
--	---

5.1.4.7.9. 3G Quality Of Service Profile (Minimum Acceptable) - +CGEQMIN

+CGEQMIN – 3G Quality Of Service Profile (Minimum Acceptable)	SELINT 2
AT+CGEQMIN= [<cid> [,<Traffic class> [,<Maximum bitrate UL> [,<Maximum bitrate DL> [,<Guaranteed bitrate UL> [,<Guaranteed bitrate DL> [,<Delivery order> [,<Maximum SDU size> [,<SDU error ratio> [,<Residual bit error ratio> [,<Delivery of erroneous SDUs> [,<Transfer delay> [,<Traffic handling priority> [,<Source statistics descriptor> [,<Signalling indication>]]]]]]]]]]]]]]]]	<p>Set command allows specifying a 3G quality of service profile for the context identified by the (local) context identification parameter <cid> which is checked by the MT against the negotiated profile returned in the Activate/Modify PDP Context Accept Message.</p> <p>Parameters:</p> <p><cid> - PDP context identification (see +CGDCONT command).</p> <p><Traffic class> - Traffic class 0 – conversational (default value) 1 - streaming 2 - interactive 3 - background</p> <p><Maximum bitrate UL> - Maximum bitrate Up Link (kbits/s) 0 (default value) 1...568 576...8640</p> <p><Maximum bitrate DL> - Maximum bitrate down link (kbits/s) 0 (default value) 1...568 576...8640 8700...16000</p> <p><Guaranteed bitrate UL> - the guaranteed bitrate up link(kbits/s) 0 (default value) 1...568 576...8640</p> <p><Guaranteed bitrate DL> - the guaranteed bitrate down link(kbits/s) 0 (default value) 1...568</p>



	<p>576...8640 8700...16000</p> <p><Delivery order> - SDU Delivery order 0 - no (for default value) 1 – yes</p> <p><Maximum SDU size> - Maximum SDU size in octets 0 (default value) 10...1500 1502 1510 1520</p> <p><SDU error ratio> - SDU error ratio - mEe mean $m \cdot 10^{-e}$, for example 1E2 mean $1 \cdot 10^{-2}$ “0E0” (default value) “1E1” “1E2” “7E3” “1E3” “1E4” “1E5” “1E6”</p> <p><Residual bit error ratio> - Residual bit error ratio - mEe mean $m \cdot 10^{-e}$, for example 1E2 mean $1 \cdot 10^{-2}$ “0E0” (default value) “5E2” “1E2” “5E3” “4E3” “1E3” “1E4” “1E5” “1E6” “6E8”</p> <p><Delivery of erroneous SDUs> - Delivery of erroneous SDUs 0 - no (default value) 1 – yes 2 – no detect</p> <p><Transfer delay > - Transfer delay (milliseconds) 0 (default value) 10...150 200...950</p>
--	--



	If no PDP context has been defined, it has no effect and OK result code is returned.
AT+CGEQMIN=?	<p>Test command returns as a compound value the type of the current PDP context and the supported values for the subparameters in the format:</p> <p>+CGQMIN: <PDP_Type>,(list of supported <Traffic class>s), (list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported<Maximum SDU size>s),(list of supported<SDU error ratio>s),(list of supported<Residual bit error ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of supported <Transfer delay>s),(list of supported <Traffic handling priority>s), (list of supported <Source statistics descriptor>s), (list of supported <Signalling indication>s)</p> <p>Note: only the “IP” PDP_Type is currently supported.</p>

5.1.4.7.10. PDP Context activate or deactivate - +CGACT

+CGACT - PDP Context Activate Or Deactivate		SELINT 2
AT+CGACT= [<state>,<cid> [,<cid>[...]]]	<p>Execution command is used to activate or deactivate the specified PDP context(s)</p> <p>Parameters:</p> <p><state> - indicates the state of PDP context activation 0 - deactivated 1 - activated</p> <p><cid> - a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)</p> <p>Note: only three <cid>s can be activated at the same time. Note: if no <cid>s are specified, the activation form of the command activates the first three defined contexts. The deactivation form deactivates all the active contexts.</p>	
AT+CGACT?	<p>Read command returns the current activation state for all the defined PDP contexts in the format:</p> <p>+CGACT: <cid>,<state>[<CR><LF>+CGACT: <cid>,<state>[...]]</p>	
AT+CGACT=?	<p>Test command reports information on the supported PDP context activation states parameters in the format:</p> <p>+CGACT: (0,1)</p>	
Example	AT+CGACT=1,1 OK AT+CGACT? +CGACT: 1,1	



+CGACT - PDP Context Activate Or Deactivate		SELINT 2
	OK	
Reference	3GPP TS 27.007	

5.1.4.7.11. 3G Quality Of Service Profile (Negotiated) - +CGEQNEG

+CGEQNEG – 3G Quality Of Service Profile (Negotiated)		SELINT 2
AT+CGEQNEG= [<cid>,<cid>,...]]	<p>This command allows the TE to retrieve the negotiated 3G quality of service returned in the Activate PDP Context Accept/Modify message.</p> <p>Set command returns the negotiated 3G QoS profile for the specified context identifiers, <cid>s. The Qos profile consists of a number of parameters, each of which may have a separate value.</p> <p>Parameters: <cid> - PDP context identification (see +CGDCONT command).</p> <p>It returns the current settings for each specified context in the format (see +CGEQREQ):</p> <p>[+CGEQNEG: <cid>,<Traffic class>,<Maximum bitrate UL>,<Maximum bitrate DL>,<Guaranteed bitrate UL>,<Guaranteed bitrate DL>,<Delivery order>,<Maximum SDU size>,<SDU error ratio>,<Residual bit error ratio>,<Delivery of erroneous SDUs>,<Transfer delay>,<Traffic handling><CR><LF>] [+CGEQNEG:...]</p>	
AT+CGEQNEG=?	Test command returns a list of <cid>s associated with active contexts.	
Reference	3GPP TS 27.007	



5.1.4.7.12. PDP Context - +CGACT

+CGACT - PDP Context Activate Or Deactivate		SELINT 2
AT+CGACT= [<state>[,<cid> [,<cid>[...]]]]	<p>Execution command is used to activate or deactivate the specified PDP context(s)</p> <p>Parameters:</p> <p><state> - indicates the state of PDP context activation 0 - deactivated 1 - activated</p> <p><cid> - a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)</p> <p>Note: if no <cid>s are specified the activation/deactivation form of the command activates/deactivates all defined contexts.</p>	
AT+CGACT?	<p>Read command returns the current activation state for all the defined PDP contexts in the format:</p> <p>+CGACT: <cid>,<state>[<CR><LF>+CGACT: <cid>,<state>[...]]</p>	
AT+CGACT=?	<p>Test command reports information on the supported PDP context activation states parameters in the format:</p> <p>+CGACT: (0,1)</p>	
Example	<pre>AT+CGACT=1,1 OK AT+CGACT? +CGACT: 1,1 OK</pre>	
Reference	3GPP TS 27.007	



5.1.4.7.13. Show PDP Address - +CGPADDR

+CGPADDR - Show PDP Address		SELINT 2
AT+CGPADDR= [<cid>[,<cid> [,...]]]	<p>Execution command returns a list of PDP addresses for the specified context identifiers in the format:</p> <p>+CGPADDR: <cid>,<PDP_addr>[<CR><LF>+CGPADDR: <cid>,<PDP_addr>[...]]</p> <p>Parameters:</p> <p><cid> - a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). If no <cid> is specified, the addresses for all defined contexts are returned.</p> <p><PDP_addr> - a string that identifies the terminal in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid>; if no address is available the empty string ("") is represented as <PDP_addr></p>	
AT+CGPADDR=?	Test command returns a list of defined <cid> s.	
Example	<p>AT#GPRS=1 +IP: xxx.yyy.zzz.www</p> <p>OK AT+CGPADDR=1 +CGPADDR: 1,"xxx.yyy.zzz.www"</p> <p>OK AT+CGPADDR=? +CGPADDR: (1)</p> <p>OK</p>	
Reference	3GPP TS 27.007	



5.1.4.7.14. Modify PDP context - +CGCMOD

+CGCMOD – Modify PDP context		SELINT 2
AT+CGCMOD=[<cid1>[,<cid2>[,...,<cidN>]]]	<p>The execution command is used to modify the specified PDP context(s) with respect to QoS profiles.</p> <p>If no <cid<i>i</i>> is specified the command modifies all active contexts.</p> <p>Parameters: <cid<i>i</i>>: a numeric parameter which specifies a particular PDP context</p>	
AT+CGCMOD=?	Test command returns a list of <cid>s associated with active contexts.	



5.1.4.7.15. Commands for Battery Charger

5.1.4.7.15.1. Battery Charge - +CBC

+ CBC - Battery Charge		SELINT 2
AT+CBC	<p>Execution command returns the current Battery Charge status in the format:</p> <p>+CBC: <bc>,<bcl></p> <p>where:</p> <p><bc> - battery status</p> <ul style="list-style-type: none"> 0 - ME is powered by the battery 1 - ME has a battery connected, and charger pin is being powered 2 - ME does not have a battery connected 3 - Recognized power fault, calls inhibited <p><bcl> - battery charge level, only if <bc>=0</p> <ul style="list-style-type: none"> 0 - battery is exhausted, or ME does not have a battery connected 25 - battery charge remained is estimated to be 25% 50 - battery charge remained is estimated to be 50% 75 - battery charge remained is estimated to be 75% 100 - battery is fully charged. <p>Note: <bc>=1 indicates that the battery charger supply is inserted and the battery is being recharged if necessary with it. Supply for ME operations is taken anyway from VBATT pins.</p> <p>Note: without battery/power connected on VBATT pins or during a power fault the unit is not working, therefore values <bc>=2 and <bc>=3 will never appear.</p> <p>Note: <bcl> indicates battery charge level only if battery is connected and charger is not connected</p>	
AT+CBC=?	<p>Test command returns parameter values supported as a compound value.</p> <p>+CBC: (0-3),(0-100)</p>	
Example	<pre>AT+CBC +CBC: 0,75 OK</pre>	
Note	<p>The ME does not make differences between being powered by a battery or by a power supply on the VBATT pins, so it is not possible to distinguish between these two cases.</p>	
Reference	3GPP TS 27.007	



5.1.5. 3GPP TS 27.005 AT Commands for SMS and CBS

5.1.5.1. General Configuration

5.1.5.1.1. Select Message Service - +CSMS

+CSMS - Select Message Service		SELINT 2
AT+CSMS= <service>	<p>Set command selects messaging service <service>. It returns the types of messages supported by the ME:</p> <p>Parameter: <service> 0 – 3GPP TS 23.040 and 3GPP TS 23.041. The syntax of SMS AT commands is compatible with 3GPP TS 27.005 (factory default) 1 – 3GPP TS 23.040 and 3GPP TS 23.041. The syntax of SMS AT commands is compatible with 3GPP TS 27.005. The requirement of <service> setting 1 is mentioned under corresponding command descriptions</p> <p>Set command returns the types of messages supported by the ME:</p> <p>+CSMS: <mt>,<mo>,<bm></p> <p>where: <mt> - mobile terminated messages support 0 - type not supported 1 - type supported <mo> - mobile originated messages support 0 - type not supported 1 - type supported <bm> - broadcast type messages support 0 - type not supported 1 - type supported</p>	
AT+CSMS?	<p>Read command reports current service setting along with supported message types in the format:</p> <p>+CSMS: <service>,<mt>,<mo>,<bm></p> <p>where: <service> - messaging service (see above) <mt> - mobile terminated messages support (see above) <mo> - mobile originated messages support (see above) <bm> - broadcast type messages support (see above)</p>	
AT+CSMS=?	Test command reports the supported value of the parameter <service>.	
Reference	3GPP TS 27.005; 3GPP TS 23.040; 3GPP TS 23.041	



5.1.5.1.2. Preferred Message Storage - +CPMS

+CPMS - Preferred Message Storage	SELINT 2
AT+CPMS= <memr> [,<memw> [,<mems>]]	<p>Set command selects memory storages <memr>, <memw> and <mems> to be used for reading, writing, sending and storing SMs.</p> <p>Parameters:</p> <p><memr> - memory from which messages are read and deleted "SM" - SIM SMS memory storage (default) "ME" - NVM SMS storage</p> <p><memw> - memory to which writing and sending operations are made "SM" - SIM SMS memory storage (default) "ME" - NVM SMS storage</p> <p><mems> - memory to which received SMs are preferred to be stored "SM" - SIM SMS memory storage (default) "ME" - NVM SMS storage</p> <p>The command returns the memory storage status in the format:</p> <p>+CPMS: <usedr>,<totalr>,<usedw>,<totalw>,<useds>,<totals></p> <p>where:</p> <p><usedr> - number of SMs stored into <memr> <totalr> - max number of SMs that <memr> can contain <usedw> - number of SMs stored into <memw> <totalw> max number of SMs that <memw> can contain <useds> - number of SMs stored into <mems> <totals> - max number of SMs that <mems> can contain</p> <p>Note: when <memr> is set to a memory, also <memw> and <mems> are set to the same memory.</p> <p>Note: the set memory is automatically saved in NVM.</p>
AT+CPMS?	<p>Read command reports the message storage status in the format:</p> <p>+CPMS: <memr>,<usedr>,<totalr>,<memw>,<usedw>,<totalw>,<mems>,<useds>,<totals></p> <p>where <memr>, <memw> and <mems> are the selected storage memories for reading, writing and storing respectively.</p>
AT+CPMS=?	<p>Test command reports the supported values for parameters <memr>, <memw> and <mems></p>
Example	<p><i>AT+CPMS?</i> <i>+CPMS: "SM",5,10,"SM",5,10,"SM",5,10</i></p> <p><i>OK</i></p>



+CPMS - Preferred Message Storage		SELINT 2
	<p>(you have 5 out of 10 SMS SIM positions occupied)</p> <p>AT+CPMS="ME"</p> <p>+CPMS: "ME",15,100,"ME",15,100,"ME",15,100</p> <p>OK</p> <p>(change memory to ME where there are 15 SMS positions occupied)</p>	
Reference	GSM 27.005	

5.1.5.1.3. Message Format - +CMGF

+CMGF - Message Format		SELINT 2
AT+CMGF=[<mode>]	<p>Set command selects the format of messages used with send, list, read and write commands.</p> <p>Parameter:</p> <p><mode></p> <p>0 - PDU mode, as defined in GSM 3.40 and GSM 3.41 (factory default)</p> <p>1 - text mode</p>	
AT+CMGF?	Read command reports the current value of the parameter <mode>.	
AT+CMGF=?	Test command reports the supported value of <mode> parameter.	
Reference	GSM 27.005	

5.1.5.1.4. Battery and charger status - #CBC

#CBC- Battery And Charger Status		SELINT 2
AT#CBC	<p>Execution command returns the current Battery and Charger state in the format:</p> <p>#CBC: <ChargerState>,<BatteryVoltage></p> <p>where:</p> <p><ChargerState> - battery charger state</p> <p>0 - charger not connected</p> <p>1 - charger connected and charging</p> <p>2 - charger connected and charge completed</p> <p><BatteryVoltage> - battery voltage in units of ten millivolts: it is the real battery voltage only if charger is not connected; if the charger is connected this value depends on the charger voltage.</p>	
AT#CBC=?	Test command returns the OK result code.	

5.1.5.2. Message Configuration

5.1.5.2.1. Service Center Address - +CSCA

+CSCA -Service Center Address		SELINT 2
AT+CSCA= <number> [,<type>]	<p>Set command sets the Service Center Address to be used for mobile originated SMS transmissions.</p> <p>Parameter:</p> <p><number> - SC phone number in the format defined by <type></p> <p><type> - the type of number</p> <p>129 - national numbering scheme</p> <p>145 - international numbering scheme (contains the character "+")</p> <p>Note: to use the SM service, is mandatory to set a Service Center Address at which service requests will be directed.</p> <p>Note: in Text mode, this setting is used by send and write commands; in PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into the <pdu> parameter equals zero.</p> <p>Note: the current settings are stored through +CSAS</p>	
AT+CSCA?	<p>Read command reports the current value of the SCA in the format:</p> <p>+CSCA: <number>,<type></p> <p>Note: if SCA is not present the device reports an error message.</p>	
AT+CSCA=?	Test command returns the OK result code.	
Reference	GSM 27.005	



5.1.5.2.2. Set Text Mode Parameters - +CSMP

+CSMP - Set Text Mode Parameters	SELINT 2
AT+CSMP= [<fo> [,<vp> [,<pid> [,<dc>]]]]	<p>Set command is used to select values for additional parameters for storing and sending SMs when the text mode is used (AT+CMGF=1)</p> <p>Parameters:</p> <p><fo> - first octet of 3GPP TS 23.040 SMS-SUBMIT or SMS-DELIVER, in integer format (default 17, i.e. SMS-SUBMIT with validity period in relative format). As first octet of a PDU has the following bit field description (bit[7]bit[6]bit[5]bit[4]bit[3]bit[2]bit[1]bit[0]):</p> <p>bit[1]bit[0]: Message Type Indicator, 2-bit field describing the message type; [00] - SMS-DELIVER; [01] - SMS-SUBMIT (default) ;</p> <p>bit[2]: Reject Duplicates, 1-bit field: user is not responsible for setting this bit and, if any set, it will have no meaning (default is [0]);</p> <p>bit[4]bit[3]: Validity Period Format, 2-bit field indicating whether or not the Validity Period field is present (default is [10]): [00] - Validity Period field <i>not present</i> [01] - Validity Period field present in <i>enhanced format</i>(i.e. quoted time-string type, see below) [10] - Validity Period field present in <i>relative format</i>, (i.e. integer type, see below) [11] - Validity Period field present in <i>absolute format</i> (i.e. quoted time-string type, see below)</p> <p>bit[5]: Status Report Request, 1-bit field indicating the MS is requesting a status report (default is [0]); [0] - MS is not requesting a status report [1] - MS is requesting a status report</p> <p>bit[6]: User Data Header Indicator, 1-bit field: user is not responsible for setting this bit and, if any set, it will have no meaning (default is [0]);</p> <p>bit[7]: Reply Path, 1-bit field indicating the request for Reply Path (default is [0]); [0] - Reply Path not requested [1] - Reply Path requested</p> <p><vp> - depending on <fo> setting:</p> <ol style="list-style-type: none"> if <fo> asks for a <i>Not Present</i> Validity Period, <vp> can be any type and it will be not considered; if <fo> asks for a Validity Period in <i>relative format</i>, <vp> shall be integer type (default 167, i.e. 24 hours); 0..143 - (<vp> + 1) x 5 minutes 144..167 - 12 hours + ((<vp> - 143) x 30 minutes) 168..196 - (<vp> - 166) x 1 day 197..255 - (<vp> - 192) x 1 week if <fo> asks for a Validity Period in <i>absolute format</i>, <vp> shall be quoted time-string type (see +CCLK) if <fo> asks for a Validity Period in <i>enhanced format</i>, <vp> shall be the



+CSMP - Set Text Mode Parameters		SELINT 2
	<p>AT+CSMP=17,167,0,0 OK</p> <p><i>Set the parameters for an outgoing message with validity period in enhanced format: the <vp> string actually codes 24 hours of validity period.</i></p> <p>AT+CSMP=9,"01A80000000000" OK</p> <p><i>Set the parameters for an outgoing message with validity period in enhanced format: the <vp> string actually codes 60 seconds of validity period.</i></p> <p>AT+CSMP=9,"023C0000000000" OK</p> <p><i>Set the parameters for an outgoing message with validity period in enhanced format: the <vp> string actually codes 29 hours 85 minutes 30 seconds of validity period.</i></p> <p>AT+CSMP=9,"03925803000000" OK</p>	
Reference	GSM 27.005; 3GPP TS 23.040; 3GPP TS 23.038	

5.1.5.2.3. Show Text Mode Parameters - +CSDH

+CSDH - Show Text Mode Parameters		SELINT 2
AT+CSDH=[<show>]	<p>Set command controls whether detailed header information is shown in text mode (AT+CMGF=1) result codes.</p> <p>Parameter: <show> 0 - do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dcs>) nor <length>, <toda> or <tooa> in +CMT, +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode. For SMS-COMMANDs in +CMGR result code do not show <pid>, <mn>, <da>, <toda>, <length> or <cdata> 1 - show the values in result codes</p>	
AT+CSDH?	<p>Read command reports the current setting in the format:</p> <p>+CSDH: <show></p>	
AT+CSDH=?	Test command reports the supported range of values for parameter <show>	
Reference	GSM 27.005	



5.1.5.2.4. Select Cell Broadcast - +CSCB

+CSCB -Select Cell Broadcast Message Types		SELINT 2
AT+CSCB=[<mode>[,<mids>[,<dcss>]]]	<p>Set command selects which types of Cell Broadcast Messages are to be received by the device.</p> <p>Parameters:</p> <p><mode></p> <p>0 - the message types defined by <mids> and <dcss> are accepted (factory default)</p> <p>1 - the message types defined by <mids> and <dcss> are rejected</p> <p><mids> - Message Identifiers, string type: all different possible combinations of the CBM message identifiers; default is empty string ("").</p> <p><dcss> - Data Coding Schemes, string type: all different possible combinations of CBM data coding schemes; default is empty string ("").</p> <p>Note: the current settings are stored through +CSAS</p>	
AT+CSCB?	Read command reports the current value of parameters <mode> , <mids> and <dcss> .	
AT+CSCB=?	Test command returns the range of values for parameter <mode> .	
Example	<p>AT+CSCB?</p> <p>+CSCB: 1,"", ""</p> <p>OK (all CBMs are accepted, none is rejected)</p> <p>AT+CSCB=0,"0,1,300-315,450","0-3"</p> <p>OK</p>	
Reference	GSM 27.005, 3GPP TS 23.041, 3GPP TS 23.038.	



5.1.5.2.5. Save Settings - +CSAS

+CSAS - Save Settings		SELINT 2
AT+CSAS [=<profile>]	<p>Execution command saves settings which have been made by the +CSCA, +CSMP and +CSCB commands in local non volatile memory.</p> <p>Parameter: <profile> 0 - it saves the settings to NVM (factory default). 1..n - SIM profile number; the value of n depends on the SIM and its max is 3.</p> <p>Note: certain settings may not be supported by the SIM and therefore they are always saved to NVM, regardless the value of <profile>.</p> <p>Note: If parameter is omitted the settings are saved in the non volatile memory.</p> <p>Note: +CSCB <mids> (Message Identifiers) parameter can be saved to SIM only if the “Cell broadcast message identifier selection” file is present on the SIM itself. This file, if present, has storage for only a single set of data. Therefore, it is not possible to save different <mids> in different SIM profiles; <mids> value, once changed and saved, will be the same for all SIM profiles.</p>	
AT+CSAS=?	Test command returns the possible range of values for the parameter <profile>.	
Reference	GSM 27.005	

5.1.5.2.6. Restore Settings - +CRES

+CRES - Restore Settings		SELINT 2
AT+CRES [=<profile>]	<p>Execution command restores message service settings saved by +CSAS command from either NVM or SIM.</p> <p>Parameter: <profile> 0 - it restores message service settings from NVM. 1..n - it restores message service settings from SIM. The value of n depends on the SIM and its max is 3.</p> <p>Note: certain settings may not be supported by the SIM and therefore they are always restored from NVM, regardless the value of <profile>.</p> <p>Note: If parameter is omitted the command restores message service settings from NVM.</p>	
AT+CRES=?	Test command returns the possible range of values for the parameter <profile>.	
Reference	GSM 27.005	



5.1.5.2.7. More message to send - +CMMS

+CMMS – More Message to Send		SELINT 2
AT+CMMS=[<n>]	<p>Set command controls the continuity of SMS relay protocol link. When feature is enabled (and supported by network) multiple messages can be sent much faster as link is kept open.</p> <p>Parameter:</p> <p><n></p> <ul style="list-style-type: none"> 0 - disable (factory default) 1 - keep enabled until the time between the response of the latest message send command (+CMGS, +CMSS, etc.) and the next send command exceeds 5 seconds, then the link is closed and the parameter <n> is automatically reset to 0 2 - enable (if the time between the response of the latest message send command and the next send command exceeds 5 seconds, the link is closed but the parameter <n> remains set to 2) 	
AT+CMMS?	<p>Read command reports the current value of the parameter <n> in the format:</p> <p>+CMMS: <n></p>	
AT+CMMS=?	Test command returns the range of supported <n>	
Reference	3GPP TS 27.005	



5.1.5.3. Message Receiving And Reading

5.1.5.3.1. New Message Indications - +CNMI

+CNMI - New Message Indications To Terminal Equipment	SELINT 2
<p>AT+CNMI=[<mode>[,<mt> [,<bm>[,<ds> [,<bfr>]]]]]</p>	<p>Set command selects the behaviour of the device on how the receiving of new messages from the network is indicated to the DTE.</p> <p>Parameter:</p> <p><mode> - unsolicited result codes buffering option</p> <ul style="list-style-type: none"> 0 - Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications. 1 - Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved, otherwise forward them directly to the TE. 2 - Buffer unsolicited result codes in the TA in case the DTE is busy and flush them to the TE after reservation. Otherwise forward them directly to the TE. 3 - if <mt> is set to 1 an indication via 100 ms break is issued when a SMS is received while the module is in GPRS online mode. It enables the hardware ring line for 1 s. too. <p><mt> - result code indication reporting for SMS-DELIVER</p> <ul style="list-style-type: none"> 0 - No SMS-DELIVER indications are routed to the TE and messages are stored in SIM. 1 - If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using the following unsolicited result code: +CMTI: <mems>,<index> where: <ul style="list-style-type: none"> <mems> - memory storage where the new message is stored (see +CPMS) <index> - location on the memory where SMS is stored. 2 - SMS-DELIVERs (except class 2 messages and messages in the “store” message waiting indication group) are routed directly to the TE using the following unsolicited result code: <p style="text-align: center;">(PDU Mode)</p> <p>+CMT: <alpha>,<length><CR><LF><pdu> where: <ul style="list-style-type: none"> <alpha> - alphanumeric representation of originator/destination number corresponding to the entry found in MT phonebook; used character set should be the one selected with command +CSCS. <length> - PDU length <pdu> - PDU message </p> <p style="text-align: center;">(TEXT Mode)</p> <p>+CMT:<oa>,<alpha>,<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data> (the information written in italics will be present depending on +CSDH last setting) where:</p>



+CNMI - New Message Indications To Terminal Equipment	SELINT 2
	<p> <oa> - originating address, string type converted in the currently selected character set (see +CSCS) <alpha> - alphanumeric representation of <oa>; used character set should be the one selected with command +CSCS. <scts> - arrival time of the message to the SC <tooa>, <tosca> - type of number <oa> or <sca>: 129 - number in national format 145 - number in international format (contains the "+") <fo> - first octet of 3GPP TS 23.040 <pid> - Protocol Identifier <dcs> - Data Coding Scheme <sca> - Service Centre address, string type, converted in the currently selected character set (see +CSCS) <length> - text length <data> - TP-User-Data <ul style="list-style-type: none"> • If <dcs> indicates that GSM03.38 default alphabet is used and <fo> indicates that GSM03.40 TP-User-Data-Header-Indication is not set (bit 6 of <fo> is 0), each character of GSM alphabet will be converted into current TE character set (see +CSCS) • If <dcs> indicates that 8-bit or UCS2 data coding scheme is used or <fo> indicates that GSM03.40 TP-User-Data-Header-Indication is set (bit 6 of <fo> is 1), each 8-bit octet will be converted into two IRA character long hexadecimal number (e.g. octet 0x2A will be converted as two characters 0x32 0x41) <p>Class 2 messages and messages in the “store” message waiting indication group result in indication as defined in <mt>=1.</p> <p>3 - Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.</p> <p><bm> - broadcast reporting option</p> <p>0 - Cell Broadcast Messages are not sent to the DTE</p> <p>2 - New Cell Broadcast Messages are sent to the DTE with the unsolicited result code:</p> <p style="text-align: center;">(PDU Mode)</p> <p>+CBM: <length><CR><LF><PDU></p> <p>where:</p> <p><length> - PDU length <PDU> - message PDU</p> <p style="text-align: center;">(TEXT Mode)</p> <p>+CBM:<sn>,<mid>,<dcs>,<pag>,<pags><CR><LF><data></p> <p>where:</p> <p><sn> - message serial number <mid> - message ID</p> </p>



+CNMI - New Message Indications To Terminal Equipment	SELINT 2
	<p><dc> - Data Coding Scheme <pag> - page number <pags> - total number of pages of the message <data> - CBM Content of Message</p> <ul style="list-style-type: none"> • If <dc> indicates that GSM03.38 default alphabet is used , each character of GSM alphabet will be converted into current TE character set (see +CSCS) • If <dc> indicates that 8-bit or UCS2 data coding scheme is used, each 8-bit octet will be converted into two IRA character long hexadecimal number (e.g. octet 0x2A will be converted as two characters 0x32 0x41) <p><ds> - SMS-STATUS-REPORTs reporting option 0 - status report receiving is not reported to the DTE and is not stored 1 - the status report is sent to the DTE with the following unsolicited result code:</p> <p style="text-align: center;">(PDU Mode)</p> <p>+CDS: <length><CR><LF><PDU> where: <length> - PDU length <PDU> - message PDU</p> <p style="text-align: center;">(TEXT Mode)</p> <p>+CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> where: <fo> - first octet of the message PDU <mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format <ra> - recipient address, string type, represented in the currently selected character set (see +CSCS) <tora> - type of number <ra> <scts> - arrival time of the message to the SC <dt> - sending time of the message <st> - message status as coded in the PDU</p> <p>2 - if a status report is stored, then the following unsolicited result code is sent: +CDSI: <memr>,<index></p> <p>where: <memr> - memory storage where the new message is stored "SM" <index> - location on the memory where SMS is stored</p> <p><bfr> - buffered result codes handling method: 0 - TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode>=1..3 is entered (OK response shall be given before flushing the codes) 1 - TA buffer of unsolicited result codes defined within this command is cleared</p>



+CNMI - New Message Indications To Terminal Equipment							SELINT 2																												
			2	Route msg to TE: +CMT^s	Route msg to TE: +CMT^l	Store in SIM - Send ind +CMTI	Route msg to TE: +CMT^l	Store in <mems> - Send ind +CMTI																											
			3	Store in <mems> - Send ind +CMTI	Store in <mems>- Send ind +CMTI	Store in SIM - Send ind +CMTI	Route msg to TE: +CMT^l	Store in <mems> - Send ind +CMTI																											
where <mems> is the memory where the received messages are stored (see +CPMS)																																			
Note	It has been necessary to take the following decision to get over an incoherence problem, due to the possibility to have contemporaneous different settings of parameter <ds> in different sessions (see #PORTCFG and +CMUX):																																		
<table><tr><td colspan="4"><ds> settings in different sessions</td><td colspan="5"></td></tr><tr><td colspan="4"><ds>=1 for session "0" AND <ds>=2 for at least one of the other sessions</td><td colspan="5">URC +CDS is shown only on session "0" and no status report is stored on SIM</td></tr><tr><td colspan="4"><ds>=0 for session "0" AND <ds>=2 for at least one of the other sessions</td><td colspan="5">no URC is shown on any session and no status report is stored on SIM</td></tr></table>									<ds> settings in different sessions									<ds>=1 for session "0" AND <ds>=2 for at least one of the other sessions				URC +CDS is shown only on session "0" and no status report is stored on SIM					<ds>=0 for session "0" AND <ds>=2 for at least one of the other sessions				no URC is shown on any session and no status report is stored on SIM				
<ds> settings in different sessions																																			
<ds>=1 for session "0" AND <ds>=2 for at least one of the other sessions				URC +CDS is shown only on session "0" and no status report is stored on SIM																															
<ds>=0 for session "0" AND <ds>=2 for at least one of the other sessions				no URC is shown on any session and no status report is stored on SIM																															

⁸ The SM is not stored!



5.1.5.3.2. New message acknowledgement - +CNMA

+CNMA – New Message Acknowledgement	
AT+CNMA	<p>Execution command confirms correct reception of a new message (SMS-DELIVER or SMS-STATUS-REPORT) which is routed directly to the TE.</p> <p>Acknowledge with +CNMA is possible only if the +CSMS parameter is set to 1 (+CSMS=1) when a +CMT or +CDS indication is shown.</p> <p>If no acknowledgement is given within the network timeout (17 seconds), an RP-ERROR is sent to the network, the <mt> and <ds> parameters of the +CNMI command are then reset to zero (do not show new message indication).</p> <p>If command is executed, but no acknowledgement is expected, or some other ME related error occurs, final result code +CMS ERROR: <err> is returned.</p> <p>The AT command syntax and functionalities are different between SMS PDU Mode and SMS Text Mode, as explained below.</p>
<i>(PDU Mode)</i> AT+CNMA[=<n>[,<length>[<CR>PDU is given<ctrl-Z/ESC]]]	<p>Either positive (RP-ACK) or negative (RP-ERROR) acknowledgement to the network is possible. Parameter <n> defines which one will be sent. Optionally (when <length> is greater than zero) an acknowledgement TPDU (SMS-DELIVER-REPORT for RP-ACK or RP-ERROR) may be sent to the network. The entering of PDU is done similarly as specified in command Send Message +CMGS, except that the SMSC address field is not present.</p> <p>Parameter:</p> <p><n> - Type of acknowledgement in PDU mode</p> <ul style="list-style-type: none"> 0 : send RP-ACK without PDU (same as TEXT mode) 1 : send RP-ACK with optional PDU message. 2 : send RP-ERROR with optional PDU message. <p><length> : Length of the PDU message.</p>
<i>(Text Mode)</i> AT+CNMA	Only positive acknowledgement to network (RP-ACK) is possible.
<i>(PDU Mode)</i> AT+CNMA=?	Test command returns the possible range of values for the parameter <n>
<i>(Text Mode)</i> AT+CNMA=?	Test command returns the OK result code.
Notes	<p>1 - In case that a directly routed message must be buffered in ME/TA (possible when +CNMI parameter <mode> equals 0 or 2) or AT interpreter remains too long in a state where result codes cannot be sent to TE (e.g. user is entering a message using +CMGS), acknowledgement (RP-ACK) is sent to the network without waiting +CNMA command from TE.</p>



+CNMA – New Message Acknowledgement	
	<p>2 - It has been necessary to take the following decision to get over any incoherence problem, due to the possibility to have contemporaneous different settings of parameter <mt> and <ds> of the +CNMI command in different sessions (see #PORTCFG and +CMUX): only the <mt> and <ds> setting for session “0” are considered as valid to decide if +CNMA acknowledgment is expected or not.</p>
Example	<p style="text-align: center;">(PDU Mode)</p> <p>AT+CSMS=1 +CSMS: 1,1,1 OK</p> <p><i>Set PDU mode.</i> AT+CMGF=0 OK</p> <p>AT+CNMI=2,2,0,0,0 OK</p> <p><i>Message is received from network.</i> +CMT: "",70 06816000585426000480980600F170110370537284...</p> <p><i>Send positive acknowledgement to the network.</i> AT+CNMA=0 OK</p> <p><i>Message is received from network.</i> +CMT: "",70 06816000585426000480980600F170110370537284...</p> <p><i>Send negative acknowledgment (Unspecified error) to the network.</i> AT+CNMA=2,3<CR> > 00FF00 <Ctrl-Z> OK</p> <p style="text-align: center;">(Text Mode)</p> <p>AT+CSMS=1 +CSMS: 1,1,1 OK</p> <p><i>Set Text mode.</i> AT+CMGF=1 OK</p>



+CNMA – New Message Acknowledgement	
	<p>AT+CNMI=2,2,0,0,0 OK</p> <p><i>Message is received from network.</i> +CMT: "+821020955219" ,,"07/07/26,20:09:07+36" TEST MESSAGE</p> <p><i>Send positive acknowledgement to the network.</i> AT+CNMA OK</p>
Reference	3GPP TS 27.005

5.1.5.3.3. List Messages - +CMGL

+CMGL - List Messages	SELINT 2
AT+CMGL [=<stat>]	<p>Execution command reports the list of all the messages with status value <stat> stored into <memr> message storage (<memr> is the message storage for read and delete SMs as last settings of command +CPMS).</p> <p>The parameter type and the command output depend on the last settings of command +CMGF (message format to be used)</p> <p style="text-align: center;">(PDU Mode)</p> <p>Parameter:</p> <p><stat></p> <ul style="list-style-type: none"> 0 - new message 1 - read message 2 - stored message not yet sent 3 - stored message already sent 4 - all messages. <p>If there is at least one message to be listed the representation format is:</p> <p>+CMGL: <index>,<stat>,<alpha>,<length><CR><LF><pdu>[<CR><LF> +CMGL: <index>,<stat>,<alpha>,<length><CR><LF><pdu>[...]]</p> <p>where:</p> <ul style="list-style-type: none"> <index> - message position in the memory storage list. <stat> - status of the message <alpha> - string type alphanumeric representation of <da> or <oa>, corresponding to an entry found in the phonebook; used character set is the one selected with command +CSCS. <length> - length of the PDU in bytes <pdu> - message in PDU format according to GSM 3.40



+CMGL - List Messages	SELINT 2
	<p style="text-align: center;">(Text Mode)</p> <p>Parameter:</p> <p><stat> "REC UNREAD" - new message "REC READ" - read message "STO UNSENT" - stored message not yet sent "STO SENT" - stored message already sent "ALL" - all messages.</p> <p>The representation format for stored messages (either sent or unsent) or received messages (either read or unread, not message delivery confirm) is (the information written in <i>italics</i> will be present depending on +CSDH last setting):</p> <p>+CMGL: <index>,<stat>,<oa/da>,<alpha>,<scts>[,<tooa/toda>,<length>]<CR><LF><data>[<CR><LF> +CMGL: <index>,<stat>,<oa/da>,<alpha>,<scts>[,<tooa/toda>,<length>]<CR><LF><data>[...]]</p> <p>where:</p> <p><index> - message position in the storage <stat> - message status <oa/da> - originator/destination address, string type , represented in the currently selected character set (see +CSCS) <alpha> - string type alphanumeric representation of <da> or <oa>, corresponding to an entry found in the phonebook; used character set is the one selected with command +CSCS. <scts> - TP-Service Centre Time Stamp in Time String Format <tooa/toda> - type of number <oa/da> 129 - number in national format 145 - number in international format (contains the "+") <length> - text length <data> - TP-User-Data</p> <ul style="list-style-type: none"> • If <dcs> indicates that GSM03.38 default alphabet is used , each character of GSM alphabet will be converted into current TE character set (see +CSCS) • If <dcs> indicates that 8-bit or UCS2 data coding scheme is used, each 8-bit octet will be converted into two IRA character long hexadecimal number (e.g. octet 0x2A will be converted as two characters 0x32 0x41) • If <fo> indicates that a UDH is present each 8-bit octet will be converted into two IRA character long hexadecimal number. The <length> indicates text length in characters without UDH length. <p>If there is at least one message delivery confirm to be listed the representation format is:</p>



+CMGL - List Messages		SELINT 2
	<p>+CMGL: <index>,<stat>,<fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> [<CR><LF> +CMGL: <index>,<stat>,<fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> [...]]</p> <p>where <index> - message position in the storage <stat> - message status <fo> - first octet of the message PDU <mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format <ra> - recipient address, string type , represented in the currently selected character set (see +CSCS) <tora> - type of number <ra> <scts> - arrival time of the message to the SC <dt> - sending time of the message <st> - message status as coded in the PDU</p> <p>Note: If parameter is omitted the command returns the list of sms with “REC UNREAD” status.</p> <p>Note: the order in which the messages are reported by +CMGL corresponds to their position in the memory storage</p>	
AT+CMGL=?	Test command returns a list of supported <stat>s	
Reference	GSM 27.005, 3GPP TS 23.040	

5.1.5.3.4. Read Message - +CMGR

+CMGR - Read Message		SELINT 2
AT+CMGR=<index>	<p>Execution command reports the message with location value <index> from <memr> message storage (<memr> is the message storage for read and delete SMs as last settings of command +CPMS).</p> <p>Parameter: <index> - message index.</p> <p>The output depends on the last settings of command +CMGF (message format to be used)</p> <p style="text-align: center;">(PDU Mode)</p> <p>If there is a message in location <index>, the output has the following format:</p> <p>+CMGR: <stat>,<alpha>,<length><CR><LF><pdu></p> <p>where</p>	



+CMGR - Read Message	SELINT 2
	<p><stat> - status of the message 0 - new message 1 - read message 2 - stored message not yet sent 3 - stored message already sent</p> <p><alpha> - string type alphanumeric representation of <da> or <oa>, corresponding to an entry found in the phonebook; used character set is the one selected with command +CSCS.</p> <p><length> - length of the PDU in bytes.</p> <p><pdu> - message in PDU format according to GSM 3.40.</p> <p>The status of the message and entire message data unit <pdu> is returned.</p> <p style="text-align: center;">(Text Mode)</p> <p>If there is a Received message in location <index> the output format is (the information written in <i>italics</i> will be present depending on +CSDH last setting): +CMGR: <stat>,<oa>,<alpha>,<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data></p> <p>If there is either a Sent or an Unsent message in location <index> the output format is: +CMGR: <stat>,<da>,<alpha>[,<toda>,<fo>,<pid>,<dcs>,<vp>],<sca>,<tosca>,<length>]<CR><LF><data></p> <p>If there is a Message Delivery Confirm in location <index> the output format is: +CMGR: <stat>,<fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st></p> <p>where:</p> <p><stat> - status of the message "REC UNREAD" - new received message unread "REC READ" - received message read "STO UNSENT" - message stored not yet sent "STO SENT" - message stored already sent</p> <p><fo> - first octet of the message PDU</p> <p><mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format</p> <p><ra> - recipient address, string type, represented in the currently selected character set (see +CSCS)</p> <p><tora> - type of number <ra></p> <p><scts> - arrival time of the message to the SC</p> <p><dt> - sending time of the message</p> <p><st> - message status as coded in the PDU</p> <p><pid> - Protocol Identifier</p> <p><dcs> - Data Coding Scheme</p> <p><vp> - Validity Period; its format depends on SMS-SUBMIT <fo> setting (see +CSMP):</p>



+CMGR - Read Message	SELINT 2
	<p>a) <i>Not Present</i> if <fo> tells that the <i>Validity Period Format</i> is Not Present</p> <p>b) <i>Integer</i> type if <fo> tells that the <i>Validity Period Format</i> is Relative</p> <p>c) <i>Quoted time-string</i> type if <fo> tells that the <i>Validity Period Format</i> is Absolute</p> <p>d) Quoted hexadecimal representation of 7 octets if <fo> tells that the <i>Validity Period Format</i> is Enhanced.</p> <p><oa> - Originator address, string type represented in the currently selected character set (see +CSCS)</p> <p><da> - Destination address, string type represented in the currently selected character set (see +CSCS)</p> <p><alpha> - string type alphanumeric representation of <da> or <oa>, corresponding to an entry found in the phonebook; used character set is the one selected with command +CSCS.</p> <p><sca> - Service Centre number</p> <p><tooa>, <toda>, <tosca> - type of number <oa>, <da>, <sca></p> <p>129 - number in national format</p> <p>145 - number in international format (contains the "+")</p> <p><length> - text length</p> <p><data> - TP-User_data</p> <ul style="list-style-type: none"> • If <dcs> indicates that GSM03.38 default alphabet is used, each character of GSM alphabet will be converted into current TE character set (see +CSCS) • If <dcs> indicates that 8-bit or UCS2 data coding scheme is used, each 8-bit octet will be converted into two IRA character long hexadecimal number (e.g. octet 0x2A will be converted as two characters 0x32 0x41) <p>Note: in both cases if status of the message is 'received unread', status in the storage changes to 'received read'.</p>
AT+CMGR=?	Test command returns the OK result code
Reference	GSM 27.005



5.1.5.4. Message Sending And Writing

5.1.5.4.1. Send Message - +CMGS

+CMGS - Send Message	SELINT 2
<p>(PDU Mode) AT+CMGS= <length></p>	<p>(PDU Mode) Execution command sends to the network a message.</p> <p>Parameter: <length> - length of the PDU to be sent in bytes (excluding the SMSC address octets). 7..164</p> <p>After command line is terminated with <CR>, the device responds sending a four character sequence prompt: <CR><LF><greater_than><space> (IRA 13, 10, 62, 32)</p> <p>and waits for the specified number of bytes.</p> <p>Note: the DCD signal shall be in ON state while PDU is given.</p> <p>Note: the echoing of given characters back from the TA is controlled by echo command E</p> <p>Note: the PDU shall be hexadecimal format (each octet of the PDU is given as two IRA character long hexadecimal number) and given in one line.</p> <p>Note: when the length octet of the SMSC address (given in the PDU) equals zero, the SMSC address set with command +CSCA is used; in this case the SMSC Type-of-Address octet shall not be present in the PDU.</p> <p>To send the message issue Ctrl-Z char (0x1A hex). To exit without sending the message issue ESC char (0x1B hex).</p> <p>If message is successfully sent to the network, then the result is sent in the format: +CMGS: <mr></p> <p>where <mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format.</p> <p>Note: if message sending fails for some reason, an error code is reported.</p> <p>Note: care must be taken to ensure that during the command execution, which may take several seconds, no other SIM interacting commands are issued.</p>



+CMGS - Send Message	SELINT 2
<p>(Text Mode) AT+CMGS=<da> [,<toda>]</p>	<p>(Text Mode)</p> <p>Execution command sends to the network a message.</p> <p>Parameters:</p> <p><da> - destination address, string type represented in the currently selected character set (see +CSCS).</p> <p><toda> - type of destination address 129 - number in national format 145 - number in international format (contains the "+")</p> <p>After command line is terminated with <CR>, the device responds sending a four character sequence prompt:</p> <p><CR><LF><greater_than><space> (IRA 13, 10, 62, 32)</p> <p>After this prompt text can be entered; the entered text should be formatted as follows:</p> <ul style="list-style-type: none"> - if current <dcs> (see +CSMP) indicates that GSM03.38 default alphabet is used and current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is not set, then ME/TA converts the entered text into GSM alphabet, according to GSM 27.005, Annex A; backspace can be used to delete last character and carriage returns can be used; after every <CR> entered by the user the sequence <CR><LF><greater_than><space> is sent to the TE. - if current <dcs> (see +CSMP) indicates that 8-bit or UCS2 data coding scheme is used or current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is set, the entered text should consist of two IRA character long hexadecimal numbers which ME/TA converts into 8-bit octet (e.g. the 'asterisk' will be entered as 2A (IRA50 and IRA65) and this will be converted to an octet with integer value 0x2A) <p>Note: the DCD signal shall be in ON state while text is entered.</p> <p>Note: the echoing of entered characters back from the TA is controlled by echo command E</p> <p>To send the message issue Ctrl-Z char (0x1A hex). To exit without sending the message issue ESC char (0x1B hex).</p> <p>If message is successfully sent to the network, then the result is sent in the format:</p> <p>+CMGS: <mr></p> <p>where <mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format.</p>



+CMGS - Send Message		SELINT 2
	<p>Note: if message sending fails for some reason, an error code is reported.</p> <p>Note: care must be taken to ensure that during the command execution, which may take several seconds, no other SIM interacting commands are issued.</p> <p>Note: it is possible to send a concatenation of at most 10 SMs; the maximum number of chars depends on the <dc>: 1520 chars if 3GPP TS 23.038 default alphabet is used, 1330 chars if 8-bit is used, 660 chars if UCS2 is used. If entered text is longer than this maximum value an error is raised</p>	
AT+CMGS=?	Test command returns the OK result code.	
Note	To avoid malfunctions is suggested to wait for the +CMGS: <mr> or +CMS ERROR: <err> response before issuing further commands.	
Reference	GSM 27.005	

5.1.5.4.2. Send Message From Storage - +CMSS

+CMSS - Send Message From Storage		SELINT 2
AT+CMSS= <index>[,<da> [,<toda>]]	<p>Execution command sends to the network a message which is already stored in the <memw> storage (see +CPMS) at the location <index>.</p> <p>Parameters:</p> <p><index> - location value in the message storage <memw> of the message to send</p> <p><da> - destination address, string type represented in the currently selected character set (see +CSCS); if it is given it shall be used instead of the one stored with the message.</p> <p><toda> - type of destination address</p> <p>129 - number in national format</p> <p>145 - number in international format (contains the "+")</p> <p>If message is successfully sent to the network then the result is sent in the format:</p> <p>+CMSS: <mr></p> <p>where:</p> <p><mr> - message reference number.</p> <p>If message sending fails for some reason, an error code is reported:</p> <p>+CMS ERROR:<err></p> <p>Note: to store a message in the <memw> storage see command +CMGW.</p> <p>Note: care must be taken to ensure that during the command execution, which may take several seconds, no other SIM interacting commands are issued.</p>	
AT+CMSS=?	Test command returns the OK result code.	



+CMSS - Send Message From Storage		SELINT 2
Note	To avoid malfunctions is suggested to wait for the +CMSS: <mr> or +CMS ERROR: <err> response before issuing further commands.	
Reference	GSM 27.005	

5.1.5.4.3. Write Message To Memory - +CMGW

+CMGW - Write Message To Memory		SELINT 2
<i>(PDU Mode)</i> AT+CMGW= <length> [,<stat>]	<p align="center">(PDU Mode)</p> <p>Execution command writes in the <memw> memory storage a new message.</p> <p>Parameter:</p> <p><length> - length in bytes of the PDU to be written. 7..164</p> <p><stat> - message status.</p> <p>0 - new message (received unread message; default for DELIVER messages (3GPP TS 23.040 SMS-DELIVER messages))</p> <p>1 - read message</p> <p>2 - stored message not yet sent (default for SUBMIT messages(3GPP TS 23.040 SMS-SUBMIT messages))</p> <p>3 - stored message already sent</p> <p>The device responds to the command with the prompt '>' and waits for the specified number of bytes.</p> <p>To write the message issue Ctrl-Z char (0x1A hex).</p> <p>To exit without writing the message issue ESC char (0x1B hex).</p> <p>If message is successfully written in the memory, then the result is sent in the format:</p> <p>+CMGW: <index></p> <p>where:</p> <p><index> - message location index in the memory <memw>.</p> <p>If message storing fails for some reason, an error code is reported.</p> <p>Note: care must be taken to ensure that during the command execution, no other SIM interacting commands are issued.</p> <p>Note: in PDU mode, not only SUBMIT messages can be stored in SIM, but also DELIVER and STATUS REPORT messages (3GPP TS 23.040 SMS-STATUS-REPORT messages). SUBMIT messages can only be stored with status 2 or 3; DELIVER and STATUS REPORT messages can only be stored with status 0 or 1.</p>	



+CMGW - Write Message To Memory	SELINT 2
<p>(Text Mode) AT+CMGW[=<da> [,<toda> [,<stat>]]]</p>	<p>(Text Mode)</p> <p>Execution command writes in the <memw> memory storage a new message.</p> <p>Parameters:</p> <p><da> - destination address, string type represented in the currently selected character set (see +CSCS).</p> <p><toda> - type of destination address. 129 - number in national format 145 - number in international format (contains the "+")</p> <p><stat> - message status. "REC UNREAD" - new received message unread (default for DELIVER messages) "REC READ" - received message read "STO UNSENT" - message stored not yet sent (default for SUBMIT messages) "STO SENT" - message stored already sent</p> <p>After command line is terminated with <CR>, the device responds sending a four character sequence prompt:</p> <p><CR><LF><greater_than><space> (IRA 13, 10, 62, 32)</p> <p>After this prompt text can be entered; the entered text should be formatted as follows:</p> <ul style="list-style-type: none"> - if current <dc> (see +CSMP) indicates that GSM03.38 default alphabet is used and current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is not set, then ME/TA converts the entered text into GSM alphabet, according to GSM 27.005, Annex A; backspace can be used to delete last character and carriage returns can be used; after every <CR> entered by the user the sequence <CR><LF><greater_than><space> is sent to the TE. - if current <dc> (see +CSMP) indicates that 8-bit or UCS2 data coding scheme is used or current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is set, the entered text should consist of two IRA character long hexadecimal numbers which ME/TA converts into 8-bit octet (e.g. the 'asterisk' will be entered as 2A (IRA50 and IRA65) and this will be converted to an octet with integer value 0x2A) <p>Note: the DCD signal shall be in ON state while text is entered.</p> <p>Note: the echoing of entered characters back from the TA is controlled by echo command E</p> <p>To write the message issue Ctrl-Z char (0x1A hex).</p> <p>To exit without writing the message issue ESC char (0x1B hex).</p>



+CMGW - Write Message To Memory		SELINT 2
	<p>If message is successfully written in the memory, then the result is sent in the format:</p> <p>+CMGW: <index> where: <index> - message location index in the memory <memw>.</p> <p>If message storing fails for some reason, an error code is reported.</p> <p>Note: care must be taken to ensure that during the command execution, no other SIM interacting commands are issued.</p> <p>Note: it is possible to save a concatenation of at most 10 SMs; the maximum number of chars depends on the <dc>: 1530 chars if 3GPP TS 23.038 default alphabet is used, 1340 chars if 8-bit is used, 670 chars if UCS2 is used. If entered text is longer than this maximum value an error is raised.</p> <p>Note: in text mode, not only SUBMIT messages can be stored in SIM, but also DELIVER messages. The type of saved message depends upon the current <fo> parameter (see +CSMP). For a DELIVER message, current <vp> parameter (see +CSMP) is used to set the message Service Centre Time Stamp <scts>, so it has to be an absolute time string, e.g. "09/01/12,11:15:00+04". SUBMIT messages can only be stored with status "STO UNSENT" or "STO SENT"; DELIVER messages can only be stored with status "REC UNREAD" or "REC READ".</p>	
AT+CMGW=?	Test command returns the OK result code.	
Reference	GSM 27.005	
Note	To avoid malfunctions is suggested to wait for the +CMGW: <index> or +CMS ERROR: <err> response before issuing further commands.	

5.1.5.4.4. Delete Message - +CMGD

+CMGD - Delete Message		SELINT 2
AT+CMGD= <index> [,<delflag>]	<p>Execution command deletes from memory <memr> the message(s).</p> <p>Parameter: <index> - message index in the selected storage <memr> that can have values form 1 to N, where N depends on the available space (see +CPMS) <delflag> - an integer indicating multiple message deletion request. 0 (or omitted) - delete message specified in <index> 1 - delete all read messages from <memr> storage, leaving unread messages and</p>	



+CMGD - Delete Message		SELINT 2
	<p>stored mobile originated messages (whether sent or not) untouched</p> <p>2 - delete all read messages from <memr> storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched</p> <p>3 - delete all read messages from <memr> storage, sent and unsent mobile originated messages, leaving unread messages untouched</p> <p>4 - delete all messages from <memr> storage.</p> <p>Note: if <delflag> is present and not set to 0 then, if <index> is greater than 0, <index> is ignored and ME shall follow the rules for <delflag> shown above.</p>	
AT+CMGD=?	<p>Test command shows the valid memory locations and optionally the supported values of <delflag>.</p> <p>+CMGD: (supported <index>s list)[,(supported <delflag>s list)]</p>	
Example	<p>AT+CMGD=?</p> <p>+CMGD: (1,2,3,6,7,17,18,19,20,37,38,39,47),(0-4)</p> <p>OK</p>	
Reference	GSM 27.005	

5.1.5.4.5. Select service for MO SMS messages - +CGSMS

+CGSMS – Select service for MO SMS messages		SELINT 2
AT+CGSMS=[<service>]	<p>The set command is used to specify the service or service preference that the MT will use to send MO SMS messages.</p> <p><service>: a numeric parameter which indicates the service or service preference to be used</p> <p>0 - GPRS</p> <p>1 - circuit switched (default)</p> <p>2 - GPRS preferred (use circuit switched if SMS via GPRS service not available or GPRS not registered)</p> <p>3 - circuit switched preferred (use GPRS if SMS via GSM service not available or GSM not registered)</p> <p>Note: the <service> value is saved on NVM as global parameter</p>	
AT+CGSMS?	<p>The read command returns the currently selected service or service preference in the form:</p> <p>+CGSMS: <service></p>	
AT+CGSMS=?	Test command reports the supported list of currently available <service> s.	



5.1.6. Custom AT Commands

5.1.6.1. General Configuration AT Commands

5.1.6.1.1. Set AT Interface and trace interface - #PORTCFG

#PORTCFG – connect physical ports to Service Access Points		SELINT 2
AT#PORTCFG=<Variant>	<p>AT#PORTCFG command allows to connect Service Access Points (software anchorage points) to the external physical ports giving a great flexibility. Examples of Service Access Points: AT Parser Instance #1,#2, #3, TT(Telit Trace), 3G(Trace).</p> <p><Variant> parameter range: 0 ÷ 10; factory setting: 1. Please, refer to “HE Family Ports Arrangements User Guide” document for a detailed explanation of all port configurations</p> <p>Note: in order to enable the set port configuration, the module has to be rebooted.</p>	
AT#PORTCFG?	<p>Read command reports: <requested> value shows the requested configuration that will be activated on the next power off /on of the module; <active> value shows the actual configuration.</p> <p>#PORTCFG: <requested>,<active></p>	
AT#PORTCFG=?	<p>Test command reports a brief description of the supported ports arrangement solutions. For each <Variant> parameter value are displayed, on one row, the allowed couples formed by: a physical port and the logically connected internal software Access Point (AT, TT). On each row are reported the couples concerning both configurations: USB cable plugged into USB port or not plugged in.</p> <p>AT, indicated on each command row result, can be AT0, AT1, or AT2.</p>	



5.1.6.1.2. Network Selection Menu Availability - +PACSP

#PACSP - Network Selection Menu Availability		SELINT 2
AT+PACSP?	Read command returns the current value of the <mode> parameter in the format: +PACSP<mode> where: <mode> - PLMN mode bit (in CSP file on the SIM) 0 - restriction of menu option for manual PLMN selection. 1 - no restriction of menu option for Manual PLMN selection.	
AT+PACSP=?	Test command returns the OK result code.	

5.1.6.1.3. Manufacturer Identification - #CGMI

#CGMI - Manufacturer Identification		SELINT 2
AT#CGMI	Execution command returns the device manufacturer identification code with command echo.	
AT#CGMI=?	Test command returns the OK result code.	

5.1.6.1.4. Model Identification - #CGMM

#CGMM - Model Identification		SELINT 2
AT#CGMM	Execution command returns the device model identification code with command echo.	
AT#CGMM=?	Test command returns the OK result code.	

5.1.6.1.5. Revision Identification - #CGMR

#CGMR - Revision Identification		SELINT 2
AT#CGMR	Execution command returns device software revision number with command echo.	
AT#CGMR=?	Test command returns the OK result code.	

5.1.6.1.6. Product Serial Number Identification - #CGSN

#CGSN - Product Serial Number Identification		SELINT 2
AT#CGSN	Execution command returns the product serial number, identified as the IMEI of the mobile, with command echo.	
AT#CGSN=?	Test command returns the OK result code.	



5.1.6.1.7. International Mobile Subscriber Identity (IMSI) - #CIMI

#CIMI - International Mobile Subscriber Identity (IMSI)		SELINT 2
AT#CIMI	Execution command returns the international mobile subscriber identity, identified as the IMSI number, with command echo.	
AT#CIMI=?	Test command returns the OK result code.	

5.1.6.1.8. Read ICCID (Integrated Circuit Card Identification) - #CCID

#CCID - Read ICCID		SELINT 2
AT#CCID	Execution command reads on SIM the ICCID (card identification number that provides a unique identification number for the SIM)	
AT#CCID=?	Test command returns the OK result code.	

5.1.6.1.9. Service Provider Name - #SPN

#SPN - Service Provider Name		SELINT 2
AT#SPN	<p>Execution command returns the service provider string contained in the SIM field SPN, in the format:</p> <p>#SPN: <spn></p> <p>where:</p> <p><spn> - service provider string contained in the SIM field SPN, represented in the currently selected character set (see +CSCS).</p> <p>Note: if the SIM field SPN is empty, the command returns just the OK result code.</p>	
AT#SPN=?	Test command returns the OK result code.	

5.1.6.1.10. Extended Numeric Error report - #CEER

#CEER – Extended numeric error report		SELINT 2
AT#CEER	<p>Execution command causes the TA to return a numeric code in the format</p> <p>#CEER: <code></p> <p>which should offer the user of the TA a report of the reason for</p> <ul style="list-style-type: none"> the failure in the last unsuccessful call setup (originating or answering); the last call release; the last unsuccessful GPRS attach or unsuccessful PDP context activation; the last GPRS detach or PDP context deactivation. <p>Note: if none of the previous conditions has occurred since power up then 0 is reported (i.e. No error, see below)</p> <p><code> values as follows</p>	



#CEER – Extended numeric error report		SELINT 2
	Value	Diagnostic
	0	No error
	1	Unassigned (unallocated) number
	3	No route to destination
	6	Channel unacceptable
	8	Operator determined barring
	16	Normal call clearing
	17	User busy
	18	No user responding
	19	User alerting, no answer
	21	Call rejected
	22	Number changed
	26	Non selected user clearing
	27	Destination out of order
	28	Invalid number format (incomplete number)
	29	Facility rejected
	30	Response to STATUS ENQUIRY
	31	Normal, unspecified
	34	No circuit/channel available
	38	Network out of order
	41	Temporary failure
	42	Switching equipment congestion
	43	Access information discarded
	44	Requested circuit/channel not available
	47	Resources unavailable, unspecified
	49	Quality of service unavailable
	50	Requested facility not subscribed
	55	Incoming calls barred with in the CUG
	57	Bearer capability not authorized
	58	Bearer capability not presently available
	63	Service or option not available, unspecified
	65	Bearer service not implemented
	68	ACM equal to or greater than ACMmax
	69	Requested facility not implemented
	70	Only restricted digital information bearer capability is available
	79	Service or option not implemented, unspecified
	81	Invalid transaction identifier value
	87	User not member of CUG
	88	Incompatible destination
	91	Invalid transit network selection
	95	Semantically incorrect message
	96	Invalid mandatory information



#CEER – Extended numeric error report		SELINT 2
	97	Message type non-existent or not implemented
	98	Message type not compatible with protocol state
	99	Information element non-existent or not implemented
	100	Conditional IE error
	101	Message not compatible with protocol state
	102	Recovery on timer expiry
	111	Protocol error, unspecified
	127	Interworking, unspecified
	<i>GPRS related errors</i>	
	224	MS requested detach
	225	NWK requested detach
	226	Unsuccessful attach cause NO SERVICE
	227	Unsuccessful attach cause NO ACCESS
	228	Unsuccessful attach cause GPRS SERVICE REFUSED
	229	PDP deactivation requested by NWK
	230	PDP deactivation cause LLC link activation Failed
	231	PDP deactivation cause NWK reactivation with same TI
	232	PDP deactivation cause GMM abort
	233	PDP deactivation cause LLC or SNDSCP failure
	234	PDP unsuccessful activation cause GMM error
	235	PDP unsuccessful activation cause NWK reject
	236	PDP unsuccessful activation cause NO NSAPI available
	237	PDP unsuccessful activation cause SM refuse
	238	PDP unsuccessful activation cause MMI ignore
	239	PDP unsuccessful activation cause Nb Max Session Reach
	256	PDP unsuccessful activation cause wrong APN
	257	PDP unsuccessful activation cause unknown PDP address or type
	258	PDP unsuccessful activation cause service not supported
	259	PDP unsuccessful activation cause QOS not accepted
	260	PDP unsuccessful activation cause socket error
	<i>Other custom values</i>	
	240	FDN is active and number is not in FDN
	241	Call operation not allowed
	252	Call barring on outgoing calls
	253	Call barring on incoming calls
	254	Call impossible
	255	Lower layer failure
AT#CEER=?	Test command returns OK result code.	
Reference	GSM 04.08	



5.1.6.1.11. Extended error report for Network Reject cause - #CEERNET

#CEERNET – Ext error report for Network reject cause		SELINT 2																																																																										
AT#CEERNET	Execution command causes the TA to return a numeric code in the format																																																																											
	#CEERNET: <code>																																																																											
	which should offer the user of the TA a report for the last mobility management(GMM/MM) or session management(SM) procedure not accepted by the network and a report of detach or deactivation causes from network.																																																																											
	<code> values as follows																																																																											
	<table><tr><th>Value</th><th>Diagnostic</th></tr><tr><td>2</td><td>IMSI UNKNOWN IN HLR</td></tr><tr><td>3</td><td>ILLEGAL MS</td></tr><tr><td>4</td><td>IMSI UNKNOWN IN VISITOR LR</td></tr><tr><td>5</td><td>IMEI NOT ACCEPTED</td></tr><tr><td>6</td><td>ILLEGAL ME</td></tr><tr><td>7</td><td>GPRS NOT ALLOWED</td></tr><tr><td>8</td><td>OPERATOR DETERMINED BARRING(SM cause failure)/ GPRS AND NON GPRS NOT ALLOWED(GMM cause failure)</td></tr><tr><td>9</td><td>MS IDENTITY CANNOT BE DERIVED BY NETWORK</td></tr><tr><td>10</td><td>IMPLICITLY DETACHED</td></tr><tr><td>11</td><td>PLMN NOT ALLOWED</td></tr><tr><td>12</td><td>LA NOT ALLOWED</td></tr><tr><td>13</td><td>ROAMING NOT ALLOWED</td></tr><tr><td>14</td><td>GPRS NOT ALLOWED IN THIS PLMN</td></tr><tr><td>15</td><td>NO SUITABLE CELLS IN LA</td></tr><tr><td>16</td><td>MSC TEMP NOT REACHABLE</td></tr><tr><td>17</td><td>NETWORK FAILURE</td></tr><tr><td>20</td><td>MAC FAILURE</td></tr><tr><td>21</td><td>SYNCH FAILURE</td></tr><tr><td>22</td><td>CONGESTION</td></tr><tr><td>23</td><td>GSM AUTHENTICATION UNACCEPTABLE</td></tr><tr><td>24</td><td>MBMS BEARER CAPABILITIES INSUFFICIENT FOR THE SERVICE</td></tr><tr><td>25</td><td>LLC OR SNDCP FAILURE</td></tr><tr><td>26</td><td>INSUFFICIENT RESOURCES</td></tr><tr><td>27</td><td>MISSING OR UNKNOWN APN</td></tr><tr><td>28</td><td>UNKNOWN PDP ADDRESS OR PDP TYPE</td></tr><tr><td>29</td><td>USER AUTHENTICATION FAILED</td></tr><tr><td>30</td><td>ACTIVATION REJECTED BY GGSN</td></tr><tr><td>31</td><td>ACTIVATION REJECTED UNSPECIFIED</td></tr><tr><td>32</td><td>SERVICE OPTION NOT SUPPORTED</td></tr><tr><td>33</td><td>REQ. SERVICE OPTION NOT SUBSCRIBED</td></tr><tr><td>34</td><td>SERV.OPTION TEMPORARILY OUT OF ORDER</td></tr><tr><td>35</td><td>NSAPI ALREADY USED</td></tr><tr><td>36</td><td>REGULAR DEACTIVATION</td></tr><tr><td>37</td><td>QOS NOT ACCEPTED</td></tr><tr><td>38</td><td>CALL CANNOT BE IDENTIFIED(MM cause failure) / SMN NETWORK FAILURE(SM cause failure)</td></tr><tr><td>39</td><td>REACTIVATION REQUIRED</td></tr></table>	Value	Diagnostic	2	IMSI UNKNOWN IN HLR	3	ILLEGAL MS	4	IMSI UNKNOWN IN VISITOR LR	5	IMEI NOT ACCEPTED	6	ILLEGAL ME	7	GPRS NOT ALLOWED	8	OPERATOR DETERMINED BARRING(SM cause failure)/ GPRS AND NON GPRS NOT ALLOWED(GMM cause failure)	9	MS IDENTITY CANNOT BE DERIVED BY NETWORK	10	IMPLICITLY DETACHED	11	PLMN NOT ALLOWED	12	LA NOT ALLOWED	13	ROAMING NOT ALLOWED	14	GPRS NOT ALLOWED IN THIS PLMN	15	NO SUITABLE CELLS IN LA	16	MSC TEMP NOT REACHABLE	17	NETWORK FAILURE	20	MAC FAILURE	21	SYNCH FAILURE	22	CONGESTION	23	GSM AUTHENTICATION UNACCEPTABLE	24	MBMS BEARER CAPABILITIES INSUFFICIENT FOR THE SERVICE	25	LLC OR SNDCP FAILURE	26	INSUFFICIENT RESOURCES	27	MISSING OR UNKNOWN APN	28	UNKNOWN PDP ADDRESS OR PDP TYPE	29	USER AUTHENTICATION FAILED	30	ACTIVATION REJECTED BY GGSN	31	ACTIVATION REJECTED UNSPECIFIED	32	SERVICE OPTION NOT SUPPORTED	33	REQ. SERVICE OPTION NOT SUBSCRIBED	34	SERV.OPTION TEMPORARILY OUT OF ORDER	35	NSAPI ALREADY USED	36	REGULAR DEACTIVATION	37	QOS NOT ACCEPTED	38	CALL CANNOT BE IDENTIFIED(MM cause failure) / SMN NETWORK FAILURE(SM cause failure)	39	REACTIVATION REQUIRED	
Value	Diagnostic																																																																											
2	IMSI UNKNOWN IN HLR																																																																											
3	ILLEGAL MS																																																																											
4	IMSI UNKNOWN IN VISITOR LR																																																																											
5	IMEI NOT ACCEPTED																																																																											
6	ILLEGAL ME																																																																											
7	GPRS NOT ALLOWED																																																																											
8	OPERATOR DETERMINED BARRING(SM cause failure)/ GPRS AND NON GPRS NOT ALLOWED(GMM cause failure)																																																																											
9	MS IDENTITY CANNOT BE DERIVED BY NETWORK																																																																											
10	IMPLICITLY DETACHED																																																																											
11	PLMN NOT ALLOWED																																																																											
12	LA NOT ALLOWED																																																																											
13	ROAMING NOT ALLOWED																																																																											
14	GPRS NOT ALLOWED IN THIS PLMN																																																																											
15	NO SUITABLE CELLS IN LA																																																																											
16	MSC TEMP NOT REACHABLE																																																																											
17	NETWORK FAILURE																																																																											
20	MAC FAILURE																																																																											
21	SYNCH FAILURE																																																																											
22	CONGESTION																																																																											
23	GSM AUTHENTICATION UNACCEPTABLE																																																																											
24	MBMS BEARER CAPABILITIES INSUFFICIENT FOR THE SERVICE																																																																											
25	LLC OR SNDCP FAILURE																																																																											
26	INSUFFICIENT RESOURCES																																																																											
27	MISSING OR UNKNOWN APN																																																																											
28	UNKNOWN PDP ADDRESS OR PDP TYPE																																																																											
29	USER AUTHENTICATION FAILED																																																																											
30	ACTIVATION REJECTED BY GGSN																																																																											
31	ACTIVATION REJECTED UNSPECIFIED																																																																											
32	SERVICE OPTION NOT SUPPORTED																																																																											
33	REQ. SERVICE OPTION NOT SUBSCRIBED																																																																											
34	SERV.OPTION TEMPORARILY OUT OF ORDER																																																																											
35	NSAPI ALREADY USED																																																																											
36	REGULAR DEACTIVATION																																																																											
37	QOS NOT ACCEPTED																																																																											
38	CALL CANNOT BE IDENTIFIED(MM cause failure) / SMN NETWORK FAILURE(SM cause failure)																																																																											
39	REACTIVATION REQUIRED																																																																											



#CEERNET – Ext error report for Network reject cause		SELINT 2
	40	NO PDP CTXT ACTIVATED(GMM cause failure)/ FEATURE NOT SUPPORTED(SM cause failure)
	41	SEMANTIC ERROR IN TFT OPERATION
	42	SYNTACTICAL ERROR IN TFT OPERATION
	43	UNKNOWN PDP CNTXT
	44	SEM ERR IN PKT FILTER
	45	SYNT ERR IN PKT FILTER
	46	PDP CNTXT WITHOUT TFT ACTIVATED
	47	MULTICAST GROUP MEMBERSHIP TIMEOUT
	48	RETRY ON NEW CELL BEGIN(if MM cause failure) / ACTIVATION REJECTED BCM VIOLATION(if SM cause failure)
	50	PDP TYPE IPV4 ONLY ALLOWED
	51	PDP TYPE IPV6 ONLY ALLOWED
	52	SINGLE ADDRESS BEARERS ONLY ALLOWED
	63	RETRY ON NEW CELL END
	81	INVALID TRANSACTION IDENTIFIER
	95	SEMANTICALLY INCORRECT MESSAGE
	96	INVALID MANDATORY INFORMATION
	97	MSG TYPE NON EXISTENT OR NOT IMPLEMENTED
	98	MSG TYPE NOT COMPATIBLE WITH PROTOCOL STATE
	99	IE NON EXISTENT OR NOT IMPLEMENTED
	100	CONDITIONAL IE ERROR
	101	MSG NOT COMPATIBLE WITH PROTOCOL STATE
	111	PROTOCOL ERROR UNSPECIFIED
	112	APN RESTRICTION VALUE INCOMPATIBLE WITH ACTIVE PDP CONTEXT
AT#CEERNET=?	Test command returns OK result code.	
Reference	3GPP 24.008	

5.1.6.1.12. Display PIN Counter - #PCT

#PCT - Display PIN Counter		SELINT 2
AT#PCT	Execution command reports the PIN/PUK or PIN2/PUK2 input remaining attempts, depending on +CPIN requested password in the format: #PCT: <n> where: <n> - remaining attempts 0 - the SIM is blocked. 1..3 - if the device is waiting either SIM PIN or SIM PIN2 to be given. 1..10 - if the device is waiting either SIM PUK or SIM PUK2 to be given.	
AT#PCT=?	Test command returns the OK result code.	



5.1.6.1.13. Software Shut Down - #SHDN

#SHDN - Software Shutdown		SELINT 2
AT#SHDN	<p>Execution command causes device detach from the network and shut down. Before definitive shut down an OK response is returned.</p> <p>Note: after the issuing of this command any previous activity is terminated and the device will not respond to any further command.</p> <p>Note: to turn it on again Hardware pin ON/OFF must be tied low.</p>	
AT#SHDN=?	Test command returns the OK result code.	

5.1.6.1.14. Extended Reset - #Z

#Z – Extended reset		SELINT 2
AT#Z=<profile>	<p>Set command loads both base section and extended section of the specified user profile stored with AT&W and selected with AT&P.</p> <p>Parameter <profile> 0 – user profile 0 1 – user profile 1</p>	
AT#Z=?	Test command tests for command existence.	

5.1.6.1.15. Periodic Reset - #ENHRST

#ENHRST – Periodic Reset		SELINT 2
AT#ENHRST=<mod>[,<delay>]	<p>Set command enables/disables the unit reset after <delay> minutes.</p> <p>Parameters: <mod> 0 – disables the unit reset (factory default) 1 – enables the unit reset only for one time 2 – enables the periodic unit reset <delay> - time interval after that the unit reboots; numeric value in minutes</p> <p>Note: the settings are saved automatically in NVM only if old or new mod is 2. Any change from 0 to 1 or from 1 to 0 is not stored in NVM</p> <p>Note: the particular case AT#ENHRST=1,0 causes the immediate module reboot. In this case if AT#ENHRST=1,0 follows an AT command that stores some parameters in NVM, it is recommended to insert a delay of at least 5 seconds before to issue AT#ENHRST=1,0, to permit the complete NVM storing.</p>	



#ENHRST – Periodic Reset		SELINT 2
AT#ENHRST?	Read command reports the current parameter settings for # ENHRST command in the format: # ENHRST: < mod >[,<delay>,<remainTime>] <remainTime> - time remaining before next reset	
AT#ENHRST=?	Test command reports supported range of values for parameters <mod> and <delay>.	
Examples	AT#ENHRST=1,60 Module reboots after 60 minutes ... AT#ENHRST=1,0 Module reboots now ... AT#ENHRST=2,60 Module reboots after 60 minutes and indefinitely after every following power on ...	

5.1.6.1.16. Wake From Alarm Mode - #WAKE

#WAKE - Wake From Alarm Mode		SELINT 2
AT#WAKE=[<opmode>]	<p>Execution command stops any eventually present alarm activity and, if the module is in alarm mode, it exits the alarm mode and enters the normal operating mode.</p> <p>Parameter: <opmode> - operating mode 0 - normal operating mode; the module exits the alarm mode, enters the normal operating mode, any alarm activity is stopped (e.g. alarm tone playing) and an OK result code is returned.</p> <p>Note: the alarm mode is indicated by status ON of hardware pin CTS and by status ON of pin DSR; the power saving status is indicated by a CTS - OFF and DSR - OFF status; the normal operating status is indicated by DSR - ON.</p> <p>Note: during the alarm mode the device will not make any network scan and will not register to any network and therefore is not able to dial or receive any call or SM, the only commands that can be issued to the MODULE in this state are the #WAKE and #SHDN, every other command must not be issued during this state.</p>	



#WAKE - Wake From Alarm Mode	SELINT 2
	Note: if #WAKE=0 command is issued after an alarm has been set with +CALA command, but before the alarm has expired, it will answer OK but have no effect.
AT#WAKE?	Read command returns the operating status of the device in the format: #WAKE: <status> where: <status> 0 - normal operating mode 1 - alarm mode or normal operating mode with some alarm activity.
AT#WAKE=?	Test command returns OK result code.

5.1.6.1.17. Temperature Monitor - #TEMPMON

#TEMPMON - Temperature Monitor	SELINT 2
AT#TEMPMON= <mod> [,<urcmode> [,<action> [,<hyst_time> [,<GPIO>]]]]	<p>Set command sets the behaviour of the module internal temperature monitor.</p> <p>Parameters:</p> <p><mod> 0 - sets the command parameters. 1 - triggers the measurement of the module internal temperature, reporting the result in the format:</p> <p>#TEMPMEAS: <level>,<value></p> <p>where: <level> - threshold level -2 - extreme temperature lower bound (see Note) -1 - operating temperature lower bound (see Note) 0 - normal temperature 1 - operating temperature upper bound (see Note) 2 - extreme temperature upper bound (see Note)</p> <p><value> - actual temperature expressed in Celsius degrees.</p> <p><i>Setting of the following optional parameters has meaning only if <mod>=0</i></p> <p><urcmode> - URC presentation mode. 0 - it disables the presentation of the temperature monitor URC 1 - it enables the presentation of the temperature monitor URC, whenever the module internal temperature reaches either operating or extreme levels; the unsolicited message is in the format:</p>



	<p>#TEMPMEAS: <level>,<value></p> <p>where: <level> and <value> are as before</p> <p><action> - sum of integers, each representing an action to be done whenever the module internal temperature reaches either operating or extreme levels (default is 0). If <action> is not zero, it is mandatory to set the <hyst_time> parameter too.</p> <p>0..7 - as a sum of:</p> <ul style="list-style-type: none"> 0 - no action 1 - automatic shut-down when the temperature is beyond the extreme bounds 2 - RF RX and TX circuits automatically disabled (using +CFUN=4) when operating temperature bounds are reached. When the temperature is back to normal the module is brought back to the previous state, before RF RX and TX disabled. 4 - the output pin <GPIO> is tied HIGH when operating temperature bounds are reached; when the temperature is back to normal the output pin <GPIO> is tied LOW. If this <action> is required, it is mandatory to set the <GPIO> parameter too. <p><hyst_time> - hysteresis time: all the actions happen only if the extreme or operating bounds are maintained at least for this period. This parameter is needed and required if <action> is not zero.</p> <p>0..255 - time in seconds</p> <p><GPIO> - GPIO number. valid range is “any output pin” (see “Hardware User’s Guide”). This parameter is needed and required only if <action>=4 is required.</p> <p>Note: the URC presentation mode <urcmode> is related to the current AT instance only (see +cmux); last <urcmode> settings are saved for every instance as extended profile parameters, thus it is possible to restore them either if the multiplexer control channel is released and set up, back and forth.</p> <p>Note: in case that action 4 is set, the chosen GPIO has to be configured in alternate function ALT3 through AT#GPIO command</p> <p>Note: last <action>, <hyst_time> and <GPIO> settings are saved in NVM too, but they are not related to the current CMUX instance only (see +cmux).</p>
AT#TEMPMON?	<p>Read command reports the current parameter settings for #TEMPMON command in the format:</p> <p>#TEMPMON: <urcmode>,<action>[,<hyst_time>[,<GPIO>]]</p>
AT#TEMPMON=?	<p>Test command reports the supported range of values for parameters <mod>,</p>



	<urcmode>, <action>, <hyst_time> and <GPIO>										
Note	<p>The following table is describing the temperature levels.</p> <table border="1"> <tr> <td>Extreme Temperature Lower Bound</td><td>-30°C</td></tr> <tr> <td>Operating Temperature Lower Bound</td><td>-10°C</td></tr> <tr> <td>Operating Temperature</td><td></td></tr> <tr> <td>Operating Temperature Upper Bound</td><td>55°C</td></tr> <tr> <td>Extreme Temperature Upper Bound</td><td>80°C</td></tr> </table>	Extreme Temperature Lower Bound	-30°C	Operating Temperature Lower Bound	-10°C	Operating Temperature		Operating Temperature Upper Bound	55°C	Extreme Temperature Upper Bound	80°C
Extreme Temperature Lower Bound	-30°C										
Operating Temperature Lower Bound	-10°C										
Operating Temperature											
Operating Temperature Upper Bound	55°C										
Extreme Temperature Upper Bound	80°C										

5.1.6.1.18. General Purpose Input/Output Pin Control - #GPIO

#GPIO - General Purpose Input/Output Pin Control	SELINT 2
AT#GPIO=[<pin>, <mode>[,<dir>[,<save>]]]	<p>Execution command sets the value of the general purpose output pin GPIO<pin> according to <dir> and <mode> parameter. Not all configurations for the three parameters are valid.</p> <p>Parameters:</p> <p><pin> - GPIO pin number; supported range is from 1 to a value that depends on the hardware.</p> <p><mode> - its meaning depends on <dir> setting:</p> <ul style="list-style-type: none"> 0 - if <dir>=0 – INPUT, remove any Pull-up/Pull-down - output pin cleared to 0 (Low) if <dir>=1 - OUTPUT - no meaning if <dir>=2 - ALTERNATE FUNCTION - no meaning if <dir>=3 – TRISTATE PULL DOWN 1 - if <dir>=0 – INPUT, if <dir>=0 – INPUT, remove any Pull-up/Pull-down - output pin set to 1 (High) if <dir>=1 - OUTPUT - no meaning if <dir>=2 - ALTERNATE FUNCTION - no meaning if <dir>=3 – TRISTATE PULL DOWN 2 - Reports the read value from the input pin if <dir>=0 - INPUT - Reports the read value from the input pin if <dir>=1 - OUTPUT - Reports a no meaning value if <dir>=2 - ALTERNATE FUNCTION 3 - if <dir>=0 – INPUT, enable Pull-Up 4 - if <dir>=0 – INPUT, enable Pull-Down <p><dir> - GPIO pin direction</p> <ul style="list-style-type: none"> 0 - pin direction is INPUT 1 - pin direction is OUTPUT 2,3,4,5,6 - pin direction is Alternate Function ALT1, ALT2, ALT3, ALT4, ALT5 respectively (see Note). <p><save> - GPIO pin save configuration</p>



#GPIO - General Purpose Input/Output Pin Control	SELINT 2
	<p>0 – pin configuration is not saved 1 – pin configuration is saved</p> <p>Note: when <save> is omitted the configuration is stored only if user set or reset ALTx function on <dir> parameter. Note: if values of <dir> is set in output and save omitted then it is set automatically in input on next power cycle.</p> <p>Note: when <mode>=2 (and <dir> is omitted) the command reports the direction and value of pin GPIO<pin> in the format:</p> <p>#GPIO: <dir>,<stat></p> <p>where:</p> <p><dir> - current direction setting for the GPIO<pin></p> <p><stat></p> <ul style="list-style-type: none"> <input type="checkbox"/> logic value read from pin GPIO<pin> in the case the pin <dir> is set to input; <input type="checkbox"/> logic value present in output of the pin GPIO<pin> in the case the pin <dir> is currently set to output; <input type="checkbox"/> no meaning value for the pin GPIO<pin> in the case the pin <dir> is set to alternate function or Tristate pull down <p>Note: "ALT1" value is valid only for following pins:</p> <ul style="list-style-type: none"> <input type="checkbox"/> GPIO1: alternate function is "Stat Led"; <input type="checkbox"/> GPIO7: alternate function is "DAC Output" <p>"ALT2" value is valid for all GPIOs: alternate function is "Alarm Pin" "ALT3" value is valid for all GPIOs as "TempMon Pin" "ALT4" value is valid for all GPIOs as "AD_Det Pin" "ALT5" value is valid for all GPIOs as "AD_rep Pin"</p> <p>Note: while using the pins in the alternate function, the GPIO read/write access to that pin is not accessible and shall be avoided.</p> <p>Note: GPIO7 is also configured as DAC pin (ALT1 function) with the command #DAC</p> <p>Note: Alarm Pin can be also configured through #ALARMPIN command Note: AD_Det and AD_Rep pin can be also configured through #GSMAD command</p>
AT#GPIO?	<p>Read command reports the read direction and value of all GPIO pins, in the format:</p> <p>#GPIO: <dir>,<stat>[<CR><LF>#GPIO: <dir>,<stat>[...]]</p>



#GPIO - General Purpose Input/Output Pin Control		SELINT 2
	<p>where <dir> - as seen before <stat> - as seen before</p>	
AT#GPIO=?	Test command reports the supported range of values of the command parameters <pin>, <mode> and <dir>.	
Example	<pre>AT#GPIO=3,0,1 OK AT#GPIO=3,2 #GPIO: 1,0 OK AT#GPIO=4,1,1 OK AT#GPIO=5,0,0 OK AT#GPIO=6,2 #GPIO: 0,1 OK</pre>	

5.1.6.1.19. Alarm Pin - #ALARMPIN

#ALARMPIN – Alarm Pin		SELINT 2
AT#ALARMPIN= <pin>	<p>Set command sets the GPIO pin for the ALARM pin</p> <p>Parameters: <pin> defines which GPIO shall be used as ALARM pin. For the < pin > actual range check the “Hardware User Guide”. Default value is 0, which means no ALARM pin set. Note: the setting is saved in NVM Note: ALARM pin function of a GPIO corresponds to ALT2 function of the GPIO. So it can be also set through AT#GPIO command, ALT2 function.</p>	
AT#ALARMPIN?	<p>Read command returns the current parameter settings for #ALARMPIN command in the format:</p> <p>#ALARMPIN: <pin></p>	
AT#ALARMPIN=?	Test command reports the supported range of values for parameter <pin>.	



5.1.6.1.20. STAT_LED GPIO Setting - #SLED

#SLED - STAT_LED GPIO Setting	SELINT 2
AT#SLED=<mode> [,<on_duration> [,<off_duration>]]	<p>Set command sets the behaviour of the STAT_LED GPIO</p> <p>Parameters:</p> <p><mode> - defines how the STAT_LED GPIO is handled</p> <ul style="list-style-type: none"> 0 - GPIO tied Low 1 - GPIO tied High 2 - GPIO handled by Module Software (factory default) with the following timings: <ul style="list-style-type: none"> • not registered : always on • registered in idle: blinking 1s on and 2s off • registered in idle with powersaving : blinking time depends on network condition in order to minimize power consumption 3 - GPIO is turned on and off alternatively, with period defined by the sum <on_duration> + <off_duration> 4 - GPIO handled by Module Software with the following timings: <ul style="list-style-type: none"> • not registered : blinking 0,5s on and 0,5s off • registered in idle: blinking 300ms on and 2,7s off • registered in idle with powersaving : blinking time depends on network condition in order to minimize power consumption <p><on_duration> - duration of period in which STAT_LED GPIO is tied High while <mode>=3 1..100 - in tenth of seconds (default is 10)</p> <p><off_duration> - duration of period in which STAT_LED GPIO is tied Low while <mode>=3 1..100 - in tenth of seconds (default is 10)</p> <p>Note: values are saved in NVM by command #SLEDSAV</p> <p>Note: at module boot the STAT_LED GPIO is always tied High and holds this value until the first NVM reading.</p> <p>Note: to have STAT_LED operative, the first time enter AT#GPIO=1,0,2 setting the GPIO1 as alternate function.</p>
AT#SLED?	<p>Read command returns the STAT_LED GPIO current setting, in the format:</p> <p>#SLED: <mode>,<on_duration>,<off_duration></p>
AT#SLED=?	<p>Test command returns the range of available values for parameters <mode>, <on_duration> and <off_duration>.</p>



5.1.6.1.21. Save STAT_LED GPIO Setting - #SLEDSAV

#SLEDSAV - Save STAT_LED GPIO Setting		SELINT 2
AT#SLEDSAV	Execution command saves STAT_LED setting in NVM.	
AT#SLED=?	Test command returns OK result code.	

5.1.6.1.22. SMS Ring Indicator - #E2SMSRI

#E2SMSRI - SMS Ring Indicator		SELINT 2
AT#E2SMSRI=[<n>]	<p>Set command enables/disables the Ring Indicator pin response to an incoming SMS message. If enabled, a negative going pulse is generated on receipt of an incoming SMS message. The duration of this pulse is determined by the value of <n>.</p> <p>Parameter: <n> - RI enabling 0 - disables RI pin response for incoming SMS messages (factory default) 50..1150 - enables RI pin response for incoming SMS messages. The value of <n> is the duration in ms of the pulse generated on receipt of an incoming SM.</p> <p>Note: if +CNMI=3,1 command is issued and the module is in a GPRS connection, a 100 ms break signal is sent and a 1 sec. pulse is generated on RI pin, no matter if the RI pin response is either enabled or not.</p>	
AT#E2SMSRI?	<p>Read command reports the duration in ms of the pulse generated on receipt of an incoming SM, in the format:</p> <p>#E2SMSRI: <n></p> <p>Note: as seen before, the value <n>=0 means that the RI pin response to an incoming SM is disabled.</p>	
AT#E2SMSRI=?	Reports the range of supported values for parameter <n>	



5.1.6.1.23. Read Analog/Digital Converter input - #ADC

#ADC - Read Analog/Digital Converter input		SELINT 2
AT#ADC= [<adc>,<mode> [,<dir>]]	<p>Execution command reads pin<adc> voltage, converted by ADC, and outputs it in the format:</p> <p>#ADC: <value></p> <p>where:</p> <p><value> - pin<adc> voltage, expressed in mV</p> <p>Parameters:</p> <p><adc> - index of pin For the number of available ADCs see HW User Guide</p> <p><mode> - required action 2 - query ADC value <dir> - direction; its interpretation is currently not implemented 0 - no effect.</p> <p>Note: The command returns the last valid measure.</p>	
AT#ADC?	<p>Read command reports all pins voltage, converted by ADC, in the format:</p> <p>#ADC: <value>[<CR><LF>#ADC: <value>[...]]</p>	
AT#ADC=?	<p>Test command reports the supported range of values of the command parameters <adc>, <mode> and <dir>.</p>	

5.1.6.1.24. V24 Output Pins Configuration - #V24CFG

#V24CFG - V24 Output Pins Configuration		SELINT 2
AT#V24CFG=<pin>, <mode>	<p>Set command sets the AT commands serial port interface output pins mode.</p> <p>Parameters:</p> <p><pin> - AT commands serial port interface hardware pin: 0 - DCD (Data Carrier Detect) 1 - CTS (Clear To Send) 2 - RI (Ring Indicator) 3 - DSR (Data Set Ready) 4 - DTR (Data Terminal Ready). This is not an output pin: we maintain this value only for backward compatibility, but trying to set its state raises the result code "ERROR" (not yet implemented) 5 - RTS (Request To Send). This is not an output pin: we maintain this value only for backward compatibility, but trying to set its state raises the result code "ERROR"</p> <p><mode> - AT commands serial port interface hardware pins mode:</p>	



#V24CFG - V24 Output Pins Configuration	SELINT 2
	<p>0 - AT commands serial port mode: output pins are controlled by serial port device driver. (default)</p> <p>1 - GPIO mode: output pins are directly controlled by #V24 command only.</p>
AT#V24CFG?	<p>Read command returns actual mode for all the pins (either output and input) in the format:</p> <p>#V24CFG: <pin1>,<mode1>[<CR><LF><CR><LF>]</p> <p>#V24CFG: <pin2>,<mode2>[...]]</p> <p>Where:</p> <p><pin> - AT command serial port interface HW pin</p> <p><moden> - AT commands serial port interface hardware pin mode</p>
AT#V24CFG=?	<p>Test command reports supported range of values for parameters <pin> and <mode>.</p>

5.1.6.1.25. V24 Output Pins Control - #V24

#V24 - V24 Output Pins Control	SELINT 2
AT#V24=<pin>[,<state>]	<p>Set command sets the AT commands serial port interface output pins state.</p> <p>Parameters:</p> <p><pin> - AT commands serial port interface hardware pin:</p> <ul style="list-style-type: none"> 0 - DCD (Data Carrier Detect) 1 - CTS (Clear To Send) 2 - RI (Ring Indicator) 3 - DSR (Data Set Ready) 4 - DTR (Data Terminal Ready). This is not an output pin: we maintain this value only for backward compatibility, but trying to set its state raises the result code "ERROR" (not yet implemented) 5 - RTS (Request To Send). This is not an output pin: we maintain this value only for backward compatibility, but trying to set its state raises the result code "ERROR" <p><state> - State of AT commands serial port interface output hardware pins(0, 1, 2, 3) when pin is in GPIO mode (see #V24CFG):</p> <ul style="list-style-type: none"> 0 - Low 1 - High <p>Note: if <state> is omitted the command returns the actual state of the pin <pin>.</p>
AT#V24?	<p>Read command returns actual state for all the pins (either output and input) in the format:</p> <p>#V24: <pin1>,<state1>[<CR><LF>]</p> <p>#V24: <pin2>,<state2>[...]]</p>

#V24 - V24 Output Pins Control		SELINT 2
	where < pin > - AT command serial port interface HW pin < state > - AT commands serial port interface hardware pin state	
AT#V24=?	Test command reports supported range of values for parameters < pin > and < state >.	

5.1.6.1.26. GPRS Auto-Attach Property - #AUTOATT

#AUTOATT - Auto-Attach Property		SELINT 2
AT#AUTOATT=[<auto>]	<p>Set command enables/disables the TE GPRS auto-attach property.</p> <p>Parameter: <auto> 0 - disables GPRS auto-attach property 1 - enables GPRS auto-attach property (factory default): after the command #AUTOATT=1 has been issued (and at every following startup) the terminal will automatically try to attach to the GPRS service.</p>	
AT#AUTOATT?	<p>Read command reports whether the auto-attach property is currently enabled or not, in the format:</p> <p>#AUTOATT: <auto></p>	
AT#AUTOATT=?	Test command reports available values for parameter <auto>.	

5.1.6.1.27. Multislot Class Control - #MSCCLASS

#MSCCLASS - Multislot Class Control	SELINT 2
AT#MSCCLASS= [<class>[, <autoattach>]]	<p>Set command sets the multislot class</p> <p>Parameters:</p> <p><class> - multislot class; take care: class 7 is not supported. (1-12),(30-33),(35-38) - GPRS (EGPRS) class</p> <p>Factory default:</p> <p>HE910-NAx --> class 10 by default UE910-Nax --> class 10 by default HE910-GA --> class 10 by default HE910-G --> class 10 by default HE910-D --> class 10 by default</p>



#MSCLASS - Multislot Class Control	SELINT 2
	<p>HE910-DG --> class 10 by default HE910_EUx --> class 33 by default UE910_EUx --> class 33 by default</p> <p><autoattach> 0 - the new multislot class is enabled only at the next detach/attach or after a reboot. 1 - the new multislot class is enabled immediately, automatically forcing a detach / attach procedure.</p> <p>Note: DTM multislot class is automatically chosen with maximum allowed value for every GPRS (EGPRS) subset</p>
AT#MSCLASS?	Read command reports the current value of the multislot class in the format: #MSCLASS: <class>
AT#MSCLASS=?	Test command reports the range of available values for both parameters <class> and <autoattach> .

5.1.6.1.28. Cell Monitor - #MONI

#MONI - Cell Monitor	SELINT 2
AT#MONI[= [<number>]]	<p>#MONI is both a set and an execution command.</p> <p>Set command sets one cell out of seven, in the neighbour list of the serving cell including it, from which extract GSM /UMTS-related information.</p> <p>Parameter: <number> (GSM network) 0..6 - it is the ordinal number of the cell, in the neighbour list of the serving cell (default 0, serving cell). 7 - it is a special request to obtain GSM-related information from the whole set of seven cells in the neighbour list of the serving cell.</p> <p>(UMTS network) 0 – it is the serving cell and active set cells(default) 1 – it is the candidate set 2 – it is the synchronized neighbour set 3 – it is the asynchronous neighbour set 4..7 – it is not available</p> <p>Execution command (AT#MONI<CR>) reports GSM/UMTS-related information for selected cell and dedicated channel (if exists).</p>



#MONI - Cell Monitor	SELINT 2
	<p>1. If the last setting done by #MONI is in the range [0..6], the output format is as follows:</p> <p>a) When extracting data for the serving cell and the network name is known the format is: (GSM network) #MONI: <netname> BSIC:<bsic> RxQual:<qual> LAC:<lac> Id:<id> ARFCN:<arfcn> PWR:<dBm> dBm TA: <timadv> (UMTS network) #MONI: <netname> PSC:<psc> RSCP:<rscp> LAC:<lac> Id:<id>EcIo:<ecio> UARFCN:<uarfcn> PWR:<dBm> dBm DRX:<drx> SCR:<scr></p> <p>b) When the network name is unknown, the format is: (GSM network) #MONI: <cc> <nc> BSIC:<bsic> RxQual:<qual> LAC:<lac> Id:<id> ARFCN:<arfcn> PWR:<dBm> dBm TA: <timadv> (UMTS network) #MONI: <cc> <nc> PSC:<psc> RSCP:<rscp> LAC:<lac> Id:<id> EcIo:<ecio> UARFCN:<uarfcn> PWR:<dBm> dBm DRX:<drx>SCR:<scr></p> <p>c) When extracting data for an adjacent cell (or active set cell), the format is: (GSM network) #MONI: Adj Cell<n> [LAC:<lac> Id:<id>] ARFCN:<arfcn> PWR:<dBm> dBm (UMTS network) #MONI: PSC:<psc> RSCP:<rscp> EcIo:<ecio> UARFCN:<uarfcn> SCR:<scr></p> <p>where: <netname> - name of network operator <cc> - country code <nc> - network operator code <n> - progressive number of adjacent cell <bsic> - base station identification code <qual> - quality of reception 0..7 <lac> - localization area code <id> - cell identifier <arfcn> - assigned radio channel <dBm> - received signal strength in dBm; for serving cell in UMTS network this is not available during a call, and is displayed as 0 <timadv> - timing advance <psc> - Primary Scrambling Code <rscp> - Received Signal Code Power in dBm; for serving cell this is not available during a call, and is displayed as 255</p>



#MONI - Cell Monitor	SELINT 2
	<p><ecio> - chip energy per total wideband power in dBm; for serving cell this is not available during a call, and is displayed as 255 <uarfcn> - UMTS assigned radio channel <drx> - Discontinuous reception cycle length <scr> - Scrambling code</p> <p>Note: TA: <timadv> is reported only for the serving cell.</p> <p>2. If the last setting done by #MONI is 7, the execution command produces a table-like formatted output, as follows:</p> <p>a. First row reports the identifying name of the ‘columns’ #MONI: Cell BSIC LAC CellId ARFCN Power C1 C2 TA RxQual PL MN<CR><LF></p> <p>b. Second row reports a complete set of GSM-related information for the serving cell: #MONI: S: <bsic> <lac> <id> <arfcn> <dBm> <C1value> <C2value> <timadv> <qual> <netname><CR><LF></p> <p>c. 3rd to 8th rows report a reduced set of GSM-related information for the cells in the neighbours: #MONI: N<n> <bsic> <lac> <id> <arfcn> <dBm> <C1value> <C2value>[<CR><LF>]</p> <p>where: <C1value> - C1 reselection parameter <C2value> - C2 reselection parameter other parameters as before</p> <p>NOTE: Currently, AT#MONI=7 is only available in case of GSM network.</p>
AT#MONI=?	<p>Test command reports the maximum number of cells, in the neighbour list of the serving cell excluding it, from which we can extract GSM/UMTS-related information, along with the ordinal number of the current selected cell, in the format:</p> <p>#MONI: (<MaxCellNo>,<CellSet>)</p> <p>where: <MaxCellNo> - maximum number of cells, in the neighbour list of the serving cell and excluding it, from which we can extract GSM-related information. This value is always 6. <CellSet> - the last setting done with command #MONI.</p>



#MONI - Cell Monitor	SELINT 2
Examples	<p><i>Set command selects the cell 0 in GSM network</i></p> <pre>at#moni=0 OK</pre> <p><i>Execution command reports GSM-related information for cell 0</i></p> <pre>at#moni #MONI: I WIND BSIC:70 RxQual:0 LAC:55FA Id:1D23 ARFCN:736 PWR:-83dbm TA:1</pre> <p><i>Set command selects the cell 0 in UMTS network</i></p> <pre>at#moni=0 OK</pre> <p><i>Execution command reports UMTS-related information for serving cell and active cell</i></p> <pre>at#moni #MONI: I TIM PSC:65535 RSCP:255 LAC:EF8D Id:52D2388 EcIo:255 UARFCN:65535 PWR:0dbm DRX:128 SCR:0 #MONI: PSC:49 RSCP:-96 EcIo:-2.0 UARFCN:10638 SCR:784</pre> <p>OK</p> <p><i>Set command selects the special request to obtain GSM-related information from the whole set of seven cells in the neighbour list of the serving cell</i></p> <pre>at#moni=7 OK</pre> <p><i>Execution command reports the requested information in table-like format</i></p> <pre>at#moni #MONI: Cell BSIC LAC CellId ARFCN Power C1 C2 TA RxQual PLMN #MONI: S 70 55FA 1D23 736 -83dbm 19 33 1 0 I WIND #MONI: N1 75 55FA 1297 983 -78dbm 26 20 #MONI: N2 72 55FA 1289 976 -82dbm 22 16 #MONI: N3 70 55FA 1D15 749 -92dbm 10 18 #MONI: N4 72 55FA 1D0D 751 -92dbm 10 18 #MONI: N5 75 55FA 1296 978 -95dbm 9 3 #MONI: N6 70 55FA 1D77 756 -99dbm 3 11</pre> <p>OK</p>
Note	The timing advance value is meaningful only during calls or GPRS transfers active.
Note	The serving cell is the current serving cell or the last available serving cell, if the module loses coverage.



5.1.6.1.29. Serving Cell Information - #SERVINFO

#SERVINFO - Serving Cell Information	SELINT 2
AT#SERVINFO	<p>Execution command reports information about serving cell, in the format:</p> <p>(GSM network) #SERVINFO: <B-ARFCN>,<dBm>,<NetNameAsc>,<NetCode>,<BSIC>,<LAC>,<TA>,<GPRS>[,<PB-ARFCN>],[<NOM>],<RAC>,[<PAT>]]</p> <p>(UMTS network) #SERVINFO: <UARFCN>,<dBm>,<NetNameAsc>,<NetCode>,<PSC>,<LAC>,<DRX>,<SD>,<RSCP>,<NOM>,<RAC></p> <p>where:</p> <p><B-ARFCN> - BCCH ARFCN of the serving cell <dBm> - received signal strength in dBm <NetNameAsc> - operator name, quoted string type <NetCode> - string representing the network operator in numeric format: 5 or 6 digits [country code (3) + network code (2 or 3)] <BSIC> - Base Station Identification Code <LAC> - Localization Area Code <TA> - Time Advance: it's available only if a GSM or GPRS is running <GPRS> - GPRS supported in the cell 0 - not supported 1 - supported</p> <p>The following information will be present only if GPRS is supported in the cell</p> <p><PB-ARFCN> -</p> <ul style="list-style-type: none"> • if PBCCH is supported by the cell <ul style="list-style-type: none"> ◦ if its content is the PBCCH ARFCN of the serving cell, then <PB-ARFCN> is available ◦ else the label “hopping” will be printed • else <PB-ARFCN> is not available <p><NOM> - Network Operation Mode ..”I” “II” ..”III”</p> <p><RAC> - Routing Area Colour Code <PAT> - Priority Access Threshold ..0 ..3..6</p> <p><UARFCN> - UMTS ARFCN of the serving cell <PSC> - Primary Synchronisation Code <DRX> - Discontinuous reception cycle length <SD> - Service Domain</p>



#SERVINFO - Serving Cell Information		SELINT 2
	<p>0 – No Service 1 – CS Only 2 – PS Only 3 – CS & PS <RSCP> - Received Signal Code Power in dBm</p> <p>During a call, a SMS sending/receiving or a location update the value of <GPRS>, <PB-ARFCN>, <NOM>, <RAC> and <PAT> parameters don't make sense.</p>	
AT#SERVINFO=?	Test command tests for command existence.	



5.1.6.1.30. Read current network status - #RFSTS

#RFSTS – Read current network status	SELINT 2
AT#RFSTS	<p>Execution command reads current network status, in the format:</p> <p>(GSM network) #RFSTS:<PLMN>,<ARFCN>,<RSSI>,<LAC>,<RAC>,<TXPWR>,<MM>,<RR>,<NOM>,<CID>,<IMSI>,<NetNameAsc>,<SD>,<ABND></p> <p>Where:</p> <p><PLMN> - Country code and operator code(MCC, MNC) <ARFCN> - GSM Assigned Radio Channel <RSSI> - Received Signal Strength Indication <LAC> - Localization Area Code <RAC> - Routing Area Code <TXPWR> - Tx Power <MM> - Mobility Management state (for debug purpose only) 0 - NULL 3 - LOCATION UPDATING INITIATED 5 - WAIT FOR OUTGOING MM CONNECTION 6 - CONNECTION ACTIVE 7 - IMSI DETACH INITIATED 8 - PROCESS CM SERVICE PROMPT 9 - WAIT FOR NETWORK COMMAND 10 - LOCATION UPDATE REJECTED 13 - WAIT FOR RR CONNECTION LOCATION UPDATE 14 - WAIT FOR RR CONNECTION MM 15 - WAIT FOR RR CONNECTION IMSI DETACH 17 - WAIT FOR REESTABLISHMENT 18 - WAIT FOR RR ACTIVE 19 - IDLE 20 - WAIT FOR ADDITIONAL OUTGOING MM CONNECTION 21 - CONNECTION ACTIVE GROUP TRANSMIT 22 - WAIT RR CONNECTION GROUP TRANSMIT 23 - LOCATION UPDATING PENDING 24 -IMSI DETACH PENDING 25 - RR CONNECTION RELEASE NOT ALLOWED 255 - UNKNOWN <RR> - Radio Resource state (for debug purpose only) 2 - CELL SELECTION 3 - WAIT CELL SELECTION 4 - DEACTIVATION CELL SELECTION 5 - SELECT ANY CELL 6 - WAIT SELECT ANY CELL 7 - DEACTIVATION SELECT ANY CELL</p>



#RFSTS – Read current network status	SELINT 2
	<p>8 - WAIT INACTIVE 9 - INACTIVE 10 WAIT IDLE 11 - IDLE 12 - PLMN SEARCH 13 - CELL RESELECTION 14 - WAIT CELL RESELECTION 15 - DEACTIVATION PLMN SEARCH 16 - CELL CHANGE 17 - CS CELL CHANGE 18 - WAIT CELL CHANGE 19 - SINGLE BLOCK ASSIGNMENT 20 - DOWNLINK TBF ESTABLISH 21 - UPLINK TBF ESTABLISH 22 - WAIT TBF 23 - TRANSFER 24 - WAIT SYNC 25 - DTM ENHANCED CALL ESTABLISH 26 - DTM 27 - DTM ENHANCED MO CALL ESTABLISH 28 - MO CONNECTION ESTABLISH 29 - MT CONNECTION ESTABLISH 30 - RR CONNECTION 31 - DTM ESTABLISH 32 - DTM RELEASE 33 - CALL REESTABLISH 34 - DEACTIVATION CALL REESTABLISH 35 - NORMAL CHANNEL RELEASE 36 - LOCAL CHANNEL RELEASE 37 - DEACTIVATION 38 - ENHANCED DTM CS CALL ESTABLISH 39 - CELL RESELECTION TO UTRAN 40 - DTM ENHANCED CS CALL ESTABLISH 41 – INTER RAT ACTIVE ON HOLD</p> <p>42 – INTER RAT RESEL ABORT 43 – INTER RAT WAIT INTER RAT 44 – INTER RAT WAIT FOR RSRC 45 - DSIM SUSPEND 46 - DSIM WAIT SUSPEND 47 - DSIM WAIT SUSPEND IDLE <NOM> - Network Operator Mode <CID> - Cell ID <IMSI> - International Mobile Subscriber Identity <NetNameAsc> - Operator name</p>



#RFSTS – Read current network status	SELINT 2
<p><SD> - Service Domain 0 - No Service 1 - CS only 2 - PS only 3 - CS+PS</p> <p><ABND> - Active Band 1 - GSM 850 2 - GSM 900 3 - DCS 1800 4 - PCS 1900</p> <p>(WCDMA network) #RFSTS: <PLMN>,<UARFCN>,<PSC>,<Ec/Io>,<RSCP>,[RSSI],<LAC>,<RAC>,<TXPWR>,<DRX>,<MM>,<RRC>,<NOM>,<BLER>,<CID>,<IMSI>,<NetNameAsc>,<SD>,<nAST>[,<nUARFCN><nPSC>,<nEc/Io>]</p> <p>Where: <PLMN> - Country code and operator code(MCC, MNC) <UARFCN> - UMTS Assigned Radio Channel <PSC> - Active PSC(Primary Synchronization Code) <Ec/Io> - Active Ec/Io(chip energy per total wideband power in dBm) <RSCP> - Active RSCP (Received Signal Code Power in dBm) <RSSI> - Received Signal Strength Indication <LAC> - Localization Area Code <RAC> - Routing Area Code <TXPWR> - Tx Power <DRX> - Discontinuous reception cycle Length (cycle length in ms) <MM> - Mobility Management state (for debug purpose only) 0 - NULL 3 - LOCATION UPDATING INITIATED 5 - WAIT FOR OUTGOING MM CONNECTION 6 - CONNECTION ACTIVE 7 - IMSI DETACH INITIATED 8 - PROCESS CM SERVICE PROMPT 9 - WAIT FOR NETWORK COMMAND 10 - LOCATION UPDATE REJECTED 13 - WAIT FOR RR CONNECTION LOCATION UPDATE 14 - WAIT FOR RR CONNECTION MM 15 - WAIT FOR RR CONNECTION IMSI DETACH 17 - WAIT FOR REESTABLISHMENT 18 - WAIT FOR RR ACTIVE 19 - IDLE 20 - WAIT FOR ADDITIONAL OUTGOING MM CONNECTION</p>	



#RFSTS – Read current network status	SELINT 2
	<p>21 - CONNECTION ACTIVE GROUP TRANSMIT 22 - WAIT RR CONNECTION GROUP TRANSMIT 23 - LOCATION UPDATING PENDING 24 - IMSI DETACH PENDING 25 - RR CONNECTION RELEASE NOT ALLOWED 255 - UNKNOWN</p> <p><RRC> - Radio Resource state (for debug purpose only) 0 - CELL DCH 1 - CELL FACH 2 - CELL PCH 3 - URA PCH 4 - IDLE 5 - IDLE CCCH</p> <p><NOM> - Network Operator Mode <BLER> - Block Error Rate (e.g., 005 means 0.5 %) <CID> - Cell ID <IMSI> - International Mobile Station ID <NetNameAsc> - Operator name <SD> - Service Domain (see above) <nAST> - Number of Active Set (Maximum 6) <nUARFCN> UARFCN of n th active set <nPSC> PSC of n th active set <nEc/Io > Ec/Io of n th active Set</p>
AT#RFSTS=?	Test command tests for command existence.



5.1.6.1.31. Query SIM Status - #QSS

#QSS - Query SIM Status	SELINT 2
AT#QSS= [<mode>]	<p>Set command enables/disables the Query SIM Status unsolicited indication in the ME.</p> <p>Parameter: <mode> - type of notification 0 - disabled (factory default); it's possible only to query the current SIM status through Read command AT#QSS? 1 - enabled; the ME informs at every SIM status change through the following basic unsolicited indication:</p> <p style="text-align: center;">#QSS: <status></p> <p>where: <status> - current SIM status 0 - SIM NOT INSERTED 1 - SIM INSERTED</p> <p>2 - enabled; the ME informs at every SIM status change through the following unsolicited indication:</p> <p style="text-align: center;">#QSS: <status></p> <p>where: <status> - current SIM status 0 - SIM NOT INSERTED 1 - SIM INSERTED 2 - SIM INSERTED and PIN UNLOCKED 3 - SIM INSERTED and READY (SMS and Phonebook access are possible).</p> <p>Note: the command reports the SIM status change after the <mode> has been set to 2. We strongly suggest to set <mode>=2 and save the value in the user profile, then power off the module. The proper SIM status will be available at the next power on.</p>
AT#QSS?	<p>Read command reports whether the unsolicited indication #QSS is currently enabled or not, along with the SIM status, in the format:</p> <p>#QSS: <mode>,<status> (<mode> and <status> are described above)</p> <p>To get the proper SIM status, we strongly suggest to set <mode>=2 and save the value in the user profile, then power off and power on the module.</p>
AT#QSS=?	<p>Test command returns the supported range of values for parameter <mode>.</p>



5.1.6.1.32. Delete all phonebook entries - #CPBD

#CPBD – Delete All Phonebook Entries		SELINT 2
AT#CPBD	Execution command deletes all phonebook entries in the current phonebook memory storage selected with +CPBS.	
AT#CPBD=?	Test command tests for command existence	

5.1.6.1.33. ATD Dialing Mode - #DIALMODE

#DIALMODE - Dialing Mode		SELINT 2
AT#DIALMODE= [<mode>]	<p>Set command sets dialing modality.</p> <p>Parameter: <mode></p> <ul style="list-style-type: none"> 0 - (voice call only) OK result code is received as soon as it starts remotely ringing (factory default) 1 – (voice call only) OK result code is received only after the called party answers. Any character typed aborts the call and OK result code is received. 2 - (voice call and data call) the following custom result codes are received, monitoring step by step the call status: <ul style="list-style-type: none"> DIALING (MO in progress) RINGING (remote ring) CONNECTED (remote call accepted) RELEASED (after ATH) DISCONNECTED (remote hang-up) <p>Note: In case a BUSY tone is received and at the same time ATX0 is enabled ATD will return NO CARRIER instead of DISCONNECTED.</p> <p>Note: The setting is saved in NVM and available on following reboot.</p>	
AT#DIALMODE?	<p>Read command returns current ATD dialing mode in the format:</p> <p>#DIALMODE: <mode></p>	
AT#DIALMODE=?	Test command returns the range of values for parameter <mode>	



5.1.6.1.34. Automatic call - #ACAL

#ACAL - Automatic Call		SELINT 2
AT#ACAL= [<mode>]	<p>Set command enables/disables the automatic call function.</p> <p>Parameter: <mode> 0 - disables the automatic call function (factory default) 1 - enables the automatic call function. If enabled (and &D2 has been issued), the transition OFF/ON of DTR causes an automatic call to the first number (position 0) stored in the internal phonebook.</p> <p>Note: type of call depends on the last issue of command +FCLASS.</p>	
AT#ACAL?	<p>Read command reports whether the automatic call function is currently enabled or not, in the format:</p> <p>#ACAL: <mode></p> <p>Note: as a consequence of the introduction of the command #ACALEXT (Extended Automatic Call) it is possible that the Read Command returns a value supported by #ACALEXT but NOT supported by #ACAL.</p> <p>AT#ACAL? #ACAL : 2</p> <p>OK</p> <p>Due to this possible situation it is strongly recommended not to use contemporaneously both commands.</p>	
AT#ACAL=?	Test command returns the supported range of values for parameter <mode> .	
Note	See &Z to write and &N to read the number on module internal phonebook.	



5.1.6.1.35. Extended automatic call - #ACALEXT

#ACALEXT - Extended Automatic Call		SELINT 2
AT#ACALEXT= <mode>,<index>	<p>Set command enables/disables the extended automatic call function.</p> <p>Parameters:</p> <p><mode></p> <ul style="list-style-type: none"> 0 - disables the automatic call function (factory default) 1 - enables the automatic call function from internal phonebook. 2 - enables the automatic call function from “SM” phonebook. <p><index> - it indicates a position in the currently selected phonebook.</p> <p>If the extended automatic call function is enabled and &D2 has been issued, the transition OFF/ON of DTR causes an automatic call to the number stored in position <index> in the selected phonebook.</p> <p>Note: type of call depends on the last issue of command +FCLASS.</p>	
AT#ACALEXT?	<p>Read command reports either whether the automatic call function is currently enabled or not, and the last <index> setting in the format:</p> <p>#ACALEXT: <mode>,<index></p>	
AT#ACALEXT=?	<p>The range of available positions in a phonebook depends on the selected phonebook. This is the reason why the test command returns three ranges of values: the first for parameter <mode>, the second for parameter <index> when is chosen the internal phonebook, the third for parameter <index> when “SM” is the chosen phonebook.</p>	
Note	<p>Issuing #ACALEXT causes the #ACAL <mode> to be changed.</p> <p>Issuing AT#ACAL=1 causes the #ACALEXT <index> to be set to default.</p> <p>It is recommended to NOT use contemporaneously either #ACALEXT and #ACAL</p>	
Note	<p>See &Z to write and &N to read the number on module internal phonebook.</p>	



5.1.6.1.36. Extended Call Monitoring - #ECAM

#ECAM - Extended Call Monitoring		SELINT 2
AT#ECAM= [<onoff>]	<p>This command enables/disables the call monitoring function in the ME.</p> <p>Parameter: <onoff> 0 - disables call monitoring function (factory default) 1 - enables call monitoring function; the ME informs about call events, such as incoming call, connected, hang up etc. using the following unsolicited indication:</p> <p>#ECAM: <ccid>,<ccstatus>,<calltype>,,[<number>,<type>]</p> <p>where <ccid> - call ID <ccstatus> - call status 0 - idle 1 - calling (MO) 2 - connecting (MO) 3 - active 4 - hold 5 - waiting (MT) 6 - alerting (MT) 7 - busy <calltype> - call type 1 - voice 2 - data <number> - called number (valid only for <ccstatus>=1) <type> - type of <number> 129 - national number 145 - international number</p> <p>Note: the unsolicited indication is sent along with usual codes (OK, NO CARRIER, BUSY...).</p>	
AT#ECAM?	<p>Read command reports whether the extended call monitoring function is currently enabled or not, in the format:</p> <p>#ECAM: <onoff></p>	
AT#ECAM=?	<p>Test command returns the list of supported values for <onoff></p>	



5.1.6.1.37. SMS Overflow - #SMOV

#SMOV - SMS Overflow		SELINT 2
AT#SMOV= [<mode>]	<p>Set command enables/disables the SMS overflow signalling function.</p> <p>Parameter: <mode> 0 - disables SMS overflow signalling function (factory default) 1 - enables SMS overflow signalling function; when the maximum storage capacity has been reached, the following network initiated notification is sent:</p> <p>#SMOV: <memo></p> <p>where <memo> is a string indicating the SMS storage that has reached maximum capacity: “SM” – SIM Memory</p>	
AT#SMOV?	<p>Read command reports whether the SMS overflow signalling function is currently enabled or not, in the format:</p> <p>#SMOV: <mode></p>	
AT#SMOV=?	<p>Test command returns the supported range of values of parameter <mode>.</p>	

5.1.6.1.38. Mailbox Numbers - #MBN

#MBN - Mailbox Numbers		SELINT 2
AT#MBN	<p>Execution command returns the mailbox numbers stored on SIM, if this service is provided by the SIM.</p> <p>The response format is: [#MBN: <index>,<number>,<type>[,<text>][,<mboxtype>][<CR><LF> #MBN: <index>,<number>,<type>[,<text>][,<mboxtype>[...]]]</p> <p>where: <index> - record number <number> - string type mailbox number in the format <type> <type> - type of mailbox number octet in integer format 129 - national numbering scheme 145 - international numbering scheme (contains the character "+") <text> - the alphanumeric text associated to the number; used character set should be the one selected with command +CSCS <mboxtype> - the message waiting group type of the mailbox, if available: "VOICE" - voice "FAX" - fax "EMAIL" - electronic mail</p>	



#MBN - Mailbox Numbers	SELINT 2
	<p>"OTHER" - other</p> <p>Note: if all queried locations are empty (but available), no information text lines will be returned.</p>
AT#MBN=?	Test command returns the OK result code.

5.1.6.1.39. Message Waiting Indication - #MWI

#MWI - Message Waiting Indication	SELINT 2
AT#MWI=<enable>	<p>Set command enables/disables the presentation of the message waiting indicator URC.</p> <p>Parameter: <enable> 0 - disable the presentation of the #MWI URC 1 - enable the presentation of the #MWI URC each time a new message waiting indicator is received from the network and, at startup, the presentation of the status of the message waiting indicators, as they are currently stored on SIM..</p> <p>The URC format is:</p> <p>#MWI: <status>,<indicator>[,<count>]</p> <p>where: <status> 0 - clear: it has been deleted one of the messages related to the indicator <indicator>. 1 - set: there's a new waiting message related to the indicator <indicator> <indicator> 1 - either Line 1 (CPHS context) or Voice (3GPP context) 2 - Line 2 (CPHS context only) 3 - Fax 4 - E-mail 5 - Other <count> - message counter: network information reporting the number of pending messages related to the message waiting indicator <indicator>.</p> <p>The presentation at startup of the message waiting indicators status, as they are currently stored on SIM, is as follows:</p> <p>#MWI: <status>[,<indicator>[,<count>]][<CR><LF> #MWI: <status>,<indicator>[,<count>][...]]]</p> <p>where:</p>



#MWI - Message Waiting Indication	SELINT 2
	<p><status></p> <p>0 - no waiting message indicator is currently set: if this the case no other information is reported</p> <p>1 - there are waiting messages related to the message waiting indicator</p> <p><indicator>.</p> <p><indicator></p> <p>1 - either Line 1 (CPHS context) or Voice (3GPP context)</p> <p>2 - Line 2 (CPHS context)</p> <p>3 - Fax</p> <p>4 - E-mail</p> <p>5 - Other</p> <p><count> - message counter: number of pending messages related to the message waiting indicator <indicator> as it is stored on SIM.</p>
AT#MWI?	<p>Read command reports wheter the presentation of the message waiting indicator URC is currently enabled or not, and the current status of the message waiting indicators as they are currently stored on SIM. The format is:</p> <p>#MWI: <enable>,<status>[,<indicator>[,<count>]][<CR><LF></p> <p>#MWI: <enable>,<status>,<indicator>[,<count>][...]]]</p>
AT#MWI=?	Test command returns the range of available values for parameter <enable>.

5.1.6.1.40. Network Emergency Number Update

#NWEN – Network Emergency Number Update	SELINT 2
AT#NWEN=[<en>]	<p>Set command enables/disables unsolicited indication of emergency number update.</p> <p>Parameters:</p> <p><en></p> <p>0 - disables unsolicited indication of emergency number update (factory default)</p> <p>1 - enables unsolicited indication of emergency number update</p> <p>#NWEN: <type></p> <p>where:</p> <p><type></p> <p>1 number list update from internal ME</p> <p>2 number list update from SIM</p> <p>3 number list update from network</p>
AT#NWEN?	Read command reports whether the unsolicited indication of network emergency number update is currently enabled or not, in the format:

#NWEN – Network Emergency Number Update		SELINT 2
	#NWEN: <en>	
AT#NWEN=?	Test command reports the range for the parameter <en>	

5.1.6.1.41. Packet Service Network Type - #PSNT

#PSNT – Packet Service Network Type		SELINT 2
AT#PSNT=[<mode>]	<p>Set command enables/disables unsolicited result code for packet service network type (PSNT).</p> <p>Parameter: <mode></p> <ul style="list-style-type: none"> 0 - disable PSNT unsolicited result code (factory default) 1 - enable PSNT unsolicited result code 2 - PSNT unsolicited result code enabled; read command reports HSUPA and HSDPA related info 	
AT#PSNT?	<p>Read command reports the <mode>,<nt> and HSUPA and HSDPA related info in the format:</p> <p>(<mode> = 2) #PSNT: <mode>,<nt>,<is_hsupa_available>,<is_hsupa_used>,<is_hsdpa_available>,<is_hsdpa_used></p> <p>(<mode> = 0 or <mode> = 1) #PSNT: <mode>,<nt></p> <p>where <mode></p> <ul style="list-style-type: none"> 0 - PSNT unsolicited result code disabled 1 - PSNT unsolicited result code enabled 2 - PSNT unsolicited result code enabled; read command reports HSUPA and HSDPA related info <p><nt> - network type</p> <ul style="list-style-type: none"> 0 - GPRS network 1 - EGPRS network 2 - WCDMA network 3 - HSDPA network 4 - unknown or not registered. <p><is_hsupa_available> - HSUPA available</p>	



#PSNT – Packet Service Network Type	SELINT 2
	<p>0 – HSUPA is not supported by network 1 – HSUPA is supported by network</p> <p><is_hsupa_used> - HSUPA used</p> <p>0 – HSUPA is not in use 1 – HSUPA is in use</p> <p><is_hsdpa_available> - HSDPA available</p> <p>0 – HSDPA is not supported by network 1 – HSDPA is supported by network</p> <p><is_hsdpa_used> - HSPA used</p> <p>0 – HSDPA is not in use 1 – HSDPA is in use</p> <p>Note: when the type of network is HSPA, the indication is certainly valid during traffic, while it could be not valid in idle because it depends on network broadcast parameters</p>
AT#PSNT=?	Test command reports the range for the parameter <mode>

5.1.6.1.42. SIM Presence status - #SIMPR

#SIMPR – SIM Presence status	SELINT 2
AT#SIMPR=[<mode>]	<p>Set command enables/disables the SIM Presence Status unsolicited indication in the ME. This command reports also the status of the remote SIM, if the SAP functionality is supported and has been enabled.</p> <p>Parameter:</p> <p><mode> - type of notification 0 – disabled (factory default) 1 - enabled; the ME informs at every (local and remote) SIM status change through the following unsolicited indication:</p> <p>#SIMPR: <SIM>,<status></p> <p>where:</p> <p><SIM> - local or remote SIM 0 local SIM 1 remote SIM</p> <p><status> - current SIM status</p>



#SIMPR – SIM Presence status		SELINT 2
	0 - SIM NOT INSERTED 1 - SIM INSERTED	
AT#SIMPR?	<p>Read command reports whether the unsolicited indication #SIMPR is currently enabled or not, along with the local and remote SIM status, in the format:</p> <p>#SIMPR: <mode>,0,<status><CR><LF> #SIMPR: <mode>,1,<status></p> <p>If SAP functionality is not supported or enabled the remote SIM status will always be 0.</p>	
AT#SIMPR=?	Test command reports the range for the parameter <mode>	

5.1.6.1.43. Call Forwarding Flags - #CFF

#CFF – Call Forwarding Flags		SELINT 2
AT#CFF=<enable>	<p>Set command enables/disables the presentation of the call forwarding flags URC.</p> <p>Parameter: <enable> 0 - disable the presentation of the #CFF URC (default value) 1 - enable the presentation of the #CFF URC each time the Call Forwarding Unconditional (CFU) SS setting is changed or checked and, at startup, the presentation of the status of the call forwarding flags, as they are currently stored on SIM.</p> <p>The URC format is:</p> <p>#CFF: <status>,<fwdtonum></p> <p>where: <status> 0 – CFU disabled 1 – CFU enabled</p> <p>< fwdtonum > - number incoming calls are forwarded to</p> <p>The presentation at start up of the call forwarding flags status, as they are currently stored on SIM, is as follows:</p> <p>#CFF: <status>,< fwdtonum ></p> <p>where: <status> 0 – CFU disabled</p>	



#CFF – Call Forwarding Flags		SELINT 2
	1 – CFU enabled < fwdtonum > - number incoming calls are forwarded to	
AT#CFF?	Read command reports whether the presentation of the call forwarding flags URC is currently enabled or not, and, if the flags field is present in the SIM, the current status of the call forwarding flags as they are currently stored on SIM, and the number incoming calls are forwarded to. The format is: #CFF: <enable>[,<status>,< fwdtonum >]	
AT#CFF=?	Test command returns the range of available values for parameter <enable>.	

5.1.6.1.44. GSM and UMTS Audio Codec - #CODEC

#CODEC – GSM and UMTS Audio Codec		SELINT 2
AT#CODEC= [<codec>]	Set command sets the GSM and UMTS audio codec mode. Parameter: <codec> 0 - all the codec modes are enabled (factory default) 1..255 - sum of integers each representing a specific codec mode: 1 - FR , full rate mode enabled 2 - EFR , enhanced full rate mode enabled 4 - HR , half rate mode enabled 8 - AMR-FR , AMR full rate mode enabled 16 - AMR-HR , AMR half rate mode enabled 32 – FAWB , full rate AMR wide band 64 – UAMR2 , UMTS AMR version 2 128 – UAWB , UMTS AMR wide band Note: the full rate mode is added by default to any setting in the SETUP message (as specified in ETSI 04.08), but the call drops if the network assigned codec mode has not been selected by the user. Note: the setting 0 is equivalent to the setting 255. Note: The codec setting is saved in the profile parameters.	
AT#CODEC?	Read command returns current audio codec mode in the format: #CODEC: <codec>	
AT#CODEC=?	Test command returns the range of available values for parameter <codec>	
Example	AT#CODEC=14 OK	



#CODEC – GSM and UMTS Audio Codec	SELINT 2
	sets the codec modes HR (4), EFR (2) and AMR-FR (8)

5.1.6.1.45. Network Timezone - #NITZ

#NITZ - Network Timezone	SELINT 2
AT#NITZ= [<val> [,<mode>]]	<p>Set command enables/disables (a) automatic date/time updating, (b) Full Network Name applying and (c) #NITZ URC; moreover it permits to change the #NITZ URC format.</p> <p>Date and time information can be sent by the network after GSM registration or after GPRS attach.</p> <p>Parameters:</p> <p><val></p> <p>0 - disables (a) automatic data/time updating, (b) Full Network Name applying and (c) #NITZ URC; moreover it sets the #NITZ URC 'basic' format (see <datetime> below)</p> <p>1..15 - as a sum of:</p> <ul style="list-style-type: none"> 1 - enables automatic date/time updating 2 - enables Full Network Name applying 4 - it sets the #NITZ URC 'extended' format (see <datetime> below) 8 - it sets the #NITZ URC 'extended' format with Daylight Saving Time (DST) support (see <datetime> below) <p>(default: 7)</p> <p><mode></p> <p>0 - disables #NITZ URC (factory default)</p> <p>1 - enables #NITZ URC; after date and time updating the following unsolicited indication is sent:</p> <p>#NITZ: <datetime></p> <p>where:</p> <p><datetime> - string whose format depends on subparameter <val></p> <p>"yy/MM/dd,hh:mm:ss" - 'basic' format, if <val> is in (0..3)</p> <p>"yy/MM/dd,hh:mm:ss±zz" - 'extended' format, if <val> is in (4..7)</p> <p>"yy/MM/dd,hh:mm:ss±zz,d" - 'extended' format with DST support, if <val> is in (8..15)</p> <p>where:</p> <ul style="list-style-type: none"> yy - year MM - month (in digits) dd - day hh - hour mm - minute ss - second zz - time zone (indicates the difference, expressed in quarter of an hour,

#NITZ - Network Timezone	SELINT 2
	<p>between the local time and GMT; two last digits are mandatory, range is -47..+48)</p> <p>d – number of hours added to the local TZ because of Daylight Saving Time (summertime) adjustment; range is 0-3.</p> <p>Note: If the DST information isn't sent by the network, then the <datetime> parameter has the format "yy/MM/dd,hh:mm:ss±zz"</p>
AT#NITZ?	<p>Read command reports whether (a) automatic date/time updating, (b) Full Network Name applying, (c) #NITZ URC (as well as its format) are currently enabled or not, in the format:</p> <p>#NITZ: <val>,<mode></p>
AT#NITZ=?	Test command returns supported values of parameters <val> and <mode> .

5.1.6.1.46. Clock management - #CCLK

#CCLK - Clock Management	SELINT 2
AT#CCLK=<time>	<p>Set command sets the real-time clock of the ME.</p> <p>Parameter:</p> <p><time> - current time as quoted string in the format:</p> <p>"yy/MM/dd,hh:mm:ss±zz,d"</p> <p>yy - year (two last digits are mandatory), range is 00..99</p> <p>MM - month (two last digits are mandatory), range is 01..12</p> <p>dd - day (two last digits are mandatory)</p> <p>The range for dd(day) depends either on the month and on the year it refers to. Available ranges are:</p> <p>(01..28)</p> <p>(01..29)</p> <p>(01..30)</p> <p>(01..31)</p> <p>Trying to enter an out of range value will raise an error</p> <p>hh - hour (two last digits are mandatory), range is 00..23</p> <p>mm - minute (two last digits are mandatory), range is 00..59</p> <p>ss - seconds (two last digits are mandatory), range is 00..59</p> <p>±zz - time zone (indicates the difference, expressed in quarter of an hour, between the local time and GMT; two last digits are mandatory), range is -47..+48</p> <p>d – number of hours added to the local TZ because of Daylight Saving Time (summertime) adjustment; range is 0-2.</p>
AT#CCLK?	<p>Read command returns the current setting of the real-time clock, in the format <time>.</p> <p>Note: if the time is set by the network but the DST information is missing, or the time is set by +CCLK command, then the <time> format is:</p>



#CCLK - Clock Management	SELINT 2
	"yy/MM/dd,hh:mm:ss±zz"
AT#CCLK=?	Test command returns the OK result code.
Example	AT#CCLK="02/09/07,22:30:00+04,1" OK AT#CCLK? #CCLK: "02/09/07,22:30:25+04,1" OK

5.1.6.1.47. Clock Mode - #CCLKMODE

#CCLKMODE – Clock Mode	SELINT 2
AT#CCLKMODE=<mode>	<p>Set command enables the local time or the UTC time in AT+CCLK and AT#CCLK commands and in #NITZ URC</p> <p>Parameter: <mode> - time and date mode 0 - Local time + local time zone offset (default) 1 – UTC time + local time zone offset</p> <p>Note: the setting is saved automatically in NVM.</p>
AT#CCLKMODE?	<p>Read command reports whether the local time or the UTC time is enabled, in the format:</p> <p>#CCLKMODE: <mode> (<mode> described above)</p>
AT#CCLKMODE=?	<p>Test command reports the supported range of values for parameter <mode></p>
Example:	<pre>at#cclkmode? #CCLKMODE: 0 OK #NITZ: 13/03/05,15:20:33+04,0 at+cclk? +CCLK: "13/03/05,15:20:37+04" OK at#cclkmode=1 OK at+cclk? +CCLK: "13/03/05,14:20:45+04" OK at#cclkmode?</pre>



#CCLKMODE – Clock Mode	SELINT 2
	<pre>#CCLKMODE: 1 OK #NITZ: 13/03/05,14:20:53+04,0 at+cclk? +CCLK: "13/03/05,14:20:55+04" OK at#cclkmode=0 OK at+cclk? +CCLK: "13/03/05,15:20:59+04" OK</pre>

5.1.6.1.48. Enhanced Network Selection - #ENS

#ENS - Enhanced Network Selection	SELINT 2
AT#ENS=[<mode>]	<p>Set command is used to activate the ENS functionality.</p> <p>Parameter: <mode> 0 - disable ENS functionality (default) 1 - enable ENS functionality; if AT#ENS=1 has been issued, the following values will be automatically set:</p> <ul style="list-style-type: none"> <input type="checkbox"/> at every next power-up <ul style="list-style-type: none"> a Band GSM 850 and PCS enabled (AT#BND=3) b SIM Application Toolkit enabled on user interface 0 if not previously enabled on a different user interface (AT#STIA=2) <input type="checkbox"/> just at first next power-up <ul style="list-style-type: none"> a Automatic Band Selection enabled (AT#AUTOBND=2) only if the previous setting was equal to AT#AUTOBND=0 <p>Note: the new setting will be available just at first next power-up.</p> <p>Note: If 'Four Band' Automatic Band Selection has been activated (AT#AUTOBND=2), at power-up the value returned by AT#BND? could be different from 3 when ENS functionality is enabled.</p>
AT#ENS?	<p>Read command reports whether the ENS functionality is currently enabled or not, in the format:</p>



	#ENS: <mode> where: <mode> as above
AT#ENS=?	Test command reports the available range of values for parameter <mode>.
Reference	Cingular Wireless LLC Requirement

5.1.6.1.49. Select Band - #BND

#BND - Select Band	SELINT 2
AT#BND= [<band> [, <UMTS band>]]	<p>Set command selects the current GSM and UMTS bands.</p> <p>Parameter <band>: 0 - GSM 900MHz + DCS 1800MHz (default value) 1 - GSM 900MHz + PCS 1900MHz; this value is not available if the ENS functionality has been activated (see #ENS) 2 - GSM 850MHz + DCS 1800MHz (available only on quadri-band modules); this value is not available if the ENS functionality has been activated (see #ENS) 3 - GSM 850MHz + PCS 1900MHz (available only on quadri-band modules)</p> <p><UMTS band>: 0 - 1900 / 2100MHz(FDD I) 1 - 1900MHz(FDD II) (default value depending on product) 2 - 850MHz(FDD V) 3 - 2100MHz(FDD I) + 1900MHz(FDD II) + 850MHz(FDD V) 4 - 1900MHz(FDD II) + 850MHz(FDD V) 5 - 900MHz(FDD VIII) (default value, depending on the product) 6 - 2100MHz(FDD I) + 900MHz(FDD VIII) 7 – 1700/ 2100MHz(FDD IV, AWS)</p> <p>Note: This setting is maintained even after power off.</p> <p>Note: if the normal automatic band selection is enabled (AT#AUTOBND=1) then the last #BND settings can automatically change at power-up; then you can normally use the command.</p> <p>Note: if the ‘four bands’ automatic band selection is enabled (AT#AUTOBND=2) then you can issue AT#BND=<band> but it will have no functional effect; nevertheless every following read command AT#BND? will report that setting.</p> <p>Note: not all products support all the values of parameter <UMTS band>; please refer to test command to find the supported range of values</p>



#BND - Select Band		SELINT 2
AT#BND?	Read command returns the current selected band in the format: #BND: <band> , <UMTS band>	
AT#BND=?	Test command returns the supported range of values of parameters <band> and <UMTS band>.	

5.1.6.1.50. Automatic Band Selection - #AUTOBND

#AUTOBND - Automatic Band Selection		SELINT 2
AT#AUTOBND= [<value>]	<p>Set command enables/disables the automatic band selection at power-on.</p> <p>Parameter: <value>: 0 - disables automatic band selection at <i>next</i> power-up 1 - enables automatic band selection at <i>next</i> power-up; the automatic band selection stops as soon as a cell is found (deprecated). 2 – (default) enables automatic band selection in all supported bands; differently from previous settings it takes <i>immediate</i> effect</p> <p>Note: necessary condition to <i>effectively</i> have automatic band selection at next power-up (due to either AT#AUTOBND=1 or AT#AUTOBND=2) is that AT+COPS=0 has to be previously issued</p> <p>Note: if automatic band selection is enabled (AT#AUTOBND=1) the band changes every about 90 seconds through available bands until a cell is found.</p> <p>Note: if the current setting is equal to AT#AUTOBND=0 and we're issuing AT#ENS=1, at <i>first next</i> power-up after the ENS functionality has been activated (see #ENS) the automatic band selection (AT#AUTOBND=2) is enabled.</p>	
AT#AUTOBND?	<p>Read command returns whether the automatic band selection is enabled or not in the form:</p> <p>#AUTOBND: <value></p>	
AT#AUTOBND=?	Test command returns the range of supported values for parameter <value>.	



5.1.6.1.51. PPP-GPRS Connection Authentication Type - #GAUTH

#GAUTH – PPP Data Connection Authentication Type		SELINT 2
AT#GAUTH= [<type>]	<p>Set command sets the authentication type used in PDP Context Activation during PPP-GPRS connections.</p> <p>Parameter <type> 0 - no authentication 1 - PAP authentication (factory default) 2 - CHAP authentication</p> <p>Note: if the settings on the server side (the host application) of the PPP are not compatible with the AT#GAUTH setting, then the PDP Context Activation will use no authentication.</p>	
AT#GAUTH?	<p>Read command reports the current authentication type, in the format:</p> <p>#GAUTH: <type></p>	
AT#GAUTH=?	Test command returns the range of supported values for parameter <type>.	

5.1.6.1.52. Skip Escape Sequence - #SKIPESC

#SKIPESC - Skip Escape Sequence		SELINT 2
AT#SKIPESC= [<mode>]	<p>Set command enables/disables skipping the escape sequence +++ while transmitting during a data connection.</p> <p>Parameter: <mode> 0 - doesn't skip the escape sequence; its transmission is enabled (factory default). 1 - skips the escape sequence; its transmission is not enabled.</p> <p>Note: in case of an FTP connection, the escape sequence is not transmitted, regardless of the command setting.</p>	
AT#SKIPESC?	<p>Read command reports whether escape sequence skipping is currently enabled or not, in the format:</p> <p>#SKIPESC: <mode></p>	
AT#SKIPESC=?	Test command reports supported range of values for parameter <mode>.	



5.1.6.1.53. Subscriber number - #SNUM

#SNUM – Subscriber Number	SELINT 2
AT#SNUM= <index>,<number>[,<alpha>]	<p>Set command writes the MSISDN information related to the subscriber (own number) in the EFmsisdn SIM file.</p> <p>Parameter:</p> <p><index> - record number The number of record in the EFmsisdn depends on the SIM. If only <index> value is given, then delete the EFmsisdn record in location <index> is deleted.</p> <p><number> - string containing the phone number</p> <p><alpha> - alphanumeric string associated to <number>. Default value is empty string (""), otherwise the used character set should be the one selected with +CSCS. The string could be written between quotes, the number of characters depends on the SIM. If empty string is given (""), the corresponding <alpha> will be an empty string.</p> <p>Note: the command return ERROR if EFmsisdn file is not present in the SIM or if MSISDN service is not allocated and activated in the SIM Service Table (see 3GPP TS 11.11).</p>
AT#SNUM=?	Test command returns the OK result code

5.1.6.1.54. SIM detection mode - #SIMDET

#SIMDET - SIM Detection Mode	SELINT 2
AT#SIMDET= <mode>	<p>Set command specifies the SIM Detection mode</p> <p>Parameter:</p> <p><mode> - SIM Detection mode</p> <ul style="list-style-type: none"> 0 - ignore SIMIN pin and simulate the status 'SIM Not Inserted' 1 - ignore SIMIN pin and simulate the status 'SIM Inserted' 2 - automatic SIM detection through SIMIN Pin (default)
AT#SIMDET?	<p>Read command returns the currently selected Sim Detection Mode in the format:</p> <p>#SIMDET: <mode>,<simin></p> <p>where:</p> <p><mode> - SIM Detection mode, as before</p> <p><simin> - SIMIN pin real status</p> <ul style="list-style-type: none"> 0 - SIM not inserted



#SIMDET - SIM Detection Mode	SELINT 2
	1 - SIM inserted
AT#SIMDET=?	Test command reports the supported range of values for parameter <mode>

5.1.6.1.55. GSM Context Definition - #GSMCONT

#GSMCONT - GSM Context Definition	SELINT 2
AT#GSMCONT= <cid>[,<P_type>, <CSD_num>]	<p>Set command specifies context parameter values for the only GSM context, identified by the (local) context identification parameter 0.</p> <p>Parameters:</p> <p><cid> - context Identifier; numeric parameter which specifies the only GSM context</p> <p>0</p> <p><P_type> - protocol type; a string parameter which specifies the type of protocol</p> <p>"IP" - Internet Protocol</p> <p><CSD_num> - phone number of the internet service provider</p> <p>Note: issuing #GSMCONT=0 causes the values for context number 0 to become undefined.</p> <p>Note: command not yet implemented</p>
AT#GSMCONT?	<p>Read command returns the current settings for the GSM context, if defined, in the format:</p> <p>+GSMCONT: <cid>,<P_type>,<CSD_num></p>
AT#GSMCONT=?	Test command returns the supported range of values for all the parameters.



5.1.6.1.56. Show Address - #CGPADDR

#CGPADDR - Show Address	SELINT 2
<p>AT#CGPADDR= [<cid>,<cid> [,...]]</p>	<p>Execution command returns either the IP address for the GSM context (if specified) and/or a list of PDP addresses for the specified PDP context identifiers</p> <p>Parameters: <cid> - context identifier 0 - specifies the GSM context (see +GSMCONT). 1..5 - numeric parameter which specifies a particular PDP context definition (see +CGDCONT command).</p> <p>Note: if no <cid> is specified, the addresses for all defined contexts are returned.</p> <p>Note: issuing the command with more than 6 parameters raises an error.</p> <p>Note: the command returns only one row of information for every specified <cid>, even if the same <cid> is present more than once.</p> <p>The command returns a row of information for every specified <cid> whose context has been already defined. No row is returned for a <cid> whose context has not been defined yet. Response format is:</p> <p>#CGPADDR: <cid>,<address>[<CR><LF> #CGPADDR: <cid>,<address>[...]]</p> <p>where: <cid> - context identifier, as before <address> - its meaning depends on the value of <cid></p> <ol style="list-style-type: none"> if <cid> is the (only) GSM context identifier (<cid>=0) it is the dynamic address assigned during the GSM context activation. if <cid> is a PDP context identifier (<cid> in (1..5)) it is a string that identifies the terminal in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid>. <p>Note: if no address is available the empty string ("") is represented as <address>.</p>
<p>AT#CGPADDR=?</p>	<p>Test command returns a list of defined <cid>s.</p>
<p>Example</p>	<p>AT#SGACT=0,1 #SGACT: xxx.yyy.zzz.www OK</p>



	AT#CGPADDR=0 #CGPADDR: 0,"xxx.yyy.zzz.www" OK AT#CGPADDR=? #CGPADDR: (0) OK
--	--

5.1.6.1.57. Call Establishment Lock - #CESTHLCK

#CESTHLCK – Call establishment lock		SELINT 2
AT#CESTHLCK=[<closure_type>]	<p>This command can be used to disable call abort before the DCE enters connected state.</p> <p>< closure_type >: 0 - Aborting the call setup by reception of a character is generally possible at any time before the DCE enters connected state (default) 1 - Aborting the call setup is disabled until the DCE enters connected state</p>	
AT#CESTHLCK?	<p>Read command returns the current setting of <closure_type> parameter in the format:</p> <p>#CESTHLCK: <closure_type></p>	
AT#CESTHLCK=?	<p>Test command returns the supported range of values for the <closure_type> parameter</p>	

5.1.6.1.58. Write to I2C - #I2CWR

#I2CWR – Write to I2C		SELINT 2
AT#I2CWR=<sdaPin>,<sclPin>,<deviceId>,<registerId>,<len>	<p>This command is used to Send Data to an I2C peripheral connected to module GPIOs</p> <p><sdaPin>: GPIO number for SDA . Valid range is “any input/output pin” (see Test Command.)</p> <p><sclPin>: GPIO number to be used for SCL. Valid range is “any output pin” (see Test Command).</p> <p><deviceId>: address of the I2C device, with the LSB, used for read\write command. It doesn't matter if the LSB is set to 0 or to 1. 10 bit addressing supported. Value has to be written in hexadecimal form (without 0x).</p>	



#I2CWR – Write to I2C	SELINT 2
	<p><registerId>: Register to write data to , range 0..255. Value has to be written in hexadecimal form (without 0x).</p> <p><len>: number of data to send. Valid range is 1-254.</p> <p>The module responds to the command with the prompt '>' and awaits for the data to send. To complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex).</p> <p>Data shall be written in Hexadecimal Form.</p> <p>If data are successfully sent, then the response is OK.</p> <p>If data sending fails for some reason, an error code is reported. Example if CheckAck is set and no Ack signal was received on the I2C bus</p> <p>NOTE: At the end of the execution GPIO will be restored to the original setting (check AT#GPIO Command)</p> <p>NOTE: device address, register address where to read from\ write to, and date bytes have to be written in hexadecimal form without 0x.</p>
AT#I2CWR=?	Test command reports the supported list of currently available <service>s.
Example	<p>AT#I2CWR=2,3,20,10,14 > 00112233445566778899AABBCCDD<ctrl-z> OK</p> <p>Set GPIO2 as SDA, GPIO3 as SCL; Device I2C address is 0x20; 0x10 is the address of the first register where to write I2C data; 14 data bytes will be written since register 0x10</p>

5.1.6.1.59. Read to I2C - #I2CRD

#I2CRD – Read to I2C	SELINT 2
AT#I2CRD= <sdaPin>, <sclPin>, <deviceId>, <registerId>, <len>	<p>This command is used to Send Data to an I2C peripheral connected to module GPIOs</p> <p><sdaPin>: GPIO number for SDA . Valid range is “any input/output pin” (see Test Command.)</p> <p><sclPin>: GPIO number to be used for SCL. Valid range is “any output pin” (see Command Test).</p> <p><deviceId>: address of the I2C device, with the LSB, used for read\write</p>



#I2CRD – Read to I2C	SELINT 2
	<p>command. It doesn't matter if the LSB is set to 0 or to 1. 10 bit addressing supported. Value has to be written in hexadecimal form (without 0x before).</p> <p><registerId>: Register to read data from, range 0..255. Value has to be written in hexadecimal form (without 0x before).</p> <p><len>: number of data to receive. Valid range is 1-254.</p> <p>Data Read from I2C will be dumped in Hex:</p> <p>NOTE: If data requested are more than data available in the device, dummy data (normally 0x00 or 0xff) will be dumped.</p> <p>NOTE: At the end of the execution GPIO will be restored to the original setting (check AT#GPIO Command)</p> <p>NOTE: device address, register address where to read from\ write to, and date bytes have to be written in hexadecimal form without 0x.</p>
AT#I2CRD=?	Test command reports the supported list of currently available <service>s.
Example	<p>AT#I2CRD=2,3,20,10,12</p> <p>#I2CRD: 00112233445566778899AABBCC</p> <p>OK</p>



5.1.6.1.60. Power Saving Mode Ring - #PSMRI

#PSMRI – Power Saving Mode Ring		SELINT 2
AT#PSMRI= <x>	<p>Set command enables/disables the Ring Indicator pin response to an URC message while modem is in power saving mode. If enabled, a negative going pulse is generated, when URC message for specific event is invoked.</p> <p>The duration of this pulse is determined by the value of <x>.</p> <p>Parameter:</p> <p><x> - RI enabling 0 - disables RI pin response for URC message(factory default) 50-1150 - enables RI pin response for URC messages.</p> <p>Note: when RING signal from incoming call/SMS/socket listen is enabled, the behaviour for #PSMRI will be ignored.</p> <p>Note: the behavior for #PSMRI is invoked, only when modem is in sleep mode (AT+CFUN=5 and AT+CFUN=9)</p> <p>Note: in case of AT+CFUN=9, the pulse is generated also when a GPRS packet is received.</p> <p>Note: the value set by command is stored in the profile extended section and doesn't depend on the specific AT instance</p>	
#PSMRI?	<p>Read command reports the duration in ms of the pulse generated, in the format:</p> <p>#PSMRI: <x></p>	
#PSMRI=?	<p>Test command reports the supported range of values for parameter <x></p>	



5.1.6.1.61. Control Command Flow - #CFLO

#CFLO – Command Flow Control		SELINT 2
AT#CFLO= <enable>	<p>Set command enables/disables the flow control in command mode. If enabled, current flow control is applied to both data mode and command mode.</p> <p>Parameter: <enable> - 0 – disable flow control in command mode <default value> 1 – enable flow control in command mode</p> <p>Note: setting value is saved in the profile</p>	
AT#CFLO?	Read command returns current setting value in the format #CFLO: <enable>	
AT#CFLO=?	Test command returns the range of supported values for parameter <enable>	

5.1.6.1.62. Report concatenated SMS indexes - #CMGLCONCINDEX

#CMGLCONCINDEX – Report concatenated SMS indexes		SELINT 2
AT#CMGLCONCINDEX	<p>The command will report a line for each concatenated SMS containing:</p> <p>#CMGLCONCINDEX: N,i,j,k,...</p> <p>where N is the number of segments that form the whole concatenated SMS i,j,k are the SMS indexes of each SMS segment , 0 if segment has not been received</p> <p>If no concatenated SMS is present on the SIM, only OK result code will be returned.</p>	
AT#CMGLCONCINDEX=?	Test command returns OK result code.	
Example	<p>at#cmglconcindex</p> <p>#CMGLCONCINDEX: 3,0,2,3</p> <p>#CMGLCONCINDEX: 5,4,5,6,0,8</p> <p>OK</p>	



5.1.6.1.63. Codec Information - #CODECINFO

#CODECINFO – Codec Information	SELINT 2
AT#CODECINFO[=<format>[, <mode>]]	<p>This command is both a set and an execution command.</p> <p>Set command enables/disables codec information reports depending on the parameter <mode>, in the specified <format>.</p> <p>Parameters:</p> <p><format> 0 – numeric format (default) 1 – textual format</p> <p><mode> 0 - disable codec information unsolicited report (default) 1 - enable codec information unsolicited report only if the codec changes 2 - enable short codec information unsolicited report only if the codec changes</p> <p>If <mode>=1 the unsolicited channel mode information is reported in the following format:</p> <p>(if <format>=0) #CODECINFO: <codec_used>,<codec_set></p> <p>(if <format>=1) #CODECINFO: <codec_used>,<codec_set1> [,<codec_set2>[..,<codec_setn>]]]</p> <p>If <mode>=2 the unsolicited codec information is reported in the following format:</p> <p>#CODECINFO: <codec_used></p> <p>The reported values are described below.</p> <p>Execution command reports codec information in the specified <format>.</p> <p>(if <format>=0) #CODECINFO: <codec_used>,<codec_set></p> <p>(if <format>=1) #CODECINFO: <codec_used>,<codec_set1> [,<codec_set2>[..,<codec_setn>]]]</p> <p>The reported values are:</p>



#CODECINFO – Codec Information	SELINT 2
	<p>(if <format>=0)</p> <p><codec_used> - one of the following channel modes:</p> <ul style="list-style-type: none"> 0 – no TCH 1 - full rate speech 1 on TCH 2 - full rate speech 2 on TCH 4 - half rate speech 1 on TCH 8 - full rate speech 3 – AMR on TCH 16 - half rate speech 3 – AMR on TCH 128 – full data 9.6 129 – full data 4.8 130 – full data 2.4 131 – half data 4.8 132 – half data 2.4 133 – full data 14.4 134 – full rate AMR wide band 135 – UMTS AMR version 2 136 – UMTS AMR wide band <p><codec_set></p> <ul style="list-style-type: none"> 1..255 - sum of integers each representing a specific codec mode: <ul style="list-style-type: none"> 1 - FR, full rate mode enabled 2 - EFR, enhanced full rate mode enabled 4 - HR, half rate mode enabled 8 - FAMR, AMR full rate mode enabled 16 - HAMR, AMR half rate mode enabled 32 – FR-AMR-WB, full rate AMR wide band 64 – UMTS-AMR-V2, UMTS AMR version 2 128 – UMTS-AMR-WB, UMTS AMR wide band <p>(if <format>=1)</p> <p><codec_used> - one of the following channel modes:</p> <ul style="list-style-type: none"> None – no TCH FR - full rate speech 1 on TCH EFR - full rate speech 2 on TCH HR - half rate speech 1 on TCH FAMR - full rate speech 3 – AMR on TCH HAMR - half rate speech 3 – AMR on TCH FD96 - full data 9.6 FD48 - full data 4.8 FD24 - full data 2.4 HD48 - half data 4.8 HD24 - half data 2.4 FD144 - full data 14.4 FAWB - full rate AMR wide band UAMR2 – UMTS AMR version 2 UAWB – UMTS AMR wide band



#CODECINFO – Codec Information		SELINT 2
	<p><codec_setn> FR - full rate mode enabled EFR - enhanced full rate mode enabled HR - half rate mode enabled FAMR - AMR full rate mode enabled HAMR - AMR half rate mode enabled FAWB - full rate AMR wide band UAMR2 - UMTS AMR version 2 UAWB - UMTS AMR wide band</p> <p>Note: The command refers to codec information in speech call and to channel mode in data call.</p> <p>Note: if AT#CODEC is 0, the reported codec set for <format>=0 is 255 (all codec).</p>	
AT#CODECINFO?	Read command reports <format> and <mode> parameter values in the format: #CODECINFO: <format>,<mode>	
AT#CODECINFO=?	Test command returns the range of supported <format> and <mode> .	

5.1.6.1.64. Select language - #LANG

#LANG – select language		SELINT 2
AT#LANG=<lan>	Set command selects the currently used language for displaying different messages Parameter: <lan> - selected language “en” – English (factory default) “it” – Italian	
AT#LANG?	Read command reports the currently selected <lan> in the format: #LANG: <lan>	
AT#LANG=?	Test command reports the supported range of values for parameter <lan>	



5.1.6.1.65. Enable RX Diversity and set DARP - #RXDIV

#RXDIV – enable RX Diversity and set DARP		SELINT 2
AT#RXDIV=<DIV_enable>[,<DARP_mode>]	<p>This command enables/disables the RX Diversity and sets the DARP.</p> <p>Parameters:</p> <p><DIV_enable> RX Diversity 0 - disable the RX Diversity 1 - enable RX Diversity (default value)</p> <p><DARP_mode> DARP mode 0 – DARP not supported 1 – DARP phase 1 2 – DARP phase 2 traffic only 3 – DARP always on (default value)</p> <p>Note: the values set by command are directly stored in NVM and don't depend on the specific CMUX instance. They are available at next power on.</p> <p>Note: if <DIV_enable> is set to 0, then <DARP_mode> is automatically set to 1 regardless the set value</p>	
AT#RXDIV?	<p>Read command reports the currently selected <DIV_enable> and <DARP_mode> parameters in the format:</p> <p>#RXDIV: <DIV_enable>,<DARP_mode></p>	
AT#RXDIV=?	<p>Test command reports the supported range of values for parameters <DIV_enable> and <DARP_mode></p>	



5.1.6.1.66. Set Encryption algorithm - #ENCALG

#ENCALG – Set Encryption Algorithm	SELINT 2
<p>AT#ENCALG=[<encGSM>][,<encGPRS>]</p>	<p>This command enables or disables the GSM and/or GPRS encryption algorithms supported by the module.</p> <p>Parameters:</p> <p><encGSM>:</p> <ul style="list-style-type: none"> 0 – no GSM encryption algorithm 1..7 - sum of integers each representing a specific GSM encryption algorithm: <ul style="list-style-type: none"> 1 – A5/1 2 – A5/2 4 – A5/3 255 - reset the default values <p><encGPRS>:</p> <ul style="list-style-type: none"> 0 – no GPRS encryption algorithm 1..7 - sum of integers each representing a specific GPRS encryption algorithm: <ul style="list-style-type: none"> 1 – GEA1 2 – GEA2 4 – GEA3 255 - reset the default values <p>Note: the values are stored in NVM and available on following reboot.</p> <p>Note: For possible <encGSM> and <encGPRS> encryptions see test command response.</p> <p>Note: If no parameter is issued, the set command returns ERROR.</p>
<p>AT#ENCALG?</p>	<p>Read command reports the currently selected <encGSM> and <encGPRS>, and the last used <useGSM> and <useGPRS> in the format:</p> <p>#ENCALG: <encGSM>,<encGPRS>,<usedGSM>,<usedGPRS></p> <p>Parameters:</p> <p><usedGSM>:</p> <ul style="list-style-type: none"> 0 – no GSM encryption algorithm 1 – A5/1 2 – A5/2 4 – A5/3 <p><usedGPRS>:</p> <ul style="list-style-type: none"> 0 – no GPRS encryption algorithm 1 – GEA1



	<p>2 – GEA2 4 – GEA3</p>
AT#ENCALG=?	<p>Test command reports the supported range of values for parameters in the format: < encGSM > and < encGPRS >.</p>
Example	<p>AT#ENCALG? #ENCALG: 5,2,1,1</p> <p>OK</p> <p>AT#ENCALG=5,1 OK</p> <p><i>sets the GSM encryption algorithm A5/1 and A5/3, and the GPRS encryption algorithm GEA1. It will be available at the next reboot.</i></p> <p>AT#ENCALG? #ENCALG: 5,2,1,1</p> <p><i>The last two values indicate that the last used GSM encryption algorithm is A5/1 and the last used GPRS encryption algorithm is GEA1</i></p> <p><i>After reboot</i></p> <p>AT#ENCALG? #ENCALG: 5,1,1,1</p>



5.1.6.1.67. Escape Sequence Guard Time - #E2ESC

#E2ESC - Escape Sequence Guard Time		SELINT 2
AT#E2ESC= [<gt;]	<p>Set command sets a guard time in seconds for the escape sequence in GPRS to be considered a valid one (and return to on-line command mode).</p> <p>Parameter: <gt;> 0 - guard time defined by command S12 (factory default) 1..10 - guard time in seconds</p> <p>Note: if the Escape Sequence Guard Time is set to a value different from zero, it overrides the one set with S12.</p>	
AT#E2ESC?	<p>Read command returns current value of the escape sequence guard time, in the format:</p> <p>#E2ESC: <gt;></p>	
AT#E2ESC=?	Test command returns the range of supported values for parameter <gt;>.	
AT#E2ESC= [<gt;]	<p>Set command sets a guard time in seconds for the escape sequence in GPRS to be considered a valid one (and return to on-line command mode).</p> <p>Parameter: <gt;> 0 - guard time defined by command S12 (factory default) 1..10 - guard time in seconds</p> <p>Note: if the Escape Sequence Guard Time is set to a value different from zero, it overrides the one set with S12.</p>	



5.1.6.1.68. No Carrier Indication Handling - #NCIH

#NCIH – NO CARRIER Indication Handling		SELINT 2
AT#NCIH = <enable>	Set command enables/disables sending of a NO CARRIER indication when a remote call that is ringing is dropped by calling party before it is answered at called party. Parameter: <enable> - NO CARRIER indication sending 0 - disabled (factory default) 1 - enabled	
AT#NCIH?	Read command reports whether the feature is currently enabled or not, in the format: #NCIH: <enable>	
AT#NCIH=?	Test command returns the supported range of values for parameter <enable>.	

5.1.6.1.69. Digital/Analog Converter Control - #DAC

#DAC - Digital/Analog Converter Control		SELINT 2
AT#DAC= [<enable> [,<value>]]	Set command enables/disables the DAC_OUT pin. Parameters: <enable> - enables/disables DAC output. 0 - disables pin; it is in high impedance status (factory default) 1 - enables pin; the corresponding output is driven <value> - scale factor of the integrated output voltage; it must be present if <enable>=1 0..1023 - 10 bit precision Note: integrated output voltage = MAX_VOLTAGE * value / 1023 Note: the command automatically sets the GPIO_07 in alternate function ALT1	
AT#DAC?	Read command reports whether the DAC_OUT pin is currently enabled or not, along with the integrated output voltage scale factor, in the format: #DAC: <enable>,<value>	
AT#DAC=?	Test command reports the range for the parameters <enable> and <value>.	
Example	Enable the DAC out and set its integrated output to the 50% of the max value: AT#DAC=1,511 OK Disable the DAC out:	



#DAC - Digital/Analog Converter Control		SELINT 2
	AT#DAC=0 OK	
Note	<p>With this command the DAC frequency is selected internally. D/A converter must not be used during POWERSAVING.</p> <p>DAC_OUT line must be integrated (for example with a low band pass filter) in order to obtain an analog voltage.</p> <p>For a more in depth description of the integration filter refer to the hardware user guide.</p>	

5.1.6.1.70. GSM Antenna Detection - #GSMAD

#GSMAD - GSM Antenna Detection		SELINT 2
AT#GSMAD= <mod> , [<urcmode> [,<interval> [,<detGPIO> [,<repGPIO>]]]]	<p>Set command sets the behaviour of antenna detection algorithm</p> <p>Parameters:</p> <p><mod></p> <ul style="list-style-type: none"> 0 - antenna detection algorithm not active 1 - periodic activation of the antenna detection algorithm; detection is started every <interval> period, using <detGPIO> for detection; if the algorithm detects a change in the antenna status the module is notified by URC #GSMAD (see format below) 2 - instantaneous activation of the antenna detection algorithm; if the algorithm detects a change in the antenna status the module is notified by URC #GSMAD (see format below); this instantaneous activation doesn't affect a periodic activation eventually started before. This modality is obsolete and is maintained only for backward compatibility. We suggest to use the modality 3 <p>URC format:</p> <p>#GSMAD: <presence></p> <p>where:</p> <p><presence></p> <ul style="list-style-type: none"> 0 - antenna connected. 1 - antenna connector short circuited to ground. 2 - antenna connector short circuited to power. 3 - antenna not detected (open). <p>3 - instantaneous activation of the antenna detection algorithm as modality 2 but in this case the command doesn't return until the algorithm ended. The returned value is the antenna <presence> status just detected. Format:</p> <p>AT#GSMAD=3</p>	



	<p>#GSMAD: <presence></p> <p>OK</p> <p>This instantaneous activation doesn't affect a periodic activation eventually started before, then the output format would be:</p> <p>AT#GSMAD=3 #GSMAD: <presence></p> <p>OK</p> <p>#GSMAD: <presence> // URC resulting of previous #GSMAD=1</p> <p><urcmode> - URC presentation mode. It has meaning and can be set only if <mod> is 1. 0 - it disables the presentation of the antenna detection URC 1 - it enables the presentation of the antenna detection URC, whenever the antenna detection algorithm detects a change in the antenna status; the unsolicited message is in the format:</p> <p>#GSMAD: <presence></p> <p>where: <presence> is as before</p> <p><interval> - duration in seconds of the interval between two consecutive antenna detection algorithm runs (default is 120). It has meaning and can be set only if <mod> is 1. ..1..3600 - seconds</p> <p><detGPIO> - defines which GPIO shall be used as input by the Antenna Detection algorithm. For the <detGPIO> actual range see Test Command</p> <p><repGPIO> - defines which GPIO shall be used by the Antenna Detection algorithm to report antenna condition. It has meaning only if <mod> is 1. For the <repGPIO> actual range see Test Command.</p> <p>Note: the URC presentation mode <urcmode> is related to the current AT instance only (see +cmux); last <urcmode> settings are saved for every instance as extended profile parameters, thus it is possible to restore them either if the multiplexer control channel is released and set up, back and forth.</p> <p>Note: GPIO is set to LOW when antenna is connected. Set to HIGH otherwise</p> <p>Note: #GSMAD parameters, excluding <urcmode>, are saved in NVM.</p>
AT#GSMAD?	Read command returns the current parameter settings for #GSMAD command in



	the format: #GSMAD: <mod>,<urcmode>,<interval>,<detGPIO>,<repGPIO>
AT#GSMAD=?	Test command reports the supported range of values for parameters <mod>,<urcmode>,<interval>,<detGPIO> and <repGPIO>.

5.1.6.2. AT Run Commands

5.1.6.2.1. Enable SMS Run AT Service - #SMSATRUN

#SMSATRUN – Enable SMS AT Run service		SELINT 2
AT#SMSATRUN=<mod>	<p>Set command enables/disables the SMS AT RUN service.</p> <p>Parameter: < mod ></p> <p>0: Service Disabled 1: Service Enabled</p> <p>Note1: When the service is active on a specific AT instance (see AT#SMSATRUNCFG), that instance cannot be used for any other scope, except for OTA service that has the highest priority. For example in the multiplexer request to establish the Instance, the request will be rejected.</p> <p>Note2: the current settings are stored in NVM.</p>	
AT#SMSATRUN?	<p>Read command returns the current settings of <mode> and the value of <stat> in the format:</p> <p># SMSATRUN: <mod>,<stat></p> <p>where: <stat> - service status 0 – not active 1 - active</p>	
AT#SMSATRUN =?	Test command returns the supported values for the SMSATRUN parameters	
Notes:	<ul style="list-style-type: none"> By default the SMS ATRUN service is disabled It can be activated either by the command AT#SMSATRUN or receiving a special SMS that can be sent from a Telit server. 	



5.1.6.2.2. Set SMS Run AT Service parameters - #SMSATRUNCFG

#SMSATRUNCFG – Set SMS AT Run Parameters		SELINT 2
AT#SMSATRUNCFG= <instance> [,<urcmode> [,<timeout>]]	<p>Set command configures the SMS AT RUN service.</p> <p>Parameter:</p> <p><instance>: AT instance that will be used by the service to run the AT Command. Range 1 - 3, default 3.</p> <p><urcmode>: 0 – disable unsolicited message 1 - enable an unsolicited message when an AT command is requested via SMS (default).</p> <p>When unsolicited is enabled, the AT Command requested via SMS is indicated to TE with unsolicited result code:</p> <p>#SMSATRUN: <Text></p> <p>e.g.: #SMSATRUN: AT+CGMR;+CGSN;+GSN;+CCLK</p> <p>Unsolicited is dumped on the instance that requested the service activation.</p> <p><timeout>: It defines in minutes the maximum time for a command execution. If timeout expires the module will be rebooted. Range 1 – 60, default 5.</p> <p>Note 1: the current settings are stored in NVM.</p> <p>Note 2: the instance used for the SMS AT RUN service is the same used for the EvMoni service. Therefore, when the #SMSATRUNCFG sets the <instance> parameter, the change is reflected also in the <instance> parameter of the #ENAEVMONICFG command, and viceversa.</p> <p>Note 3: the set command returns ERROR if the command AT#ENAEVMONI? returns 1 as <mod> parameter or the command AT#SMSATRUN? returns 1 as <mod> parameter</p>	
AT#SMSATRUNCFG?	<p>Read command returns the current settings of parameters in the format:</p> <p>#SMSATRUNCFG:<instance>,<urcmode>,<timeout></p>	
AT#SMSATRUNCFG=?	<p>Test command returns the supported values for the SMSATRUNCFG parameters</p>	



5.1.6.2.3. SMS AT Run White List - #SMSATWL

#SMSATWL – SMS AT Run White List		SELINT 2
AT#SMSATWL= <action> ,<index> [,<entryType> [,<string>]]	<p>Set command to handle the white list.</p> <p><action >:</p> <ul style="list-style-type: none"> 0 – Add an element to the WhiteList 1 – Delete an element from the WhiteList 2 – Print and element of the WhiteList <p>< index >: Index of the WhiteList. Range 1-8</p> <p>< entryType >:</p> <ul style="list-style-type: none"> 0 – Phone Number 1 – Password <p>NOTE: A maximum of two Password Entry can be present at same time in the white List</p> <p><string>: string parameter enclosed between double quotes containing or the phone number or the password</p> <p>Phone number shall contain numerical characters and/or the character “+” at the beginning of the string and/or the character “*” at the end of the string. Password shall be 16 characters length</p> <p>NOTE: When the character “*” is used, it means that all the numbers that begin with the defined digit are part of the white list.</p> <p>E.g. “+39*” All Italian users can ask to run AT Command via SMS “+39349*” All vodafone users can ask to run AT Command via SMS.</p>	
AT#SMSATWL?	<p>Read command returns the list elements in the format:</p> <p>#SMSATWL: [<entryType>,<string>]</p>	
AT#SMSATWL=?	<p>Test command returns the supported values for the parameter <action>, <index> and <entryType></p>	



5.1.6.2.4. Set TCP Run AT Service parameter - #TCPATRUNCFG

#TCPATRUNCFG– Set TCP AT Run Service Parameters	SELINT 2
AT#TCPATRUNCFG= <connId> ,<instance> ,<tcpPort> ,<tcpHostPort> ,<tcpHost> [,<urcmod> [,<timeout> [,<authMode> [,<retryCnt> [,<retryDelay>]]]]]	<p>Set command configures the TCP AT RUN service Parameters:</p> <p><connId> socket connection identifier. Default 1.</p> <p>Range 1..6. This parameter is mandatory.</p> <p><instance>: AT instance that will be used by the service to run the AT Command. Default 2. Range 1 - 3. This parameter is mandatory.</p> <p><tcpPort> Tcp Listen port for the connection to the service in server mode. Default 1024. Range 1...65535. This parameter is mandatory.</p> <p><tcpHostPort> Tcp remote port of the Host to connect to, in client mode. Default 1024. Range 1...65535. This parameter is mandatory.</p> <p><tcpHost> IP address of the Host, string type. This parameter can be either: <ul style="list-style-type: none"> - any valid IP address in the format: “xxx.xxx.xxx.xxx” - any host name to be solved with a DNS query This parameter is mandatory. Default “”.</p> <p><urcmod>: 0 – disable unsolicited messages 1 - enable an unsolicited message when the TCP socket is connected or disconnect (default).</p> <p>When unsolicited is enabled, an asynchronous TCP Socket connection is indicated to TE with unsolicited result code:</p> <p>#TCPATRUN: <iphostaddress></p> <p>When unsolicited is enabled, the TCP socket disconnection is indicated to TE with unsolicited result code:</p> <p>#TCPATRUN: <DISCONNECT></p> <p>Unsolicited is dumped on the instance that requested the service activation.</p> <p><timeout>:</p>



#TCPATRUNCFG– Set TCP AT Run Service Parameters	SELINT 2
	<p>Define in minutes the maximum time for a command execution. If timeout expires the module will be rebooted. The default value is 5 minutes. Range 1...5.</p> <p><authMode>: determines the authentication procedure in server mode: 0 – (default) when connection is up, username and password (in this order and each of them followed by a Carriage Return) have to be sent to the module before the first AT command. 1 – when connection is up, the user receives a request for username and, if username is correct, a request for password. Then a message of "Login successfull" will close authentication phase.</p> <p>Note: if username and/or password are not allowed (see AT#TCPATRUNAETH) the connection will close immediately.</p> <p><retryCnt>: in client mode, at boot or after a socket disconnection, this parameter represents the number of attempts that are made in order to re-connect to the Host. Default: 0. Range 0...5.</p> <p><retryDelay>: in client mode, delay between one attempt and the other. In minutes. Default: 2. Range 1...3600.</p> <p>Note2: the current settings are stored in NVM.</p> <p>Note3: to start automatically the service when the module is powered-on, the automatic PDP context activation has to be set (see AT#SGACTCFG command).</p> <p>Note 4: the set command returns ERROR if the command AT#TCPATRUNDL? returns 1 as <mod> parameter or the command AT#TCPATRUND? returns 1 as <mod> parameter</p>
AT#TCPATRUNCFG?	<p>Read command returns the current settings of parameters in the format:</p> <p>#TCPATRUNCFG: <connId>,<instance>,<tcpPort>,<tcpHostPort>,<tcpHost>,<urcmmod>,<timeout>,<authMode>,<retryCnt>,<retryDelay></p>
AT#TCPATRUNCFG=?	<p>Test command returns the supported values for the TCPATRUNCFG parameters</p>



5.1.6.2.5. TCP Run AT Service in listen (server) mode - #TCPATRNL

#TCPATRNL– Enables TCP AT Run Service in listen (server) mode		SELINT 2
AT#TCPATRNL= <mod>	<p>Set command enables/disables the TCP AT RUN service in server mode. When this service is enabled, the module tries to put itself in TCP listen state.</p> <p>Parameter: < mod ></p> <p>0: Service Disabled 1: Service Enabled</p> <p>Note1: If SMSATRNL is active on the same instance (see AT#TCPATRNLCFG) the command will return ERROR.</p> <p>Note2: when the service is active it is on a specific AT instance (see AT#TCPATRNLCFG), that instance cannot be used for any other scope. For example, if the multiplexer requests to establish the Instance, the request will be rejected.</p> <p>Note3: the current settings are stored in NVM.</p> <p>Note4: to start automatically the service when the module is powered-on, the automatic PDP context activation has to be set (see AT#SGACTCFG command).</p>	
AT#TCPATRNL?	<p>Read command returns the current settings of <mode> and the value of <stat> in the format:</p> <p>#TCPATRNL: <mod>,<stat></p> <p>where: <stat> - connection status 0 – not in listen 1 - in listen or active</p>	
AT#TCPATRNL=?	Test command returns the supported values for the TCPATRNL parameters	



5.1.6.2.6. TCP AT Run Firewall List - #TCPATRUNKRVL

#TCPATRUNKRVL – TCP AT Run Firewall List	SELINT 2
AT#TCPATRUNKRVL= <action> , <ip_addr> , <net_mask>	<p>Set command controls the internal firewall settings for the TCPATRUN connection.</p> <p>Parameters:</p> <p><action> - command action</p> <p>0 - remove selected chain</p> <p>1 - add an ACCEPT chain</p> <p>2 - remove all chains (DROP everything); <ip_addr> and <net_mask> has no meaning in this case.</p> <p><ip_addr> - remote address to be added into the ACCEPT chain; string type, it can be any valid IP address in the format: xxx.xxx.xxx.xxx</p> <p><net_mask> - mask to be applied on the <ip_addr>; string type, it can be any valid IP address mask in the format: xxx.xxx.xxx.xxx</p> <p>Command returns OK result code if successful.</p> <p>Firewall general policy is DROP, therefore all packets that are not included into an ACCEPT chain rule will be silently discarded.</p> <p>When a packet comes from the IP address incoming_IP, the firewall chain rules will be scanned for matching with the following criteria:</p> <p>incoming_IP & <net_mask> = <ip_addr> & <net_mask></p> <p>If criteria is matched, then the packet is accepted and the rule scan is finished; if criteria is not matched for any chain the packet is silently dropped.</p> <p>Note1: A maximum of 5 firewall can be present at same time in the List.</p> <p>Note2: the firewall list is saved in NVM</p>
AT# TCPATRUNKRVL?	<p>Read command reports the list of all ACCEPT chain rules registered in the Firewall settings in the format:</p> <p>#TCPATRUNKRVL: <ip_addr>,<net_mask> #TCPATRUNKRVL: <ip_addr>,<net_mask> ... OK</p>
AT#TCPATRUNKRVL=?	<p>Test command returns the allowed values for parameter <action>.</p>



5.1.6.2.7. TCP AT Run Authentication Parameters List - #TCPATRUNAATH

#TCPATRUNAATH – TCP AT Run Authentication Parameters List		SELINT 2
AT#TCPATRUNAATH= <action>, <userid>, <passw>	<p>Execution command controls the authentication parameters for the TCPATRUN connection.</p> <p>Parameters:</p> <p><action> - command action 0 - remove selected chain 1 - add an ACCEPT chain 2 - remove all chains (DROP everything); <userid> and <passw> has no meaning in this case.</p> <p><userid> - user to be added into the ACCEPT chain; string type, maximum length 50 <passw> - password of the user on the <userid>; string type, maximum length 50</p> <p>Command returns OK result code if successful.</p> <p>Note1: A maximum of 3 entry (password and userid) can be present at same time in the List.</p> <p>Note2: the Authentication Parameters List is saved in NVM.</p>	
AT#TCPATRUNAATH?	<p>Read command reports the list of all ACCEPT chain rules registered in the Authentication settings in the format:</p> <p>#TCPATRUNAATH: <user_id>,<passw> #TCPATRUNAATH: <user_id>,<passw> OK</p>	
AT#TCPATRUNAATH=?	Test command returns the allowed values for parameter <action>.	



5.1.6.2.8. TCP AT Run in dial (client) mode - #TCPATRUND

#TCPATRUND – Enables TCP Run AT Service in dial (client) mode		SELINT 2
AT#TCPATRUND=<mod>	<p>Set command enables/disables the TCP AT RUN service in client mode. When this service is enabled, the module tries to open a connection to the Host (the Host is specified in AT#TCPATRUNCFG).</p> <p>Parameter: < mod ></p> <ul style="list-style-type: none"> 0: Service Disabled 1: Service Enabled <p>Note1: If SMSATRUND is active on the same instance (see AT#TCPATRUNCFG) the command will return ERROR.</p> <p>Note2: when the service is active it is on a specific AT instance (see AT#TCPATRUNCFG), that instance cannot be used for any other scope. For example if the multiplexer request to establish the Instance, the request will be rejected.</p> <p>Note3: the current setting are stored in NVM</p> <p>Note4: to start automatically the service when the module is powered-on, the automatic PDP context activation has to be set (see AT#SGACTCFG command).</p> <p>Note5: if the connection closes or at boot, if service is enabled and context is active, the module will try to reconnect for the number of attempts specified in AT#TCPATRUNCFG; also the delay between one attempt and the other will be the one specified in AT#TCPATRUNCFG.</p>	
AT#TCPATRUND?	<p>Read command returns the current settings of <mode> and the value of <stat> in the format:</p> <p>#TCPATRUND: <mod>,<stat></p> <p>where:</p> <ul style="list-style-type: none"> <stat> - connection status 0 - not connected 1 – connected or connecting at socket level 2 - not connected but still trying to connect, attempting every delay time (specified in AT#TCPATRUNCFG) 	
AT#TCPATRUND =?	<p>Test command returns the supported values for the TCPATRUND parameters</p>	



5.1.6.2.9. Closing TCP Run AT Socket - #TCPATRUNCLOSE

#TCPATRUNCLOSE – Closes TCP Run AT Socket		SELINT 2
AT#TCPATRUNCLOSE	Closes the socket used by TCP ATRUN service. Note: TCP ATRUN status is still enabled after this command, so the service re-starts automatically.	
AT#TCPATRUNCLOSE =?	Test command returns OK	

5.1.6.2.10. TCP AT Run Command Sequence - #TCPATCMDSEQ

#TCPATCMDSEQ – For TCP Run AT Service, allows the user to give AT commands in sequence		SELINT 2
AT#TCPATCMDSEQ= <mod>	Set command enable/disable, for TCP Run AT service, a feature that allows giving more than one AT command without waiting for responses. It does not work with commands that uses the prompt '>' to receive the message body text (e.g. "at+cmgs") Parameter: < mod > 0: Service Disabled (default) 1: Service Enabled	
AT# TCPATCMDSEQ?	Read command returns the current settings of parameters in the format: #TCPATCMDSEQ: <mod>	
AT# TCPATCMDSEQ =?	Test command returns the supported values for the TCPATCMDSEQ parameters	

5.1.6.2.11. TCP Run AT service to a serial port - #TCPATCONSER

#TCPATCONSER – Connects the TCP Run AT service to a serial port		SELINT 2
AT#TCPATCONSER= <port>,<rate>	Set command sets the TCP Run AT in transparent mode, in order to have direct access to the hardware port specified. Data will be transferred directly, without being elaborated, between the TCP Run AT service and the hardware port specified. If the CMUX protocol is running the command will return ERROR. Parameter: < port > 0 – USIF0 1 – USIF1 2 – USB0 3 – USB1 4 – USB2	



#TCPATCONSER – Connects the TCP Run AT service to a serial port		SELINT 2
	<p>5 – USB3 6 – SPI</p> <p>Not all of these ports will be available at the same time. The ports available will be displayed by the test command. They depend on the AT#PORTCFG command. Please refer to that AT command and to the “HE Family Ports Arrangements User Guide” for a detailed explanation of all port configurations</p> <p>< rate > baud rate for data transfer. Allowed values are 300,1200,2400,4800,9600,19200,38400,57600,115200.</p> <p>Note1: the command has to be issued from the TCP ATRUN instance Note2: After this command has been issued, if no error has occurred, then a “CONNECT” will be returned by the module to advise that the TCP ATRUN instance is in <i>online mode</i> and connected to the port specified. Note3: To exit from online mode and close the connection, the escape sequence (+++) has to be sent on the TCP ATRUN instance Note4: for USB ports and SPI the rate parameter is dummy</p>	
AT#TCPATCONSER =?	Test command returns the supported values for the TCPATCONSER parameters	



5.1.6.2.12. Run AT command execution - #ATRUNDELAY

#ATRUNDELAY – Set the delay on Run AT command execution		SELINT 2
AT#ATRUNDELAY= <srv>,<delay>	<p>Set command enables the use of a delay before the execution of AT command received by Run AT service (TCP and SMS). It affects just AT commands given through Run AT service.</p> <p><srv></p> <p>0 – TCP Run AT service 1 - SMS Run AT service</p> <p><delay> Value of the delay, in seconds. Range 0..30. Default value 0 for both services (TCP and SMS).</p> <p>Note1 - The use of the delay is recommended to execute some AT commands that require network interaction or switch between GSM and GPRS services. For more details see the RUN AT User Guide.</p> <p>Note2: The delay is valid till a new AT#ATRUNDELAY is set.</p>	
AT#ATRUNDELAY?	<p>Read command returns the current settings of parameters in the format:</p> <p>#ATRUNDELAY: 0, <delayTCP> #ATRUNDELAY: 1, <delaySMS> OK</p>	
AT#ATRUNDELAY=?	<p>Test command returns the supported values for the ATRUNDELAY parameters</p>	



5.1.6.3. Event Monitor Commands

5.1.6.3.1. Enable EvMoni Service - #ENAEVMONI

#ENAEVMONI – Enable EvMoni Service		SELINT 2
AT#ENAEVMONI= <mod>	<p>Set command enables/disables the EvMoni service.</p> <p>Parameter: < mod ></p> <p>0: Service Disabled (default) 1: Service Enabled</p> <p>Note1: When the service is active on a specific AT instance, that instance cannot be used for any other scope, except for OTA service that has the highest priority. For example in the multiplexer request to establish the Instance, the request will be rejected.</p> <p>Note2: the current settings are stored in NVM.</p>	
AT#ENAEVMONI?	<p>Read command returns the current settings of <mode> and the value of <stat> in the format:</p> <p># ENAEVMONI: <mod>,<stat></p> <p>where: <stat> - service status 0 – not active (default) 1 - active</p>	
AT#ENAEVMONI =?	Test command returns the supported values for the ENAEVMONI parameters	



5.1.6.3.2. EvMoni Service parameter - #ENAEVMONICFG

#ENAEVMONICFG – Set EvMoni Service Parameters		SELINT 2
AT#ENAEVMONICFG= <instance> [,<urcmod> [,<timeout>]]	<p>Set command configures the EvMoni service.</p> <p>Parameter:</p> <p><instance>: AT instance that will be used by the service to run the AT Command. Range 1 - 3. (Default: 3)</p> <p><urcmod>: 0 – disable unsolicited message 1 - enable an unsolicited message when an AT command is executed after an event is occurred (default)</p> <p>When unsolicited is enabled, the AT Command is indicated to TE with unsolicited result code:</p> <p>#EVMONI: <Text></p> <p>e.g.: #EVMONI: AT+CGMR;+CGSN;+GSN;+CCLK</p> <p>Unsolicited is dumped on the instance that requested the service activation.</p> <p><timeout>: It defines in minutes the maximum time for a command execution. If timeout expires the module will be rebooted. (Default: 5)</p> <p>Note 1: the current settings are stored in NVM.</p> <p>Note 2: the instance used for the EvMoni service is the same used for the SMS AT RUN service. Therefore, when the #ENAEVMONICFG sets the <instance> parameter, the change is reflected also in the <instance> parameter of the #SMSATRUNCFG command, and viceversa.</p> <p>Note 3: the set command returns ERROR if the command AT#ENAEVMONI? returns 1 as <mod> parameter or the command AT#SMSATRUNCFG returns 1 as <mod> parameter</p>	
AT#ENAEVMONICFG?	<p>Read command returns the current settings of parameters in the format:</p> <p>#ENAEVMONICFG:<instance>,<urcmod>,<timeout></p>	
AT# ENAEVMONICFG =?	<p>Test command returns the supported values for the ENAEVMONICFG parameters</p>	



5.1.6.3.3. Event Monitoring - #EVMONI

#EVMONI – Set the single Event Monitoring	SELINT 2
<p>AT#EVMONI= <label>, <mode>, [,<paramType > ,<param>]</p>	<p>Set command enables/disables the single event monitoring, configures the related parameter and associates the AT command</p> <p><label>: string parameter (that has to be enclosed between double quotes) indicating the event under monitoring. It can assume the following values:</p> <ul style="list-style-type: none"> • VBATT - battery voltage monitoring • DTR - DTR monitoring • ROAM - roaming monitoring • CONTDEACT - context deactivation monitoring • RING - call ringing monitoring • STARTUP – module start-up monitoring • REGISTERED – network registration monitoring • GPIO1 – monitoring on a selected GPIO in the GPIO range • GPIO2 – monitoring on a selected GPIO in the GPIO range • GPIO3 – monitoring on a selected GPIO in the GPIO range • GPIO4 – monitoring on a selected GPIO in the GPIO range • GPIO5 – monitoring on a selected GPIO in the GPIO range • ADCH1 – ADC High Voltage monitoring • ADCL1 – ADC Low Voltage monitoring • DTMF1 –monitoring on user defined DTMF string • DTMF2 –monitoring on user defined DTMF string • DTMF3 –monitoring on user defined DTMF string • DTMF4 –monitoring on user defined DTMF string • SMSIN – monitoring on incoming SMS <p><mode>:</p> <p>0 – disable the single event monitoring (default) 1 – enable the single event monitoring</p> <p>< paramType >: numeric parameter indicating the type of parameter contained in <param>. The 0 value indicates that <param> contains the AT command string to execute when the related event has occurred. Other values depend from the type of event.</p> <p><param>: it can be a numeric or string value depending on the value of <paramType> and on the type of event.</p> <p>If <paramType> is 0, then <param> is a string containing the AT command:</p> <ul style="list-style-type: none"> • It has to be enclosed between double quotes • It has to start with the 2 chars AT (or at) • If the string contains the character ”, then it has to be replaced with the 3 characters \22



#EVMONI – Set the single Event Monitoring	SELINT 2
	<ul style="list-style-type: none"> the max string length is 96 characters if it is an empty string, then the AT command is erased If <label> is VBATT, <paramType> can assume values in the range 0 - 2. <ul style="list-style-type: none"> if <paramType> = 1, <param> indicates the battery voltage threshold in the range 0 – 500, where one unit corresponds to 10 mV (therefore 500 corresponds to 5 V). (Default: 0) if <paramType> = 2, <param> indicates the time interval in seconds after that the voltage battery under the value specified with <paramType> = 1 causes the event. The range is 0 – 255. (Default: 0) If <label> is DTR, <paramType> can assume values in the range 0 - 2. <ul style="list-style-type: none"> if <paramType> = 1, <param> indicates the status high or low under monitoring. The values are 0 (low) and 1 (high). (Default: 0) if <paramType> = 2, <param> indicates the time interval in seconds after that the DTR in the status specified with <paramType> = 1 causes the event. The range is 0 – 255. (Default: 0) If <label> is ROAM, <paramType> can assume only the value 0. The event under monitoring is the roaming state. If <label> is CONTDEACT, <paramType> can assume only the value 0. The event under monitoring is the context deactivation. If <label> is RING, <paramType> can assume values in the range 0 - 1. <ul style="list-style-type: none"> if <paramType> = 1, <param> indicates the numbers of call rings after that the event occurs. The range is 1-50. (Default: 1) If <label> is STARTUP, <paramType> can assume only the value 0. The event under monitoring is the module start-up. If <label> is REGISTERED, <paramType> can assume only the value 0. The event under monitoring is the network registration (to home network or in roaming) after the start-up and the SMS ordering. If <label> is GPIOX, <paramType> can assume values in the range 0 - 3. <ul style="list-style-type: none"> if <paramType> = 1, <param> indicates the GPIO pin number; supported range is from 1 to a value that depends on the hardware. (Default: 1) if <paramType> = 2, <param> indicates the status high or low under monitoring. The values are 0 (low) and 1 (high) . (Default: 0) if <paramType> = 3, <param> indicates the time interval in seconds after that the selected GPIO pin in the status specified with <paramType> = 1 causes the event. The range is 0 – 255. (Default: 0) If <label> is ADCH1, <paramType> can assume values in the range 0 - 3. <ul style="list-style-type: none"> if <paramType> = 1, <param> indicates the ADC pin number; supported range is from 1 to a value that depends on the hardware. (Default: 1) if <paramType> = 2, <param> indicates the ADC High voltage



#EVMONI – Set the single Event Monitoring	SELINT 2
	<p>threshold in the range 0 – 2000 mV. (Default: 0)</p> <ul style="list-style-type: none"> ○ if <paramType> = 3, <param> indicates the time interval in seconds after that the selected ADC pin above the value specified with <paramType> = 1 causes the event. The range is 0 – 255. (Default: 0) ● If <label> is ADCL1, <paramType> can assume values in the range 0 - 3. <ul style="list-style-type: none"> ○ if <paramType> = 1, <param> indicates the ADC pin number; supported range is from 1 to a value that depends on the hardware. (Default: 1) ○ if <paramType> = 2, <param> indicates the ADC Low voltage threshold in the range 0 – 2000 mV. (Default: 0) ○ if <paramType> = 3, <param> indicates the time interval in seconds after that the selected ADC pin under the value specified with <paramType> = 1 causes the event. The range is 0 – 255. (Default: 0) ● If <label> is DTMFX, <paramType> can assume values in the range 0 - 2. <ul style="list-style-type: none"> ○ if <paramType> = 1, <param> indicates the DTMF string; the single DTMF characters have to belong to the range ((0-9),#,*,(A-D)); the maximum number of characters in the string is 15 ○ if <paramType> = 2, <param> indicates the timeout in milliseconds. It is the maximum time interval within which a DTMF tone must be detected after detecting the previous one, to be considered as belonging to the DTMF string. The range is (500 – 5000). (Default: 1000) ● If <label> is SMSIN, <paramType> can assume values in the range 0-1. <ul style="list-style-type: none"> ○ if <paramType> = 1, <param> indicates the text that must be received in incoming SMS to trigger AT command execution rings after that the event occurs; the maximum number of characters in the SMS text string is 15 <p>Note: the DTMF string monitoring is available only if the DTMF decode has been enabled (see #DTMF command)</p>
AT# EVMONI?	<p>Read command returns the current settings for each event in the format:</p> <p>#EVMONI: <label>,<mode>,<param0>[,<param1>[,<param2>[,<param3>]]]</p> <p>Where <param0>, <param1>, <param2> and <param3> are defined as before for <param> depending on <label> value</p>
AT#EVMONI=?	<p>Test command returns values supported as a compound value</p>



5.1.6.3.4. Send Message - #CMGS

#CMGS - Send Message	SELINT 2
<p><i>(PDU Mode)</i> AT#CMGS= <length>,<pdu></p>	<p>(PDU Mode) Execution command sends to the network a message.</p> <p>Parameter: <length> - length of the PDU to be sent in bytes (excluding the SMSC address octets). 7..164</p> <p><pdu> - PDU in hexadecimal format (each octet of the PDU is given as two IRA character long hexadecimal number) and given in one line.</p> <p>Note: when the length octet of the SMSC address (given in the <pdu>) equals zero, the SMSC address set with command +CSCA is used; in this case the SMSC Type-of-Address octet shall not be present in the <pdu>.</p> <p>If message is successfully sent to the network, then the result is sent in the format:</p> <p>#CMGS: <mr></p> <p>where <mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format.</p> <p>Note: if message sending fails for some reason, an error code is reported.</p>
<p><i>(Text Mode)</i> AT#CMGS=<da> ,<text></p>	<p>(Text Mode) Execution command sends to the network a message.</p> <p>Parameters: <da> - destination address, string type represented in the currently selected character set (see +CSCS). <text> - text to send</p> <p>The entered text should be enclosed between double quotes and formatted as follows:</p> <ul style="list-style-type: none"> - if current <dcs> (see +CSMP) indicates that GSM03.38 default alphabet is used and current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is not set, then ME/TA converts the entered text into GSM alphabet, according to GSM 27.005, Annex A. - if current <dcs> (see +CSMP) indicates that 8-bit or UCS2 data coding scheme is used or current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is set, the entered text should consist of two



#CMGS - Send Message	SELINT 2
	<p>IRA character long hexadecimal numbers which ME/TA converts into 8-bit octet (e.g. the ‘asterisk’ will be entered as 2A (IRA50 and IRA65) and this will be converted to an octet with integer value 0x2A)</p> <p>If message is successfully sent to the network, then the result is sent in the format:</p> <p>#CMGS: <mr></p> <p>where <mr> - message reference number; 3GPP TS 23.040 TP-Message-Reference in integer format.</p> <p>Note: if message sending fails for some reason, an error code is reported.</p>
AT#CMGS=?	Test command returns the OK result code.
Note	To avoid malfunctions is suggested to wait for the #CMGS: <mr> or #CMS ERROR: <err> response before issuing further commands.
Reference	GSM 27.005



5.1.6.3.5. Write Message To Memory - #CMGW

#CMGW - Write Message To Memory		SELINT 2
<p>(PDU Mode) AT#CMGW= <length>,<pdu></p>	<p>(PDU Mode) Execution command writes in the <memw> memory storage a new message.</p> <p>Parameter: <length> - length in bytes of the PDU to be written. 7..164 <pdu> - PDU in hexadecimal format (each octet of the PDU is given as two IRA character long hexadecimal number) and given in one line.</p> <p>If message is successfully written in the memory, then the result is sent in the format:</p> <p>#CMGW: <index></p> <p>where: <index> - message location index in the memory <memw>.</p> <p>If message storing fails for some reason, an error code is reported.</p>	
<p>(Text Mode) AT#CMGW=<da> ,<text></p>	<p>(Text Mode) Execution command writes in the <memw> memory storage a new message.</p> <p>Parameters: <da> - destination address, string type represented in the currently selected character set (see +CSCS). <text> - text to write</p> <p>The entered text should be enclosed between double quotes and formatted as follows:</p> <ul style="list-style-type: none"> - if current <dc> (see +CSMP) indicates that GSM03.38 default alphabet is used and current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is not set, then ME/TA converts the entered text into GSM alphabet, according to GSM 27.005, Annex A. - if current <dc> (see +CSMP) indicates that 8-bit or UCS2 data coding scheme is used or current <fo> (see +CSMP) indicates that 3GPP TS 23.040 TP-User-Data-Header-Indication is set, the entered text should consist of two IRA character long hexadecimal numbers which ME/TA converts into 8-bit octet (e.g. the 'asterisk' will be entered as 2A (IRA50 and IRA65) and this will be converted to an octet with integer value 0x2A) <p>If message is successfully written in the memory, then the result is sent in the format:</p>	



#CMGW - Write Message To Memory		SELINT 2
	<p>#CMGW: <index> where: <index> - message location index in the memory <memw>.</p> <p>If message storing fails for some reason, an error code is reported.</p>	
AT#CMGW=?	Test command returns the OK result code.	
Reference	GSM 27.005	
Note	To avoid malfunctions is suggested to wait for the #CMGW: <index> or +CMS ERROR: <err> response before issuing further commands.	

5.1.6.3.6. AT Command Delay - #ATDELAY

#ATDELAY – AT Command Delay		SELINT 2
AT#ATDELAY= <delay>	<p>Set command sets a delay in second for the execution of following AT command.</p> <p>Parameters: <delay> - delay in 100 milliseconds intervals; 0 means no delay</p> <p>Note: <delay> is only applied to first command executed after #ATDELAY</p>	
AT#ATDELAY?	Read command reports the currently selected parameter in the format: #ATDELAY: <delay>	
AT#ATDELAY=?	Test command returns the supported range of values for parameter <delay>	
Example	<p>Delay “at#gpio=1,1,1” execution of 5 seconds:</p> <p>at#gpio=1,0,1;#atdelay=50;#gpio=1,1,1 OK</p>	



5.1.6.4. Multisocket AT Commands

5.1.6.4.1. Socket Status - #SS

#SS - Socket Status	SELINT 2
AT#SS[=<connId>]	<p>Execution command reports the current status of the socket:</p> <p>Parameters: <connId> - socket connection identifier 1..6</p> <p>The response format is:</p> <p>#SS: <connId>,<state>,<locIP>,<locPort>,<remIP>,<remPort></p> <p>where: <connId> - socket connection identifier, as before <state> - actual state of the socket: 0 - Socket Closed. 1 - Socket with an active data transfer connection. 2 - Socket suspended. 3 - Socket suspended with pending data. 4 - Socket listening. 5 - Socket with an incoming connection. Waiting for the user accept or shutdown command. <locIP> - IP address associated by the context activation to the socket. <locPort> - two meanings: - the listening port if we put the socket in listen mode. - the local port for the connection if we use the socket to connect to a remote machine. <remIP> - when we are connected to a remote machine this is the remote IP address. <remPort> - it is the port we are connected to on the remote machine.</p> <p>Note: issuing #SS<CR> causes getting information about status of all the sockets; the response format is:</p> <p>#SS: <connId1>,<state1>,<locIP1>,<locPort1>,<remIP1>,<remPort1> <CR><LF> ... #SS: <connId6>,<state6>,<locIP6>,<locPort6>,<remIP6>,<remPort6></p>
AT#SS=?	Test command reports the range for parameter <connId>.



#SS - Socket Status	SELINT 2
Example	<p>AT#SS</p> <p>#SS: 1,3,91.80.90.162,61119,88.37.127.146,10510</p> <p>#SS: 2,4,91.80.90.162,1000</p> <p>#SS: 3,0</p> <p>#SS: 4,0</p> <p>#SS: 5,3,91.80.73.70,61120,88.37.127.146,10509</p> <p>#SS: 6,0</p> <p>OK</p> <p>Socket 1: opened from local IP 91.80.90.162/local port 61119 to remote IP 88.37.127.146/remote port 10510 is suspended with pending data</p> <p>Socket 2: listening on local IP 91.80.90.162/local port 1000</p> <p>Socket 5: opened from local IP 91.80.73.70/local port 61120 to remote IP 88.37.127.146/remote port 10509 is suspended with pending data</p> <p>AT#SS=2</p> <p>#SS: 2,4,91.80.90.162,1000</p> <p>OK</p> <p>We have information only about socket number 2</p>



5.1.6.4.2. Socket Info - #SI

#SI - Socket Info	SELINT 2
AT#SI[=<connId>]	<p>Execution command is used to get information about socket data traffic.</p> <p>Parameters: <connId> - socket connection identifier 1..6</p> <p>The response format is:</p> <p>#SI: <connId>,<sent>,<received>,<buff_in>,<ack_waiting></p> <p>where: <connId> - socket connection identifier, as before <sent> - total amount (in bytes) of sent data since the last time the socket connection identified by <connId> has been opened <received> - total amount (in bytes) of received data since the last time the socket connection identified by <connId> has been opened <buff_in> - total amount (in bytes) of data just arrived through the socket connection identified by <connId> and currently buffered, not yet read <ack_waiting> - total amount (in bytes) of sent and not yet acknowledged data since the last time the socket connection identified by <connId> has been opened</p> <p>Note: not yet acknowledged data are available only for TCP connections; the value <ack_waiting> is always 0 for UDP connections.</p> <p>Note: issuing #SI<CR> causes getting information about data traffic of all the sockets; the response format is:</p> <p>#SI: <connId1>,<sent1>,<received1>,<buff_in1>,<ack_waiting1> <CR><LF> ... #SI: <connId6>,<sent6>,<received6>,<buff_in6>,<ack_waiting6></p>
AT#SI=?	Test command reports the range for parameter <connId>.
Example	<p>AT#SI</p> <p>#SI: 1,123,400,10,50 #SI: 2,0,100,0,0 #SI: 3,589,100,10,100 #SI: 4,0,0,0,0 #SI: 5,0,0,0,0 #SI: 6,0,98,60,0</p> <p>OK</p>



#SI - Socket Info	SELINT 2
	<p><i>Sockets 1,2,3,6 are opened with some data traffic. For example socket 1 has 123 bytes sent, 400 bytes received, 10 byte waiting to be read and 50 bytes waiting to be acknowledged from the remote side.</i></p> <p>AT#SI=1</p> <p>#SI: 1,123,400,10,50</p> <p>OK</p> <p><i>We have information only about socket number 1</i></p>

5.1.6.4.3. Socket Type - #ST

#ST – Socket Type	SELINT 2
<p>AT#ST [=<ConnId>]</p>	<p>Set command reports the current type of the socket (TCP/UDP) and its direction (Dialer / Listener)</p> <p>Parameter: < ConnId > - socket connection identifier 1..6</p> <p>The response format is:</p> <p>#ST: <connId>,<type>,<direction></p> <p>where</p> <p>< connId > - socket connection identifier 1..6</p> <p>< type > - socket type 0 – No socket 1 – TCP socket 2 – UDP socket</p> <p>< direction > - direction of the socket 0 – No 1 – Dialer 2 – Listener</p> <p>Note: issuing #ST<CR> causes getting information about type of all the sockets; the response format is:</p> <p>#ST: <connId1>,<type1>,<direction1> <CR><LF></p> <p>...</p> <p>#ST: <connId6>,< type 6>,< direction 6></p>



#ST – Socket Type	SELINT 2
AT#ST=?	Test command reports the range for parameter <connId>.
Example	<p>single socket:</p> <p>AT#ST=3 #ST: 3,2,1</p> <p>Socket 3 is an UDP dialer.</p> <p>All sockets:</p> <p>AT#ST #ST: 1,0,0 #ST: 2,0,0 #ST: 3,2,1 #ST: 4,2,2 #ST: 5,1,1 #ST: 6,1,2</p> <p>Socket 1 is closed. Socket 2 is closed. Socket 3 is an UDP dialer Socket 4 is an UDP listener Socket 5 is a TCP dialer Socket 6 is a TCP listener</p>

5.1.6.4.4. Context Activation - #SGACT

#SGACT - Context Activation	SELINT 2
AT#SGACT=<cid>,<stat>[,<userId>,<pwd>]	<p>Execution command is used to activate or deactivate either the GSM context or the specified PDP context.</p> <p>Parameters:</p> <p><cid> - PDP context identifier 0 - specifies the GSM context (not yet available) 1..5 - numeric parameter which specifies a particular PDP context definition</p> <p><stat> 0 - deactivate the context 1 - activate the context</p> <p><userId> - string type, used only if the context requires it <pwd> - string type, used only if the context requires it</p> <p>Note: context activation/deactivation returns ERROR if there is not any socket associated to it (see AT#SCFG).</p>



#SGACT - Context Activation		SELINT 2
AT#SGACT?	<p>Returns the state of all the contexts that have been defined</p> <p>#SGACT: <cid1>,<Stat1><CR><LF> ... #SGACT: <cid5>,<Stat5></p> <p>where: <cidn> - as <cid> before <statn> - context status 0 - context deactivated 1 - context activated</p>	
AT#SGACT=?	Test command reports the range for the parameters <cid> and <stat>	
Note	It is strongly recommended to use the same command (e.g. #SGACT) to activate the context, deactivate it and interrogate about its status.	

5.1.6.4.5. Socket Shutdown - #SH

#SH - Socket Shutdown		SELINT 2
AT#SH=<connId>	<p>This command is used to close a socket.</p> <p>Parameter: <connId> - socket connection identifier 1..6</p> <p>Note: socket cannot be closed in states “resolving DNS” and “connecting” (see AT#SS command)</p>	
AT#SH=?	Test command reports the range for parameter <connId>.	

5.1.6.4.6. Socket Configuration - #SCFG

#SCFG - Socket Configuration		SELINT 2
AT#SCFG= <connId>,<cid>, <pktSz>,<maxTo>, <connTo>,<txTo>	<p>Set command sets the socket configuration parameters.</p> <p>Parameters: <connId> - socket connection identifier 1..6 <cid> - PDP context identifier 0 - specifies the GSM context 1..5 - numeric parameter which specifies a particular PDP context definition <pktSz> - packet size to be used by the TCP/UDP/IP stack for data sending. 0 - select automatically default value(300). 1..1500 - packet size in bytes. <maxTo> - exchange timeout (or socket inactivity timeout); if there's no data</p>	



#SCFG - Socket Configuration	SELINT 2
	<p>exchange within this timeout period the connection is closed.</p> <p>0 - no timeout</p> <p>1..65535 - timeout value in seconds (default 90 s.)</p> <p><connTo> - connection timeout; if we can't establish a connection to the remote within this timeout period, an error is raised.</p> <p>10..1200 - timeout value in hundreds of milliseconds (default 600)</p> <p><txTo> - data sending timeout; after this period data are sent also if they're less than max packet size.</p> <p>0 - no timeout</p> <p>1..255 - timeout value in hundreds of milliseconds (default 50)</p> <p>256 – set timeout value in 10 milliseconds</p> <p>257 – set timeout value in 20 milliseconds</p> <p>258 – set timeout value in 30 milliseconds</p> <p>259 – set timeout value in 40 milliseconds</p> <p>260 – set timeout value in 50 milliseconds</p> <p>261 – set timeout value in 60 milliseconds</p> <p>262 – set timeout value in 70 milliseconds</p> <p>263 – set timeout value in 80 milliseconds</p> <p>264 – set timeout value in 90 milliseconds</p> <p>Note: these values are automatically saved in NVM.</p> <p>Note: if DNS resolution is required, max DNS resolution time(20 sec) has to be considered in addition to <connTo></p>
AT#SCFG?	<p>Read command returns the current socket configuration parameters values for all the six sockets, in the format:</p> <p>#SCFG: <connId1>,<cid1>,<pktsz1>,<maxTo1>,<connTo1>,<txTo1> <CR><LF></p> <p>...</p> <p>#SCFG: <connId6>,<cid6>,<pktsz6>,<maxTo6>,<connTo6>,<txTo6> <CR><LF></p>
AT#SCFG=?	Test command returns the range of supported values for all the subparameters.
Example	<p>at#scfg?</p> <p>#SCFG: 1,1,300,90,600,50</p> <p>#SCFG: 2,2,300,90,600,50</p> <p>#SCFG: 3,2,250,90,600,50</p> <p>#SCFG: 4,1,300,90,600,50</p> <p>#SCFG: 5,1,300,90,600,50</p> <p>#SCFG: 6,1,300,90,600,50</p> <p>OK</p>



5.1.6.4.7. Socket Configuration Extended - #SCFGEXT

#SCFGEXT - Socket Configuration Extended	SELINT 2
<p>AT#SCFGEXT= <conned>,<srMode>,<recvDataMode>,<keepalive>,<ListenAutoRsp>[,<sendDataMode>]]</p>	<p>Set command sets the socket configuration extended parameters.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><srMode> - SRing unsolicited mode 0 - Normal (default): SRING : <connId> where <connId> is the socket connection identifier 1 – Data amount: SRING : <connId>,<recData> where <recData> is the amount of data received on the socket connection number <connId> 2 - Data view: SRING : <connId>,<recData>,<data> same as before and <data> is data received displayed following <dataMode> value 3 – Data view with UDP datagram informations: SRING : <sourceIP>,<sourcePort><connId>,<recData>,<dataLeft>,<data> same as before with <sourceIP>,<sourcePort> and <dataLeft> that means the number of bytes left in the UDP datagram</p> <p><recvDataMode> - data view mode for received data in command mode(AT#SRECV or <srMode> = 2) 0- text mode (default) 1- hexadecimal mode</p> <p><keepalive> - Set the TCP Keepalive value in minutes 0 – Deactivated (default) 1 – 240 – Keepalive time in minutes</p> <p><ListenAutoRsp> - Set the listen auto-response mode, that affects the commands AT#SL and AT#SLUDP 0 - Deactivated (default) 1 – Activated</p> <p><sendDataMode> - data mode for sending data in command mode(AT#SEND) 0 - data represented as text (default) 1 - data represented as sequence of hexadecimal numbers (from 00 to FF) Each octet of the data is given as two IRA character long</p>



	<p>hexadecimal number</p> <p>Note: these values are automatically saved in NVM. Note: Keepalive is available only on TCP connections.</p> <p>Note: for the behaviour of AT#SL and AT#SLUDP in case of auto-response mode or in case of no auto-response mode, see the description of the two commands.</p>
AT#SCFGEXT?	<p>Read command returns the current socket extended configuration parameters values for all the six sockets, in the format:</p> <p>#SCFGEXT:<connId1>,<srMode1>,<dataMode1>,<keepalive1>,<ListenAutoRsp1>,0<CR><LF> ... #SCFGEXT:<connId6>,<srMode6>,<dataMode6>,<keepalive6>,<ListenAutoRsp6>,0<CR><LF></p>
AT#SCFGEXT=?	<p>Test command returns the range of supported values for all the subparameters.</p>
Example	<p>Socket 1 set with data view string, text data mode, a keepalive time of 30 minutes and listen auto-response set.</p> <p>Socket 3 set with data amount string, hex recv data mode, no keepalive and listen auto-response not set.</p> <p>Socket 4 set with hex recv and send data mode</p> <pre>at#scfgext? #SCFGEXT: 1,2,0,30,1,0 #SCFGEXT: 2,0,0,0,0,0 #SCFGEXT: 3,1,1,0,0,0 #SCFGEXT: 4,0,1,0,0,1 #SCFGEXT: 5,0,0,0,0,0 #SCFGEXT: 6,0,0,0,0,0 OK</pre>



5.1.6.4.8. Socket configuration Extended 2 - #SCFGEXT2

#SCFGEXT2 - Socket Configuration Extended	
AT#SCFGEXT2= <connId>,<bufferStart> [,<abortConnAttempt> [,<unused_B > [,<unused_C >[,<noCarrierMode>]]]]	<p>Set command sets the socket configuration extended parameters for features not included in #SCFGEXT command.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><bufferStart> - Set the sending timeout method based on new data received from the serial port. (<txTo> timeout value is set by #SCFG command) Restart of transmission timer will be done when new data are received from the serial port.</p> <p>0 - old behaviour for transmission timer (#SCFG command 6th parameter old behaviour, start only first time if new data are received from the serial port) 1 - new behaviour for transmission timer: restart when new data received from serial port</p> <p>Note: is necessary to avoid overlapping of the two methods. Enabling new method, the old method for transmission timer(#SCFG) is automatically disabled to avoid overlapping.</p> <p>Note: check if new data have been received from serial port is done with a granularity that is directly related to #SCFG <txTo> setting with a maximum period of 1 sec.</p> <p><abortConnAttempt> - Enable connection attempt(#SD/#SKTD) abort before CONNECT(online mode) or OK(command mode)</p> <p>0 – Not possible to interrupt connection attempt 1 – It is possible to interrupt the connection attempt (<connTo> set by #SCFG or DNS resolution running if required)</p> <p>and give back control to AT interface by reception of a character. As soon as the control has been given to the AT interface the ERROR message will be received on the interface itself.</p> <p>Note: values are automatically saved in NVM.</p> <p><noCarrierMode> - permits to choose NO CARRIER</p>



	<p>indication format when the socket is closed as follows</p> <p>0 – NO CARRIER (default) Indication is sent as usual, without additional information</p> <p>1 – NO CARRIER:<connId> Indication of current <connId> socket connection identifier is added</p> <p>2 – NO CARRIER:<connId>,<cause> Indication of current <connId> socket connection identifier and closure <cause> are added For possible <cause> values, see also #SLASTCLOSURE</p> <p>Note: like #SLASTCLOSURE, in case of subsequent consecutive closure causes are received, the original disconnection cause is indicated.</p> <p>Note: in the case of command mode connection and remote closure with subsequent inactivity timeout closure without retrieval of all available data(#SRECV or SRING mode 2), it is indicated cause 1 for both possible FIN and RST from remote.</p>
AT#SCFGEXT2?	<p>Read command returns the current socket extended configuration parameters values for all the six sockets, in the format:</p> <p>#SCFGEXT2:<connId1>,<bufferStart1>,0,0,0,0<CR><LF> ... #SCFGEXT2:<connId6>,<bufferStart6>,0,0,0,0<CR><LF></p>
AT#SCFGEXT2=?	<p>Test command returns the range of supported values for all the subparameters.</p>
Example	<p>AT#SCFGEXT2=1,1 OK</p> <p>AT#SCFGEXT2=2,1 OK</p> <p>AT#SCFGEXT2? #SCFGEXT2: 1,1,0,0,0,0 #SCFGEXT2: 2,1,0,0,0,0 #SCFGEXT2: 3,0,0,0,0,0 #SCFGEXT2: 4,0,0,0,0,0 #SCFGEXT2: 5,0,0,0,0,0</p>



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

	<p>#SCFGEXT2: 6,0,0,0,0,0</p> <p>OK</p> <p>AT#SCFG?</p> <p>#SCFG: 1,1,300,90,600,50</p> <p>#SCFG: 2,1,300,90,600,50</p> <p>#SCFG: 3,1,300,90,600,50</p> <p>#SCFG: 4,2,300,90,600,50</p> <p>#SCFG: 5,2,300,90,600,50</p> <p>#SCFG: 6,2,300,90,600,50</p> <p>OK</p> <p>AT#SCFG=1,1,300,90,600,30</p> <p>OK</p> <p>Current configuration: socket with connId 1 and 2 are configured with new transmission timer behaviour. <txTo> corresponding value has been changed(#SCFG) for connId 1, for connId 2 has been left to default value.</p>
--	---



5.1.6.4.9. Socket configuration Extended 3 - #SCFGEXT3

#SCFGEXT3 - Socket Configuration Extended 3		SELINT 2
AT#SCFGEXT3= <connId>,<immRsp> [,<unused_A>[,<unused_B>[,<unused_C>[, <unused_D>]]]]]	<p>Set command sets the socket configuration extended parameters for features not included in #SCFGEXT command nor in #SCFGEXT2 command</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><immRsp> - Enables AT#SD command mode immediate response</p> <p>0 – factory default, means that AT#SD in command mode (see AT#SD) returns after the socket is connected 1 – means that AT#SD in command mode returns immediately. Then the state of the connection can be read by the AT command AT#SS</p> <p>Note: parameter is saved in NVM</p>	
AT#SCFGEXT3?	<p>Read command returns the current socket extended configuration parameters values for all the six sockets, in the format:</p> <p>#SCFGEXT3:<connId1>,<immRsp1>,0,0,0,0<CR><LF> ... #SCFGEXT3:<connId6>,<immRsp6>,0,0,0,0<CR><LF></p>	
AT#SCFGEXT3=?	Test command returns the range of supported values for all the parameters.	



5.1.6.4.10. Socket Dial - #SD

#SD - Socket Dial	SELINT 2
<p>AT#SD=<connId>,<txProt>,<rPort>,<IPaddr>[,<closureType>[,<lPort>[,<connMode>]]]</p>	<p>Execution command opens a remote connection via socket.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><txProt> - transmission protocol 0 - TCP 1 - UDP</p> <p><rPort> - remote host port to contact 1..65535</p> <p><IPaddr> - address of the remote host, string type. This parameter can be either:</p> <ul style="list-style-type: none"> - any valid IP address in the format: "xxx.xxx.xxx.xxx" - any host name to be solved with a DNS query <p><closureType> - socket closure behaviour for TCP when remote host has closed 0 - local host closes immediately (default) 255 - local host closes after an escape sequence (+++) or immediately in case of an abortive disconnect from remote.</p> <p><lPort> - UDP connections local port 1..65535</p> <p><connMode> - Connection mode 0 - online mode connection (default) 1 - command mode connection</p> <p>Note: <closureType> parameter is valid for TCP connections only and has no effect (if used) for UDP connections.</p> <p>Note: <lPort> parameter is valid for UDP connections only and has no effect (if used) for TCP connections.</p> <p>Note: if we set <connMode> to online mode connection and the command is successful we enter in online data mode and we see the intermediate result code CONNECT. After the CONNECT we can suspend the direct interface to the socket connection (nb the socket stays open) using the escape sequence (+++): the module moves back to command mode and we receive the final result code OK after the suspension. After such a suspension, it's possible to resume it in every moment (unless the socket inactivity timer timeouts, see #SCFG) by using the #SO command with the corresponding <connId>.</p> <p>Note: if we set <connMode> to command mode connection and the command is successful, the socket is opened and we remain in command mode and we see the result code OK.</p> <p>Note: if there are input data arrived through a connected socket and not yet read because the module entered command mode before reading them (after an escape</p>



#SD - Socket Dial	SELINT 2
	<p>sequence or after #SD has been issued with <connMode> set to command mode connection), these data are buffered and we receive the SRING URC (SRING presentation format depends on the last #SCFGEXT setting); it's possible to read these data afterwards issuing #SRECV. Under the same hypotheses it's possible to send data while in command mode issuing #SEND</p> <p>Note: resume of the socket(#SO) after suspension or closure(#SH) has to be done on the same instance on which the socket was opened through #SD. In fact, suspension has been done on the instance itself.</p>
AT#SD=?	Test command reports the range of values for all the parameters.
Example	<p><i>Open socket 1 in online mode</i></p> <p>AT#SD=1,0,80,"www.google.com",0,0,0 CONNECT ...</p> <p><i>Open socket 1 in command mode</i></p> <p>AT#SD=1,0,80,"www.google.com",0,0,1 OK</p>

5.1.6.4.11. Socket Restore - #SO

#SO - Socket Restore	SELINT 2
AT#SO=<connId>	<p>Execution command resumes the direct interface to a socket connection which has been suspended by the escape sequence.</p> <p>Parameter: <connId> - socket connection identifier 1..6</p>
AT#SO=?	Test command reports the range of values for <connId> parameter.



#SL - Socket Listen	SELINT 2
AT#SL=<connId>,<listenState>,<listenPort>>[,<closure type>]	<p>This command opens/closes a socket listening for an incoming TCP connection on a specified port.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><listenState> - 0 - closes socket listening 1 - starts socket listening</p> <p><listenPort> - local listening port 1..65535</p> <p><closure type> - socket closure behaviour for TCP when remote host has closed 0 - local host closes immediately (default) 255 - local host closes after an escape sequence (+++) or immediately in case of an abortive disconnect from remote.</p> <p>Note: if successful, the command returns a final result code OK. If the ListenAutoRsp flag has not been set through the command AT#SCFGEXT (for the specific connId), then, when a TCP connection request comes on the input port, if the sender is not filtered by internal firewall (see #FRWL), an URC is received:</p> <p>+SRING : <connId></p> <p>Afterwards we can use #SA to accept the connection or #SH to refuse it.</p> <p>If the ListenAutoRsp flag has been set, then, when a TCP connection request comes on the input port, if the sender is not filtered by the internal firewall (see command #FRWL), the connection is automatically accepted: the CONNECT indication is given and the modem goes into online data mode.</p> <p>If the socket is closed by the network the following URC is received:</p> <p>#SL: ABORTED</p> <p>Note: when closing the listening socket <listenPort> is a don't care parameter</p>
AT#SL?	Read command returns all the actual listening TCP sockets.
AT#SL=?	Test command returns the range of supported values for all the subparameters.
Example	<p>Next command opens a socket listening for TCP on port 3500 without.</p> <p>AT#SL=1,1,3500 OK</p>



5.1.6.4.13. Socket Listen UDP - #SLUDP

#SLUDP - Socket Listen UDP		SELINT 2
AT#SLUDP=<connId> > , <listenState> , <listenPort>	<p>This command opens/closes a socket listening for an incoming UDP connection on a specified port.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><listenState> - 0 - closes socket listening 1 - starts socket listening</p> <p><listenPort> - local listening port 1..65535</p> <p>Note: if successful, the command returns a final result code OK. If the ListenAutoRsp flag has not been set through the command AT#SCFGEXT (for the specific connId), then, when an UDP connection request comes on the input port, if the sender is not filtered by internal firewall (see #FRWL), an URC is received:</p> <p>+SRING : <connId></p> <p>Afterwards we can use #SA to accept the connection or #SH to refuse it.</p> <p>If the ListenAutoRsp flag has been set, then, when an UDP connection request comes on the input port, if the sender is not filtered by the internal firewall (see command #FRWL), the connection is automatically accepted: the CONNECT indication is given and the modem goes into online data mode.</p> <p>If the socket is closed by the network the following URC is received:</p> <p>#SLUDP: ABORTED</p> <p>Note: when closing the listening socket <listenPort> is a don't care parameter</p>	
AT#SLUDP?	Read command returns all the actual listening UDP sockets.	
AT#SLUDP=?	Test command returns the range of supported values for all the subparameters.	
Example	<p><i>Next command opens a socket listening for UDP on port 3500.</i></p> <p>AT#SLUDP=1,1,3500 OK</p>	



5.1.6.4.14. Socket Accept - #SA

#SA - Socket Accept	SELINT 2
AT#SA=<connId>[,<connMode>]	<p>Execution command accepts an incoming socket connection after an URC SRING: <connId></p> <p>Parameter: <connId> - socket connection identifier 1..6 <connMode> - Connection mode, as for command #SD. 0 - online mode connection (default) 1 - command mode connection</p> <p>Note: the SRING URC has to be a consequence of a #SL issue.</p> <p>Note: setting the command before to having received a SRING will result in an ERROR indication, giving the information that a connection request has not yet been received</p>
AT#SA=?	Test command reports the range of values for all the parameters.

5.1.6.4.15. Detect the cause of a Socket disconnection - #SLASTCLOSURE

#SLASTCLOSURE – Detect the cause of a socket disconnection	SELINT 2
AT#SLASTCLOSURE=[<connId>]	<p>Execution command reports socket disconnection cause</p> <p>Parameters: <connId> - socket connection identifier 1..6</p> <p>The response format is:</p> <p>#SLASTCLOSURE: <connId>,<cause></p> <p>where: <connId> - socket connection identifier, as before <cause> - socket disconnection cause:</p> <p>0 – not available(socket has not yet been closed)</p> <p>1.- remote host TCP connection close due to FIN/END: normal remote disconnection decided by the remote application</p> <p>2 -.remote host TCP connection close due to RST, all others cases in which the socket is aborted without indication from peer (for instance</p>



	<p>because peer doesn't send ack after maximum number of retransmissions/peer is no more alive). All these cases include all the "FATAL" errors after rcv or send on the TCP socket(named as different from EWOULDBLOCK)</p> <p>3.- socket inactivity timeout</p> <p>4.- network deactivation(PDP context deactivation from network)</p> <p>Note: any time socket is re-opened, last disconnection cause is reset. Command report 0(not available).</p> <p>Note: user closure cause(#SH) is not considered and if a user closure is performed after remote disconnection, remote disconnection cause remains saved and is not overwritten.</p> <p>Note: if more consecutive closure causes are received, the original disconnection cause is saved. (For instance: if a TCP FIN is received from remote and later a TCP RST because we continue to send data, FIN cause is saved and not overwritten)</p> <p>Note: also in case of <closureType>(#SD) set to 255, if the socket has not yet been closed by user after the escape sequence, #SLASTCLOSURE indicates remote disconnection cause if it has been received.</p> <p>Note: in case of UDP, cause 2 indicates abnormal(local) disconnection. Cause 3 and 4 are still possible. (Cause 1 is obviously never possible)</p> <p>Note: in case of command mode connection and remote closure with subsequent inactivity timeout closure without retrieval of all available data(#SRECV or SRING mode 2), it is indicated cause 1 for both possible FIN and RST from remote.</p>
AT#SLASTCLOSURE=?	Test command reports the supported range for parameter <connId>



5.1.6.4.16. Receive Data In Command Mode - #SRECV

#SRECV - Receive Data In Command Mode	SELINT 2
AT#SRECV= <connId> , <maxByte> ,[<UDPInfo>] o>]	<p>Execution command permits the user to read data arrived through a connected socket, but buffered and not yet read because the module entered command mode before reading them; the module is notified of these data by a SRING URC, whose presentation format depends on the last #SCFGEXT setting.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><maxByte> - max number of bytes to read 1..1500</p> <p><UDPInfo> 0 – UDP information disabled (default) 1 – UDP information enabled: data are read just until the end of the UDP datagram and the response carries information about the remote IP address and port and about the remaining bytes in the datagram.</p> <p>AT#SRECV=<connId>,<maxBytes>,1 #SRECV: <sourceIP>,<sourcePort><connId>,<recData>,<dataLeft> data</p> <p>Note: issuing #SRECV when there's no buffered data raises an error.</p>
AT#SRECV=?	<p>Test command returns the range of supported values for parameters < connId > < maxByte > and <UDPInfo></p>
<p>Example</p>	<p>SRING URC (<srMode> be 0, <dataMode> be 0) telling data have just come through connected socket identified by <connId>=1 and are now buffered SRING: 1</p> <p><i>Read in text format the buffered data</i> AT#SRECV=1,15 #SRECV: 1,15 stringa di test</p> <p>OK</p> <p><i>Or:</i> <i>if the received datagram, received from <IPaddr> and <IPport> is of 60 bytes</i> AT#SRECV=1,15,1 #SRECV: <IPaddr>,<IPport>,1,15,45 stringa di test</p> <p>OK</p> <p>SRING URC (<srMode> be 1, <dataMode> be 1) telling 15 bytes data have just come through connected socket identified by <connId>=2 and are now buffered</p>



#SRECV - Receive Data In Command Mode	SELINT 2
<p>SRING: 2,15</p> <p><i>Read in hexadecimal format the buffered data</i></p> <p>AT#SRECV=2,15 #SRECV: 2,15 737472696e67612064692074657374</p> <p>OK</p> <p><i>Or:</i> <i>if the received datagram, received from <IPaddr> and <IPport> is of 60 bytes</i></p> <p>AT#SRECV=2,15 #SRECV: <IPaddr>,<IPport>,2,15,45 737472696e67612064692074657374</p> <p>OK</p> <p>SRING URC (<srMode> be 2, <dataMode> be 0) displaying (in text format) 15 bytes data that have just come through connected socket identified by <connId>=3; it's no necessary to issue #SRECV to read the data; no data remain in the buffer after this URC</p> <p>SRING: 3,15, stringa di test</p>	

5.1.6.4.17. Send Data In Command Mode - #SEND

#SEND - Send Data In Command Mode	SELINT 2
<p>AT#SEND=<connId></p> <p>Execution command permits, while the module is in command mode, to send data through a connected socket.</p> <p>Parameters: <connId> - socket connection identifier 1..6</p> <p>The device responds to the command with the prompt <greater_than><space> and waits for the data to send.</p> <p>To complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex).</p> <p>If data are successfully sent, then the response is OK. If data sending fails for some reason, an error code is reported</p> <p>Note: the maximum number of bytes to send is 1500 bytes ; trying to send more data will cause the surplus to be discarded and lost.</p> <p>Note: it's possible to use #SEND only if the connection was opened by #SD, else</p>	



#SSEND - Send Data In Command Mode		SELINT 2
	<p>the ME is raising an error.</p> <p>Note: a byte corresponding to BS char(0x08) is treated with its corresponding meaning; therefore previous byte will be cancelled(and BS char itself will not be sent)</p>	
AT#SSEND=?	Test command returns the range of supported values for parameter < connId >	
Example	<p>Send data through socket number 2</p> <p>AT#SSEND=2</p> <p>>Test<CTRL-Z></p> <p>OK</p>	

5.1.6.4.18. Send UDP data to a specific remote host - #SSENDUDP

#SSENDUDP – send UDP data to a specific remote host		SELINT 2
AT#SSENDUDP=<connId> ,<remoteIP>,<remotePort>	<p>This command permits, while the module is in command mode, to send data over UDP to a specific remote host.</p> <p>UDP connection has to be previously completed with a first remote host through #SLUDP / #SA.</p> <p>Then, if we receive data from this or another host, we are able to send data to it.</p> <p>Like command #SSEND, the device responds with ‘>’ and waits for the data to send.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><remoteIP> - IP address of the remote host in dotted decimal notation, string type: “xxx.xxx.xxx.xxx”</p> <p><remotePort> - remote host port 1..65535</p> <p>Note: after SRING that indicates incoming UDP data and issuing #SRECV to receive data itself, through #SS is possible to check last remote host (IP/Port).</p> <p>Note: if successive resume of the socket to online mode Is performed(#SO), connection with first remote host is restored as it was before.</p>	



AT#SENDUDP=?	Test command reports the supported range of values for parameters <connId> , <remoteIP> and <remotePort>
Example	<p><i>Starts listening on <LocPort>(previous setting of firewall through #FRWL has to be done)</i></p> <p>AT#SLUDP=1,1,<LocPort> OK</p> <p>SRING: 1 // UDP data from a remote host available</p> <p>AT#SA=1,1 OK</p> <p>SRING: 1</p> <p>AT#SI=1 #SI: 1,0,0,23,0 // 23 bytes to read</p> <p>OK</p> <p>AT#SRECV=1,23 #SRECV:1,23 message from first host</p> <p>OK</p> <p>AT#SS=1 #SS: 1,2,<LocIP>,<LocPort>,<RemIP1>,<RemPort1></p> <p>OK</p> <p>AT#SENDUDP=1,<RemIP1>,<RemPort1> >response to first host OK</p> <p>SRING: 1 // UDP data from a remote host available</p> <p>AT#SI=1 #SI: 1,22,23,24,0 // 24 bytes to read</p> <p>OK</p> <p>AT#SRECV=1,24 #SRECV:1,24 message from second host</p> <p>OK</p> <p>AT#SS=1 #SS: 1,2,<LocIP>,<LocPort>,<RemIP2>,<RemPort2></p>



	<p>OK</p> <p><i>Remote host has changed, we want to send a reponse:</i></p> <p>AT#SSENDUDP=1,<RemIP2>,<RemPort2> >response to second host OK</p>
--	--

5.1.6.4.19. Send UDP data to a specific remote host extended

#SSENDUDPEXT – send UDP data to a specific remote host extended		SELINT 2
<p>AT#SSENDUDPEXT =<connId>,<bytestosend>,<remoteIP>,<remotePort></p>	<p>This command permits, while the module is in command mode, to send data over UDP to a specific remote host including all possible octets(from 0x00 to 0xFF)</p> <p>As indicated about #SSENDUDP: UDP socket has to be previously opened through #SLUDP / #SA, then we are able to send data to different remote hosts</p> <p>Like #SENDEXT, the device responds with the prompt '>' and waits for the data to send, operation is automatically completed when <bytestosend> have been sent.</p> <p>Parameters: <connId> - socket connection identifier 1..6</p> <p><bytestosend> - number of bytes to be sent 1-1500</p> <p><remoteIP> - IP address of the remote host in dotted decimal notation, string type: "xxx.xxx.xxx.xxx"</p> <p><remotePort> - remote host port 1..65535</p>	
<p>AT#SSENDUDPEXT=?</p>	<p>Test command reports the supported range of values for parameters <connId>, <bytestosend>, <remoteIP> and <remotePort></p>	



5.1.6.4.20. Send data in Command Mode extended - #SSENDEXT

#SSENDEXT - Send Data In Command Mode extended		SELINT 2
AT#SSENDEXT= <connId> , <bytetestosend>	<p>Execution command permits, while the module is in command mode, to send data through a connected socket including all possible octets (from 0x00 to 0xFF).</p> <p>Parameters: <connId> - socket connection identifier 1..6 <bytetestosend> - number of bytes to be sent Please refer to test command for range</p> <p>The device responds to the command with the prompt <greater_than><space> and waits for the data to send. When <bytetestosend> bytes have been sent, operation is automatically completed. If data are successfully sent, then the response is OK. If data sending fails for some reason, an error code is reported.</p> <p>Note: it's possible to use #SSENDEXT only if the connection was opened by #SD, else the ME is raising an error.</p> <p>Note: all special characters are sent like a generic byte. (For instance: 0x08 is simply sent through the socket and don't behave like a BS, i.e. previous character is not deleted)</p>	
AT#SSENDEXT=?	Test command returns the range of supported values for parameters < connId > and <bytetestosend>	
Example	<p>Open the socket in command mode: at#sd=1,0,<port>,"IP address",0,0,1 OK</p> <p>Give the command specifying total number of bytes as second parameter:</p> <p>at#ssendext=1,256 > ; // Terminal echo of bytes sent is displayed here OK</p> <p>All possible bytes(from 0x00 to 0xFF) are sent on the socket as generic bytes.</p>	



5.1.6.4.21. IP Easy Authentication Type - #SGACTAUTH

#SGACTAUTH – Easy GRPS Authentication Type		SELINT 2
AT#SGACTAUTH=<type>	<p>Set command sets the authentication type for IP Easy This command has effect on the authentication mode used on AT#SGACT or AT#GPRS commands.</p> <p>Parameter <type> 0 - no authentication 1 - PAP authentication (factory default) 2 - CHAP authentication</p> <p>Note: the parameter is not saved in NWM</p>	
AT#SGACTAUTH?	<p>Read command reports the current IP Easy authentication type, in the format:</p> <p>#SGACTAUTH: <type></p>	
AT#SGACTAUTH=?	Test command returns the range of supported values for parameter <type> .	

5.1.6.4.22. Context activation and configuration - #SGACTCFG

#SGACTCFG - Context Activation and Configuration		SELINT 2
AT#SGACTCFG=<cid>,<retry>,[,<delay>],[,<urcmode>]]	<p>Execution command is used to enable or disable the automatic activation/reactivation of the context for the specified PDP context, to set the maximum number of attempts and to set the delay between an attempt and the next one. The context is activated automatically after every GPRS Attach or after a NW PDP CONTEXT deactivation if at least one IPEasy socket is configured to this context (see AT#SCFG).</p> <p>Parameters:</p> <p><cid> - PDP context identifier (see +CGDCONT command) 1..5 - numeric parameter which specifies a particular PDP context definition</p> <p><retry> - numeric parameter which specifies the maximum number of context activation attempts in case of activation failure. The value belongs to the following range: 0 - 15 0 - disable the automatic activation/reactivation of the context (default)</p> <p><delay> - numeric parameter which specifies the delay in seconds between an attempt and the next one. The value belongs to the following range: 180 - 3600</p> <p>< urcmode > - URC presentation mode 0 - disable unsolicited result code (default) 1 - enable unsolicited result code, after an automatic activation/reactivation, of</p>	



	<p>the local IP address obtained from the network. It has meaning only if <auto>=1. The unsolicited message is in the format:</p> <p>#SGACT: <ip_address></p> <p>reporting the local IP address obtained from the network.</p> <p>Note: the URC presentation mode <urcmode> is related to the current AT instance only. Last <urcmode> setting is saved for every instance as extended profile parameter, thus it is possible to restore it even if the multiplexer control channel is released and set up, back and forth.</p> <p>Note: <retry> and <delay> setting are global parameter saved in NVM</p> <p>Note: if the automatic activation is enabled on a context, then it is not allowed to modify by the command AT#SCFG the association between the context itself and the socket connection identifier; all the other parameters of command AT#SCFG are modifiable while the socket is not connected</p>
AT#SGACTCFG?	<p>Read command reports the state of all the five contexts, in the format:</p> <p>#SGACTCFG: <cid1>,<retry1>,<delay1>, <urcmode>CR<LF></p> <p>...</p> <p>#SGACTCFG: <cid5>,<retry5>,<delay5>,<urcmode></p> <p>where:</p> <p><cidn> - as <cid> before</p> <p><retryn> - as <retry> before</p> <p><delayn> - as <delay> before</p> <p><urcmode> - as <urcmode> before</p>
AT#SGACTCFG=?	<p>Test command reports supported range of values for parameters <cid>, <retry>, <delay> and <urcmode></p>



5.1.6.4.23. Context activation and configuration extended - #SGACTCFGEXT

#SGACTCFGEXT - context activation configuration extended		SELINT 2
AT#SGACTCFGEXT= <cid> , <abortAttemptEnable> [,<unused> [,<unused> [,<unused>]]]	<p>Execution command is used to enable new features related to context activation.</p> <p>Parameters:</p> <p><cid> - PDP context identifier (see +CGDCONT command) 1..5 - numeric parameter which specifies a particular PDP context definition</p> <p>< abortAttemptEnable > 0 – old behaviour: no abort possible while attempting context activation</p> <p>1 – abort during context activation attempt is possible by sending a byte on the serial port.</p> <p>It takes effect on successive GPRS context activation attempt through #SGACT command in the following manner. While waiting for AT#SGACT=<cid>,1 response(up to 150 s) is possible to abort attempt by sending a byte and get back AT interface control(NO CARRIER indication).</p> <p>Note: If we receive delayed CTEXT ACTIVATION ACCEPT after abort, network will be automatically informed of our aborted attempt through relative protocol messages(SM STATUS) and will also close on its side. Otherwise, if no ACCEPT is received after abort, network will be informed later of our PDP state through other protocol messages (routing area update for instance).</p>	
AT#SGACTCFGEXT?	<p>Read command reports the state of all the five contexts, in the format:</p> <p>#SGACTCFGEXT: <cid1>,< abortAttemptEnable1 >,0,0,0<CR><LF> ... #SGACTCFGEXT: <cid5>,< abortAttemptEnable5 >,0,0,0<CR><LF></p> <p>where: <cidn> - as <cid> before < abortAttemptEnable n> - as < abortAttemptEnable > before</p> <p>Note: values are automatically saved in NVM.</p>	
AT#SGACTCFGEXT=?	<p>Test command reports supported range of values for all parameters</p>	



5.1.6.4.24. PAD command features - #PADCMD

#PADCMD – PAD command features		SELINT 2
AT#PADCMD=<mode>	<p>This command sets features of the pending data flush to socket, opened with AT#SD command.</p> <p>Parameters:</p> <p><mode>: Bit 1: 1 - enable forwarding; 0 – disable forwarding; Other bits reserved;</p> <p>Note: forwarding depends on character defined by AT#PADFWD</p>	
AT#PADCMD?	Read command reports the currently selected <mode> in the format: #PADCMD: mode	
AT#PADCMD=?	Test command reports the supported range of values for parameter <mode> .	

5.1.6.4.25. PAD forward character - #PADFWD

#PADFWD – PAD forward character		SELINT 2
AT#PADFWD=<char> [,<mode>]	<p>This command sets the char that immediately flushes pending data to socket, opened with AT#SD command.</p> <p>Parameters:</p> <p><char>: a number, from 0 to 255, that specifies the ascii code of the char used to flush data</p> <p><mode>: flush mode, 0 – normal mode (default); 1 – reserved;</p> <p>Note: use AT#PADCMD to enable the socket char-flush activity.</p>	
AT#PADFWD?	Read command reports the currently selected <char> and <mode> in the format: #PADFWD: <char>,mode	
AT#PADFWD=?	Test command reports the supported range of values for parameters <char> and <mode> .	



5.1.6.4.26. Base64 encoding/decoding of socket sent/received data - #BASE64

#BASE64 – Base64 encoding/decoding of socket sent/received data	SELINT 2
<p>AT#BASE64= <connId>,<enc>,<dec> [,<unused_B > [,<unused_C >]]</p>	<p>Set command enables base64 encoding and/or decoding of data sent/received to/from the socket in online or in command mode.</p> <p>Parameters:</p> <p><connId> - socket connection identifier 1..6</p> <p><enc> 0 – no encoding of data received from serial port. 1 - MIME RFC2045 base64 encoding of data received from serial port that have to be sent to <connId> socket.</p> <p>Note: as indicated from RFC2045 the encoded output stream is represented in lines of no more than 76 characters each. Lines are defined as sequences of octets separated by a CRLF sequence.</p> <p>2 - RFC 3548 base64 encoding of data received from serial port that have to be sent to <connId> socket. Note: as indicated from RFC3548 CRLF have not to be added.</p> <p><dec> 0 – no decoding of data received from socket <connId>. 1 - MIME RFC2045 base64 decoding of data received from socket <connId> and sent to serial port. (Same rule as for <enc> regarding line feeds in the received file that has to be decoded) 2 - RFC3548 base64 decoding of data received from socket <connId> and sent to serial port. (Same rule as for <enc> regarding line feeds in the received file that has to be decoded)</p> <p>Note: it is possible to use command to change current <enc>/<dec> settings for a socket already opened in command mode or in online mode after suspending it. (In this last case obviously it is necessary to set AT#SKIPESC=1).</p> <p>Note: to use #BASE64 in command mode, if data to send exceed maximum value for #SENDEXT command, they have to be divided in multiple parts. These parts have to be a multiple of 57 bytes, except for the last</p>



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

	<p>one, to distinguish EOF condition. (Base64 encoding rules) For the same reason if #SRECV command is used by the application to receive data, a multiple of 78 bytes has to be considered.</p> <p>Note: to use #SRECV to receive data with <dec> enabled, it is necessary to consider that: reading <maxByte> bytes from socket, user will get less due to decoding that is performed.</p> <p>Note: values are automatically saved in NVM.</p>
AT#BASE64?	<p>Read command returns the current <enc>/<dec> settings for all the six sockets, in the format:</p> <pre>#BASE64:<connId1><enc1>,<dec1>,0,0<CR><LF> ... #BASE64:<connId6>,<enc6>,<dec6>,0,0<CR><LF></pre>
AT#BASE64=?	<p>Test command returns the range of supported values for all the subparameters.</p>
Example	<pre>AT#SKIPESC=1 OK AT#SD=<connId>,<txProt>,<rPort>,<IPAddr> CONNECT //Data sent without modifications(default) +++ (suspension) OK at#base64=<connId>,1,0 OK AT#SO=<connId> CONNECT // Data received from serial port are encoded // base64 before to be sent on the socket +++ (suspension) OK at#base64=<connId>,0,1 OK</pre>



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

	<p>AT#SO=<connId> CONNECT // Data received from socket are decoded // base64 before to be sent on the serial port +++ (suspension) </p>
--	---



5.1.6.4.27. SSL Commands

5.1.6.4.27.1. Open a socket SSL to a remote server - #SSLD

#SSLD – Opens a socket SSL to a remote server	SELINT 2
<p>AT#SSLD=<SSId>,<rPort>,<IPAddress>,<ClosureType>[,<connMode>[,<Timeout>]]</p>	<p>Execution command opens a remote connection via socket secured through SSL. Both command and online modes can be used.</p> <p>In the first case ‘OK’ is printed on success, and data exchange can be performed by means of #SSLSEND and #SSLRECV commands.</p> <p>In online mode ‘CONNECT’ message is printed, and data can be sent/received directly to/by the serial port. Communication can be suspended by issuing the escape sequence (by default +++) and restored with #SSLO command.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier 1 - Until now SSL block manage only one socket</p> <p><rPort> - Remote TCP port to contact 1..65535</p> <p><IPAddress> - address of the remote host, string type. This parameter can be either:</p> <ul style="list-style-type: none"> - any valid IP address in the format: “xxx.xxx.xxx.xxx” - any host name to be solved with a DNS query <p><ClosureType> - 0 – only value 0 supported</p> <p><connMode> - connection mode 0 – online mode connection. 1 – command mode connection (factory default).</p> <p><Timeout> - time-out in 100 ms units. It represents the maximum allowed TCP inter-packet delay. It means that, when more data is expected during the handshake, the module awaits <Timeout> * 100 msecs for the next packet. If no more data can be read, the module gives up the handshake and raises an ERROR response.</p> <p>Note: IT’S NOT the total handshake timeout or, in other words, it’s not the absolute maximum time between the #SSLD issue and the CONNECT/OK/ERROR response. Though by changing this parameter you can limit the handshake duration (for example in case of congested network or busy server), there’s no way to be sure to get the command response within a certain amount of time, because it depends on the TCP connection time, the handshake time and the computation time (which</p>



	<p>depends on the authentication mode and on the size of keys and certificates).</p> <p>10..5000 - hundreds of ms (factory default is 100)</p> <p>Note: if secure socket is not enabled using AT#SSLEN only test requests can be made.</p> <p>Note: if timeout is not set for SSL connection the default timeout value, set by AT#SSLCFG, is used.</p> <p>Note: in online mode the socket is closed after an inactivity period (configurable with #SSLCFG, with a default value of 90 seconds), and the 'NO CARRIER' message is printed.</p> <p>Note: in online mode data are transmitted as soon as the data packet size is reached or as after a transmission timeout. Both these parameters are configurable by using #SSLCFG.</p> <p>Note: Before opening a SSL connection the GPRS context must have been activated by AT#SGACT=x,1.</p> <p>Note: Before opening a SSL connection, make sure to have stored the needed secure data (CA certificate), using AT#SSLSECDATA.</p> <p>Note: in case of CA Certificate already stored(for instance: SUPL), it could be possible to avoid #SSLSECDATA command.</p>
AT#SSLD=?	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SSLD: (1),(1-65535),,(0),(0,1),(10-5000)</p>

5.1.6.4.27.2. Enable a SSL socket - #SSLEN

#SSLEN – Enable a SSL socket		SELINT 2
AT#SSLEN=<SSId>,<Enable>	<p>This command enables a socket secured by SSL</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier</p> <p>1 – Until now SSL block manages only one socket</p> <p><Enable></p> <p>0 – deactivate secure socket [default]</p> <p>1 – activate secure socket</p>	



	<p>Note: if secure socket is not enabled only test requests can be made for every SSL command except #SSLS (SSL status) which can be issued also if the socket is disabled.</p> <p>Read commands can be issued if at least a <SSId> is enabled.</p> <p>Note: these values are automatically saved in NVM.</p> <p>Note: an error is raised if #SLEN=X,1 is issued when the socket 'X' is already enabled and if #SLEN=X,0 is issued when the socket 'X' is already disabled.</p> <p>Note: a SSL socket cannot be disabled by issuing #SLEN=1 if it is connected.</p>
AT#SLEN?	<p>Read command reports the currently enable status of secure socket in the format:</p> <p>#SLEN: <SSId>,<Enable><CR><LF> <CR><LF> OK</p>
AT#SLEN=?	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SLEN: (1),(0,1)</p>



5.1.6.4.27.3. Close a SSL socket - #SSLH

#SSLH – Close a SSL socket		SELINT 2
AT#SSLH=<SSId>[,<ClosureType>]	<p>This command allows closing the SSL connection.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier</p> <p>1 - Until now SSL block manage only one socket.</p> <p>< ClosureType >:</p> <p>0 – only value 0 is supported</p> <p>Note: if secure socket is not enabled using AT#SSLEN only test requests can be made.</p>	
AT#SSLH=?	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SSLH: (1),(0)</p>	

5.1.6.4.27.4. Restore a SSL socket after a +++ - #SSLO

#SSLO – Restore a SSL socket after a +++		SELINT 2
AT#SSLO=<SSId>	<p>This command allows to restore a SSL connection (online mode) suspended by an escape sequence (+++). After the connection restore, the CONNECT message is printed.</p> <p>Please note that this is possible even if the connection has been started in command mode (#SSLD with <connMode> parameter set to 1).</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier</p> <p>1 - Until now SSL block manage only one socket.</p> <p>Note: if secure socket is not enabled using AT#SSLEN only test requests can be made.</p> <p>Note: Before opening a SSL connection the GPRS context must have been activated by AT#SGACT=X,1.</p> <p>Note: if an error occur during reconnection the socket can not be reconnected then a new connection has to be done.</p>	
AT#SSLO=?	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SSLO: (1)</p>	



5.1.6.4.27.5. Read Data from a SSL socket - #SSLRCV

#SSLRCV – Read data from a SSL socket	SELINT 2
AT#SSLRCV=<SSId>,<MaxNumByte>[,<TimeOut>]	<p>This command allows receiving data from a secure socket.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier 1 - Until now SSL block manage only one socket.</p> <p><MaxNumByte> - max number of bytes to read 1..1000</p> <p>< Timeout > - time-out in 100 ms units 10..5000 - hundreds of ms (factory default is 100)</p> <p>If no data are received the device responds: #SSLRCV: 0<CR><LF> TIMEOUT<CR><LF> <CR><LF> OK</p> <p>If the remote host closes the connection the device responds: #SSLRCV: 0<CR><LF> DISCONNECTED<CR><LF> <CR><LF> OK</p> <p>If data are received the device responds: #SSLRCV: NumByteRead<CR><LF> ...(Data read)... <CR><LF> <CR><LF> OK</p> <p>Note: if secure socket is not enabled using AT#SSLEN only test requests can be made.</p> <p>Note: if timeout is not set for SSL connection the default timeout value, set through AT#SSLCFG, is used.</p> <p>Note: before receiving data from the SSL connection it has to be established using AT#SSLD.</p>
AT#SSLRCV=?	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SSLRCV: (1),(1-1000),(10-5000)</p>



5.1.6.4.27.6. Report the status of a SSL socket - #SSL

#SSL – Report the status of a SSL socket	SELINT 2
<p>AT#SSL=<SSId></p>	<p>This command reports the status of secure sockets.</p> <p>Parameters: <SSId> - Secure Socket Identifier 1 - Until now SSL block manages only one socket</p> <p>If secure socket is connected the device responds to the command:</p> <p>#SSL: <SSId>,2,<CipherSuite></p> <p>Where <CipherSuite> can be as follows:</p> <p>0 - unknown 1 - TLS_RSA_WITH_RC4_128_MD5 2 - TLS_RSA_WITH_RC4_128_SHA 3 - TLS_RSA_WITH_AES_128_CBC_SHA 4 - TLS_RSA_WITH_NULL_MD5</p> <p>otherwise:</p> <p>#SSL: <SSId>,<ConnectionStatus></p> <p><ConnectionStatus> available values are: 0 – Socket Disabled 1 – Connection closed 2 – Connection open</p> <p>Note: this command can be issued even if the <SSId> is not enabled.</p>
<p>AT#SSL=?</p>	<p>Test command returns the range of supported values for all the parameters.</p> <p>#SSL: (1)</p>



5.1.6.4.27.7. Manage the security data - #SSLSECDATA

#SSLSECDATA – Manage the security data	SELINT 2
<p>AT#SSLSECDATA =<SSId>,<Action>,<DataType>[,<Size>]</p>	<p>This command allows to store, delete and read security data (Certificate, CAcertificate, private key) into NVM.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier 1 - Until now SSL block manages only one socket.</p> <p><Action> - Action to do. 0 – Delete data from NVM. 1 – Store data into NVM. 2 – Read data from NVM .</p> <p><DataType> 0 – Certificate 1 – CA certificate 2 - RSA Private key</p> <p><Size> - Size of security data to be stored 1..2047</p> <p>If the <Action> parameter is 1 (store data into NVM) the device responds to the command with the prompt '>' and waits for the data to store.</p> <p>Note: secured data have to be in PEM or in DER format, depending on < cert_format > chosen with #SSLSECCFG. If no < cert_format > has been specified with #SSLSECCFG, PEM format is assumed.</p> <p>PEM format(see #SSLSECCFG command):To complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex). DER format(see #SSLSECCFG command):: When <size> bytes are entered, the certificate is automatically stored. ESC or Ctrl-Z don't take effect, because they are considered as possible octets contained in the certificate.</p> <p>If data are successfully stored, then the response is OK; if it fails for some reason, an error code is reported.</p> <p>If the <Action> parameter is 2 (read data from NVM), data specified by <DataType> parameter is shown in the following format: #SSLSECDATA: <connId>,<DataType></p>



	<p><DATA></p> <p>OK</p> <p>If <DataType> data has not been stored (or it has been deleted) the response has the following format: #SSLSECDATA: <connId>,<DataType> No data stored</p> <p>OK</p> <p>Note: <size> parameter is mandatory if the <write> action is issued, but it has to be omitted for <delete> or <read> actions are issued.</p> <p>Note: if secure socket is not enabled using AT#SSLEN only test requests can be made.</p> <p>Note: If socket is connected an error code is reported.</p> <p>Note: in case of CA Certificate already stored(for instance: SUPL), it could be possible to avoid #SSLSECDATA command.</p>
AT#SSLSECDATA?	<p>Read command reports what security data are stored in the format:</p> <p>#SSLSECDATA: <SSId 1>,<CertIsSet>,<CAcertIsSet>,<PrivKeyIsSet></p> <p><CertIsSet>, <CAcertIsSet>, <PrivKeyIsSet> are 1 if related data are stored into NVM otherwise 0.</p>
AT#SSLSECDATA=?	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SSLSECDATA: (1),(0-2), ,(0-2),(1-2047)</p>



5.1.6.4.27.8. Send data through a SSL socket - #SSLSEND

#SSLSEND – Send data through a SSL socket	SELINT 2
<p>AT#SSLSEND=<SSId>[, < Timeout >]</p>	<p>This command allows sending data through a secure socket.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier 1 - Until now SSL block manage only one socket.</p> <p>< Timeout > - socket send timeout, in 100 ms units. 10..5000 - hundreds of ms (factory default is 100)</p> <p>The device responds to the command with the prompt ‘>’ and waits for the data to send. To complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex).</p> <p>If data are successfully sent, then the response is OK. If data sending fails for some reason, an error code is reported</p> <p>Note: the maximum number of bytes to send is 1023; trying to send more data will cause the surplus to be discarded and lost.</p> <p>Note: if secure socket is not enabled using AT#SSLEN only test requests can be made.</p> <p>Note: if timeout is not set for SSL connection the default timeout value, set by AT#SSLCFG, is used.</p> <p>Note: Before sending data through the SSL connection it has to be established using AT#SSLD.</p>
<p>AT#SSLSEND=?</p>	<p>Test command returns the range of supported values for all the parameters:</p> <p>#SSLSEND: (1),(10-5000)</p>



5.1.6.4.27.9. Configure security parameters of a SSL socket - #SSLSECCFG

#SSLSECCFG – Configure security parameters of a SSL socket	SELINT 2
<p>AT#SSLSECCFG= <SSId>, <CipherSuite>, <auth_mode> [,<cert_format>]</p>	<p>This command allows configuring SSL connection parameters.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier 1 - Until now SSL block manage only one socket</p> <p><CipherSuite> 0 - Chiper Suite is chosen by remote Server [default] 1 - TLS_RSA_WITH_RC4_128_MD5 2 - TLS_RSA_WITH_RC4_128_SHA 3 - TLS_RSA_WITH_AES_128_CBC_SHA 4 - TLS_RSA_WITH_NULL_SHA</p> <p>Note: TLS_RSA_WITH_NULL_SHA is not included as default(0), but it is possible to set it(4) if required.</p> <p><auth_mode> 0 – SSL Verify None[default] 1 – Manage server authentication 2 – Manage server and client authentication if requested by the remote server</p> <p><cert_format> is an optional parameter. It selects the format of the certificate to be stored via #SSLSECDATA command 0 - DER format 1 - PEM format[default]</p> <p>Note - it is supposed that the module is just powered on and the AT#SSLSECCFG command is entered without <cert_format> parameter, the default format is PEM. In this case the AT#SSLSECCFG? read command doesn't return the setting of the format in order to meet retro compatibility with other families. Now, let's assume that AT#SSLSECCFG command is entered again, but using the <cert_format> parameter for the first time: if the read command is entered, it reports the parameter value just used. If subsequently the <cert_format> is omitted, the AT#SSLSECCFG? read command reports the parameter value entered the last time.</p> <p>Note: Server CAcertificate has to be stored through AT#SSLSECDATA.</p> <p>Note: if secure socket is not enabled using #SLEN only test requests can be made. Read command can be issued if at least a <SSId> is enabled.</p> <p>Note: these values are automatically saved in NVM.</p>
<p>AT#SSLSECCFG?</p>	<p>Read command reports the currently selected parameters in the format:</p>



	#SSLSECCFG: <SSId1>,<CipherSuite>,<auth_mode>[,<cert_format>]
AT#SSLSECCFG=?	Test command returns the range of supported values for all the parameters.

5.1.6.4.27.10. Configure general parameters of a SSL socket - #SSLCFG

#SSLCFG – Configure general parameters of a SSL socket		SELINT 2
AT#SSLCFG=<SSId>,<cid>,<pktSz>,<maxTo>,<defTo>,<txTo>[,<UNUSED_1>[,<UNUSED_2>[,<UNUSED_3>[,<UNUSED_4>]]]]	<p>This command allows configuring SSL connection parameters.</p> <p>Parameters:</p> <p><SSId> - Secure Socket Identifier 1 - Until now SSL block manages only one socket</p> <p><cid> - PDP Context Identifier. 1 - Until now only context one is supported.</p> <p><pktSz> - packet size to be used by the SSL/TCP/IP stack for data sending. 0 - select automatically default value (300). 1..1500 - packet size in bytes.</p> <p><maxTo> - exchange timeout (or socket inactivity timeout); in online mode, if there's no data exchange within this timeout period the connection is closed. 0 - no timeout 1..65535 - timeout value in seconds (default 90 s.)</p> <p><defTo> - Timeout that will be used by default whenever the corresponding parameter of each command is not set. 10...5000 - Timeout in tenth of seconds (default 100).</p> <p><txTo> - data sending timeout; in online mode after this period data are sent also if they're less than max packet size. 0 - no timeout 1..255 - timeout value in hundreds of milliseconds (default 50).</p> <p>Note: if secure socket is not enabled using #SSELEN only test requests can be made. Read command can be issued if at least a <SSId> is enabled.</p> <p>Note: these values are automatically saved in NVM.</p>	
AT#SSLCFG?	<p>Read command reports the currently selected parameters in the format:</p> <p>#SSLCFG: <SSId1>,<cid>,<pktSz>,<maxTo>,<defTo><txTo>,0,0,0,0</p>	
AT#SSLCFG =?	<p>Test command returns the range of supported values for all the parameters.</p> <p>#SSLCFG: (1),(1),(0-1500),(0-65535),(10-5000),(0-255),(0),(0),(0),(0)</p>	



5.1.6.5. FTP AT Commands

5.1.6.5.1. FTP Time-Out - #FTPTO

#FTPTO - FTP Time-Out		SELINT 2
AT#FTPTO=[<tout>]	Set command sets the time-out used when opening either the FTP control channel or the FTP traffic channel. Parameter: <tout> - time-out in 100 ms units 100..5000 - hundreds of ms (factory default is 100) Note: The parameter is not saved in NVM.	
AT#FTPTO?	Read command returns the current FTP operations time-out, in the format: #FTPTO: <tout>	
AT#FTPTO=?	Test command returns the range of supported values for parameter <tout>	

5.1.6.5.2. FTP Open - #FTPOPEN

#FTPOPEN - FTP Open		SELINT 2
AT#FTPOPEN=[<server:port>,<username>,<password>[,<mode>]]	Execution command opens an FTP connection toward the FTP server. Parameters: <server:port> - string type, address and port of FTP server (factory default port 21). <username> - string type, authentication user identification string for FTP. <password> - string type, authentication password for FTP. <mode> 0 - active mode (factory default) 1 - passive mode Note: Before opening an FTP connection either the GSM context must have been activated by AT#SGACT=0,1 or the PDP context #1 must have been activated by AT#SGACT=1,1 or by AT#GPRS=1	
AT#FTPOPEN=?	Test command returns the OK result code.	

5.1.6.5.3. FTP Close - #FTPCLOSE

#FTPCLOSE - FTP Close		SELINT 2
AT#FTPCLOSE	Execution command closes an FTP connection.	
AT#FTPCLOSE=?	Test command returns the OK result code.	

5.1.6.5.4. FTP Config - #FTPCFG



#FTPCFG – description	SELINT 2
AT#FTPCFG=<tout>,<IPPignoring>[,<FTPSEn>]	<p><tout> - time-out in 100 ms units 100..5000 - hundreds of ms (factory default is 100)</p> <p>Set command sets the time-out used when opening either the FTP control channel or the FTP traffic channel.</p> <p>Note: The parameter is not saved in NVM.</p> <p><IPPignoring> 0: No IP Private ignoring. During a FTP passive mode connection client uses the IP address received from server, even if it is a private IPV4 address. 1: IP Private ignoring enabled. During a FTP passive mode connection if the server sends a private IPV4 address the client doesn't consider this and connects with server using the IP address used in AT#FTPOPEN.</p> <p>[,<FTPSEn>] 0 – Disable FTPS security: all FTP commands will perform plain FTP connections. 1 – Enable FTPS security: from now on any FTP session opened through FTP commands will be compliant to FTPS protocol, providing authentication and encrypted communication.</p> <p>Note: in FTPS mode, FTP commands response time is generally bigger than in normal FTP mode. This latency is mainly due to the SSL handshake that has to be done at the opening of the FTP session (#FTPOPEN) and whenever a data exchange is required (#FTPPUT, #FTPGET etcetera).</p> <p>Note: FTP security cannot be enabled if an SSL socket has been activated by means of #SSLD or #SSLFASTD. Moreover, trying to dial an SSL socket when <enable>=1 raises an error.</p> <p>Note: any <enable> change is forbidden during an open FTP connection (with or without security). Furthermore, SSL configuration settings are forbidden during FTPS connections</p>
AT#FTPCFG?	Read command reports the currently selected parameters in the format: #FTPCFG: <tout>,<IPPignoring>,<FTPSEn>
AT+FTPCFG=?	Test command reports the supported range of values for parameter(s) <tout>,<IPPignoring> and <FTPSEn>

5.1.6.5.5. FTP Put - #FTPPUT



#FTPPUT - FTP Put	SELINT 2
AT#FTPPUT= [[<filename>], [<connMode>]]	<p>Execution command, issued during an FTP connection, opens a data connection and starts sending <filename> file to the FTP server.</p> <p>If the data connection succeeds, a CONNECT indication is sent. afterward a NO CARRIER indication is sent when the socket is closed.</p> <p>Note: if we set <connMode> to 1, the data connection is opened and we remain in command mode and we see the result code OK (instead of CONNECT)</p> <p>Parameters: <filename> - string type, name of the file (maximum length 200 characters)</p> <p><connMode> 0 - online mode 1 – command mode</p> <p>Note: use the escape sequence +++ to close the data connection.</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p>
AT#FTPPUT=?	<p>Test command reports the maximum length of <filename> and the supported range of values of <connMode>. The format is:</p> <p>#FTPPUT: <length>, (list of supported <connMode>s) where: <length> - integer type value indicating the maximum length of <filename></p>



5.1.6.5.6. FTP Get - #FTPGET

#FTPGET - FTP Get	SELINT 2
AT#FTPGET= [<filename>]	<p>Execution command, issued during an FTP connection, opens a data connection and starts getting a file from the FTP server. If the data connection succeeds a CONNECT indication is sent. The file is received on the serial port.</p> <p>Parameter: <filename> - file name, string type.</p> <p>Note: The command causes an ERROR result code to be returned in case no FTP connection has been opened yet.</p> <p>Note: Command closure should always be handled by application. In order to avoid download stall situations a timeout should be implemented by the application.</p>
AT#FTPGET=?	Test command returns the OK result code.

5.1.6.5.7. FTP GET in command mode - #FTPGETPKT

#FTPGETPKT - FTP Get in command mode	SELINT 2
AT#FTPGETPKT= <filename> [,<viewMode>]	<p>Execution command, issued during an FTP connection, opens a data connection and starts getting a file from the FTP server while remaining in command mode.</p> <p>The data port is opened and we remain in command mode and we see the result code OK. Retrieval from FTP server of “remote file” is started, but data are only buffered in the module. It's possible to read data afterwards issuing #FTPRECV command</p> <p>Parameters: <filename> - file name, string type. (maximum length: 200 characters). <viewMode> - permit to choose view mode (text format or Hexadecimal) 0 – text format (default) 1 – hexadecimal format</p> <p>Note: The command causes an ERROR result code to be returned in case no FTP connection has been opened yet.</p> <p>Note: Command closure should always be handled by application. In order to avoid download stall situations a timeout should be implemented by the application.</p>
AT#FTPGETPKT?	Read command reports current download state for <filename> with



#FTPGETPKT - FTP Get in command mode		SELINT 2
	<p><viewMode> chosen, in the format:</p> <p>#FTPGETPKT: <remotefile>,<viewMode>,<eof> <eof> 0 = file currently being transferred 1 = complete file has been transferred to FTP client</p>	
AT#FTPGETPKT=?	Test command returns the OK result code.	

5.1.6.5.8. FTP Type - #FTPTYPE

#FTPTYPE - FTP Type		SELINT 2
AT#FTPTYPE=[<type>]	<p>Set command, issued during an FTP connection, sets the file transfer type.</p> <p>Parameter: <type> - file transfer type: 0 - binary 1 - ascii</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p>	
#FTPTYPE?	<p>Read command returns the current file transfer type, in the format:</p> <p>#FTPTYPE: <type></p>	
#FTPTYPE=?	<p>Test command returns the range of available values for parameter <type>:</p> <p>#FTPTYPE: (0,1)</p>	

5.1.6.5.9. FTP Read Message - #FTPMSG

#FTPMSG - FTP Read Message		SELINT 2
AT#FTPMSG	Execution command returns the last response from the server.	
AT#FTPMSG=?	Test command returns the OK result code.	



5.1.6.5.10. FTP Delete - #FTPDELE

#FTPDELE - FTP Delete		SELINT 2
AT#FTPDELE= [<filename>]	<p>Execution command, issued during an FTP connection, deletes a file from the remote working directory.</p> <p>Parameter: <filename> - string type, it's the name of the file to delete.</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p> <p>Note: In case of delayed server response, it is necessary to check if ERROR indication is temporary due to timing out while waiting. In this case #FTPMSG response will result temporary empty. (Checking later #FTPMSG response will match with delayed server response)</p>	
AT#FTPDELE=?	Test command returns the OK result code.	

5.1.6.5.11. FTP Print Working Directory - #FTPPWD

#FTPPWD - FTP Print Working Directory		SELINT 2
AT#FTPPWD	<p>Execution command, issued during an FTP connection, shows the current working directory on FTP server.</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p>	
AT#FTPPWD=?	Test command returns the OK result code.	

5.1.6.5.12. FTP Change Working Directory - #FTPCWD

#FTPCWD - FTP Change Working Directory		SELINT 2
AT#FTPCWD= [<dirname>]	<p>Execution command, issued during an FTP connection, changes the working directory on FTP server.</p> <p>Parameter: <dirname> - string type, it's the name of the new working directory.</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p>	
AT#FTPCWD=?	Test command returns the OK result code.	



5.1.6.5.13. FTP List - #FTPLIST

#FTPLIST - FTP List	SELINT 2
AT#FTPLIST=[<name>]] Execution command, issued during an FTP connection, opens a data connection and starts getting from the server the list of contents of the specified directory or the properties of the specified file. Parameter: <name> - string type, it's the name of the directory or file. Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet. Note: issuing AT#FTPLIST<CR> opens a data connection and starts getting from the server the list of contents of the working directory.	
AT#FTPLIST=?	Test command returns the OK result code.

5.1.6.5.14. Get file size - #FTPFSIZE

#FTPFSIZE – Get file size from FTP server	SELINT 2
AT#FTPFSIZE=<filename> Execution command, issued during an FTP connection, permits to get file size of <filename> file. Note: FTPTYPE=0 command has to be issued before FTPFSIZE command, to set file transfer type to binary mode.	
AT# FTPFSIZE=?	Test command returns the OK result code.

5.1.6.5.15. FTP Append - #FTPAPP

#FTPAPP - FTP Append	SELINT 2
AT#FTPAPP=[<filename>],<connMode>] Execution command, issued during an FTP connection, opens a data connection and append data to existing <filename> file. If the data connection succeeds, a CONNECT indication is sent, afterward a NO CARRIER indication is sent when the socket is closed. Note: if we set <connMode> to 1, the data connection is opened and we remain in command mode and we see the result code OK (instead of CONNECT) Parameter: <filename> - string type, name of the file.	



#FTPAPP - FTP Append		SELINT 2
	<p><connMode> 0 - online mode 1 – command mode</p> <p>Note: use the escape sequence +++ to close the data connection.</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p>	
AT#FTPAPP=?	<p>Test command reports the maximum length of <filename> and the supported range of values of <connMode>. The format is:</p> <p>#FTPAPP: <length>, (list of supported <connMode>s) where: <length> - integer type value indicating the maximum length of <filename></p>	

5.1.6.5.16. Set restart position - # FTPREST

#FTPREST – Set restart position for FTP GET		SELINT 2
AT#FTPREST= <restartposition>	<p>Set command sets the restart position for successive FTPGET (or FTPGETPKT) command.</p> <p>It permits to restart a previously interrupted FTP download from the selected position in byte.</p> <p>Parameter: <restartposition> position in byte of restarting for successive FTPGET (or FTPGETPKT)</p> <p>Note: It's necessary to issue FTPTYPE=0 before successive FTPGET (or FTPGETPKT command) to set binary file transfer type.</p> <p>Note: Setting <restartposition> has effect on successive FTP download. After successive successfully initiated FTPGET(or FTPGETPKT) command <restartposition> is automatically reset.</p> <p>Note: value set for <restartposition> has effect on next data transfer(data port opened by FTPGET or FTPGETPKT). Then <restartposition> value is automatically assigned to 0 for next download.</p>	



#FTPREST – Set restart position for FTP GET		SELINT 2
AT#FTPREST?	Read command returns the current <restartposition> #FTPREST: <restartposition>	
AT#FTPREST=?	Test command returns the OK result code.	

5.1.6.5.17. Receive Data In Command Mode - #FTPRECV

#FTPRECV – Receive Data In Command Mode		SELINT 2
AT#FTPRECV= <blocksize>	<p>Execution command permits the user to transfer at most <blocksize> bytes of remote file, provided that retrieving from the FTP server has been started with a previous #FTPGETPKT command, onto the serial port.</p> <p>This number is limited to the current number of bytes of the remote file which have been transferred from the FTP server.</p> <p>Parameters: < blocksize > - max number of bytes to read 1..3000</p> <p>Note: it's necessary to have previously opened FTP data port and started download and buffering of remote file through #FTPGETPKT command</p> <p>Note: issuing #FTPRECV when there's no FTP data port opened raises an error.</p> <p>Note: data port will stay opened if socket is temporary waiting to receive data(FTPRECV returns 0 and FTPGETPKT gives a EOF 0 indication).</p>	
AT#FTPRECV?	<p>Read command reports the number of bytes currently received from FTP server, in the format:</p> <p>#FTPRECV: <available></p>	
AT#FTPRECV=?	Test command returns the range of supported values for <blocksize> parameter.	



#FTPRECV – Receive Data In Command Mode	SELINT 2
Example	<p>AT#FTPRECV? #FTPRECV: 3000</p> <p>OK</p> <p>Read required part of the buffered data:</p> <p>AT#FTPRECV=400 #FTPRECV: 400</p> <p>Text row number 1 * 11111111111111111111111111111111 *</p> <p>Text row number 2 * 22222222222222222222222222222222 *</p> <p>Text row number 3 * 33333333333333333333333333333333 *</p> <p>Text row number 4 * 44444444444444444444444444444444 *</p> <p>Text row number 5 * 55555555555555555555555555555555 *</p> <p>Text row number 6 * 66666666666666666666666666666666 *</p> <p>Text row number 7 * 77777777777777777777777777777777 *</p> <p>Text row number 8 * 88888888888888888888888888888888</p> <p>OK</p> <p>AT#FTPRECV =200 #FTPRECV: 200 88888 *</p> <p>Text row number 9 * 99999999999999999999999999999999 *</p> <p>Text row number 10 * AAAAAAAAAAAAAAAAAAAAAAAAAAAAAA *</p> <p>Text row number 12 * BBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB *</p> <p>Text row number 13 * CCCCCCCCCCCCCCCCCC</p> <p>OK</p> <p>Note: to check when you have received complete file it's possible to use AT#FTPGETPKT read command:</p> <p>AT#FTPGETPKT? #FTPGETPKT: sample.txt,0,1</p> <p>OK</p> <p>(you will get <eof> set to 1)</p>



5.1.6.5.17.1. FTP Append

#FTPAPP - FTP Append	SELINT 2
AT#FTPAPP= [[<filename>], <connMode>]	<p>Execution command, issued during an FTP connection, opens a data connection and append data to existing <filename> file.</p> <p>If the data connection succeeds, a CONNECT indication is sent, afterward a NO CARRIER indication is sent when the socket is closed.</p> <p>Note: if we set <connMode> to 1, the data connection is opened and we remain in command mode and we see the result code OK (instead of CONNECT)</p> <p>Parameter: <filename> - string type, name of the file.</p> <p><connMode> 0 - online mode 1 – command mode</p> <p>Note: use the escape sequence +++ to close the data connection.</p> <p>Note: The command causes an ERROR result code to be returned if no FTP connection has been opened yet.</p>
AT#FTPAPP=?	<p>Test command reports the supported range of values for parameters <filename> and <connMode></p>



5.1.6.5.17.2. FTPAPPEXT - #FTPAPPEXT

#FTPAPPEXT =	SELINT 2
<p>AT#FTPAPPEXT= <bytestosend>[,< eof >]</p>	<p>This command permits to send data on a FTP data port while the module is in command mode. FTP data port has to be previously opened through #FTPPUT (or #FTPAPP) with <connMode> parameter set to command mode connection.</p> <p>Parameters: < bytestosend > - number of bytes to be sent 1..1500</p> <p><eof> - data port closure 0 – normal sending of data chunk 1 – close data port after sending data chunk</p> <p>The device responds to the command with the prompt <greater_than><space> and waits for the data to send. When <bytestosend> bytes have been sent, operation is automatically completed. If (all or part of the) data are successfully sent, then the response is:</p> <p>#FTPAPPEXT: <sentbytes></p> <p>OK</p> <p>Where <sentbytes> are the number of sent bytes.</p> <p>Note: <sentbytes> could be less than <bytestosend></p> <p>If data sending fails for some reason, an error code is reported.</p>
AT#FTPAPPEXT=?	Test command reports the supported range of values for parameters <bytestosend> and <eof>
Example	<p><i>AT#FTPOPEN="IP",username,password</i> OK</p> <p><i>AT#FTPPUT=<filename>,1 -> the new param 1 means that we open the connection in command mode</i> OK</p>



*// Here data socket will stay opened, but interface will be
//available(command mode)*

AT#FTPAPPEXT=Size

>... write here the binary data. As soon Size byte are written, data are sent and OK is returned

#FTPAPPEXT: <SentBytes>

OK

.....

*// Last #FTPAPPEXT will close the data socket, because
// second(optional) parameter has this meaning:*

AT#FTPAPPEXT=Size,1

>...write here the binary data. As soon Size byte are written, data are sent and OK is returned

#FTPAPPEXT: <SentBytes>

OK

// If the user has to reopen the data port to send another

// (or append to the same) file, he can restart with the

// FTPPUT(or FTPAPP.)

//Then FTPAPPEXT,... to send the data chunks on the //reopened data port.

// Note: if while sending the chunks the data port is closed

// from remote, user will be aware of it because #FTPAPPEXT // will indicate ERROR and cause (available if previously //issued the command AT+CMEE=2) will indicate that

//socket has been closed.

// Also in this case obviously, data port will have to be //reopened with FTPPUT and so on...(same sequence)



5.1.6.6. Enhanced IP Easy Extension AT Commands

5.1.6.6.1. Authentication User ID - #USERID

#USERID - Authentication User ID		SELINT 2
AT#USERID= [<user>]	<p>Set command sets the user identification string to be used during the authentication step.</p> <p>Parameter: <user> - string type, it's the authentication User Id; the max length for this value is the output of Test command, AT#USERID=? (factory default is the empty string "").</p> <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#USERID?	<p>Read command reports the current user identification string, in the format:</p> <p>#USERID: <user></p>	
AT#USERID=?	Test command returns the maximum allowed length of the string parameter <user>.	
Example	<pre>AT#USERID="myName" OK AT#USERID? #USERID: "myName" OK</pre>	

5.1.6.6.2. Authentication Password - #PASSW

#PASSW - Authentication Password		SELINT 2
AT#PASSW= [<pwd>]	<p>Set command sets the user password string to be used during the authentication step.</p> <p>Parameter: <pwd> - string type, it's the authentication password; the max length for this value is the output of Test command, AT#PASSW=? (factory default is the empty string "").</p> <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#PASSW=?	Test command returns the maximum allowed length of the string parameter <pwd>.	
Example	<pre>AT#PASSW="myPassword" OK</pre>	



5.1.6.6.3. Packet Size - #PKTSZ

#PKTSZ - Packet Size		SELINT 2
AT#PKTSZ= [<size>]	<p>Set command sets the default packet size to be used by the TCP/UDP/IP stack for data sending.</p> <p>Parameter: <size> - packet size in bytes 0 - automatically chosen by the device 1..1500 - packet size in bytes (factory default is 300)</p> <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#PKTSZ?	<p>Read command reports the current packet size value.</p> <p>Note: after issuing command AT#PKTSZ=0, the Read command reports the value automatically chosen by the device.</p>	
AT#PKTSZ=?	Test command returns the allowed values for the parameter <size>.	
Example	<pre>AT#PKTSZ=100 OK AT#PKTSZ? #PKTSZ: 100 OK AT#PKTSZ=0 OK AT#PKTSZ? #PKTSZ: 300 ->value automatically chosen by device OK</pre>	

5.1.6.6.4. Data Sending Time-Out - #DSTO

#DSTO -Data Sending Time-Out		SELINT 2
AT#DSTO= [<tout>]	<p>Set command sets the maximum time that the module awaits before sending anyway a packet whose size is less than the default one.</p> <p>Parameter: <tout> - packet sending time-out in 100ms units (factory default is 50) 0 - no time-out, wait forever for packets to be completed before send. 1..255 hundreds of ms</p> <p>Note: In order to avoid low performance issues, it is suggested to set the data sending time-out to a value greater than 5.</p> <p>Note: this time-out applies to data whose size is less than packet size and whose sending would have been delayed for an undefined time until new data to be sent</p>	



#DSTO -Data Sending Time-Out		SELINT 2
	<p>had been received and full packet size reached.</p> <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#DSTO?	Read command reports the current data sending time-out value.	
AT#DSTO=?	Test command returns the allowed values for the parameter <tout>.	
Example	<p>AT#DSTO=10 ->1 sec. time-out</p> <p>OK</p> <p>AT#DSTO?</p> <p>#DSTO: 10</p> <p>OK</p>	

5.1.6.6.5. Socket Inactivity Time-Out - #SKTTO

#SKTTO - Socket Inactivity Time-Out		SELINT 2
AT#SKTTO= [<tout>]	<p>Set command sets the maximum time with no data exchanging on the socket that the module awaits before closing the socket</p> <p>Parameter:</p> <p><tout> - socket inactivity time-out in seconds units</p> <p>0 - no time-out.</p> <p>1..65535 - time-out in sec. units (factory default is 90).</p> <p>Note: this time-out applies when no data is exchanged in the socket for a long time and therefore the socket connection has to be automatically closed.</p> <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#SKTTO?	Read command reports the current socket inactivity time-out value.	
AT#SKTTO=?	Test command returns the allowed values for parameter <tout>.	
Example	<p>AT#SKTTO=30 ->(30 sec. time-out)</p> <p>OK</p> <p>AT#SKTTO?</p> <p>#SKTTO: 30</p> <p>OK</p>	

5.1.6.6.6. Socket Definition - #SKTSET

#SKTSET - Socket Definition		SELINT 2
AT#SKTSET= [<socket type>, <remote port>, <remote addr>, [<closure type>],	<p>Set command sets the socket parameters values.</p> <p>Parameters:</p> <p><socket type> - socket protocol type</p> <p>0 - TCP (factory default)</p>	



#SKTSET - Socket Definition	SELINT 2
[<local port>]]	<p>1 - UDP</p> <p><remote port> - remote host port to be opened 0..65535 - port number (factory default is 3333)</p> <p><remote addr> - address of the remote host, string type. This parameter can be either:</p> <ul style="list-style-type: none"> - any valid IP address in the format: xxx.xxx.xxx.xxx - any host name to be solved with a DNS query in the format: <host name> (factory default is the empty string "") <p><closure type> - socket closure behaviour for TCP when remote host has closed 0 - local host closes immediately (default) 255 - local host closes after an escape sequence (+++) or immediately in case of an abortive disconnect from remote.</p> <p><local port> - local host port to be used on UDP socket 0..65535 - port number</p> <p>Note: <closure type> parameter is valid only for TCP socket type, for UDP sockets shall be left unused.</p> <p>Note: <local port> parameter is valid only for UDP socket type, for TCP sockets shall be left unused.</p> <p>Note: The resolution of the host name is done when opening the socket, therefore if an invalid host name is given to the #SKTSET command, then an error message will be issued.</p> <p>Note: the DNS Query to be successful requests that:</p> <ul style="list-style-type: none"> - the GPRS context 1 is correctly set with +CGDCONT - the authentication parameters are set (#USERID, #PASSW) - the GPRS coverage is enough to permit a connection. <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>
AT#SKTSET?	<p>Read command reports the socket parameters values, in the format:</p> <p>AT#SKTSET: <socket type>,<remote port>,<remote addr>,<closure type>,<local port></p>
AT#SKTSET=?	<p>Test command returns the allowed values for the parameters.</p>
Example	<p>AT#SKTSET=0,1024,"123.255.020.001" OK AT#SKTSET=0,1024,"www.telit.net" OK</p>
Note	<p>Issuing command #QDNS will overwrite <remote addr> setting.</p>



5.1.6.6.7. Query DNS - #QDNS

#QDNS - Query DNS	SELINT 2
AT#QDNS= [<host name>]	<p>Execution command executes a DNS query to solve the host name into an IP address.</p> <p>Parameter: <host name> - host name, string type.</p> <p>If the DNS query is successful then the IP address will be reported in the result code, as follows:</p> <p>#QDNS: <host name>,<IP address></p> <p>where <host name> - string type <IP address> - string type, in the format “xxx.xxx.xxx.xxx”</p> <p>Note: the command has to activate the GPRS context if it was not previously activated. In this case the context is deactivated after the DNS query. It also works with GSM context, but the GSM context has to be activated before.</p>
AT#QDNS=?	Test command returns the OK result code.
Note	This command requires that the authentication parameters are correctly set and that the GPRS network is present (or GSM, if GSM context is used).
Note	Issuing command #QDNS will overwrite <remote addr> setting for command #SKTSET .
Note	This command is available only on the first virtual port of CMUX and works on the PDP context 1 and on the first ConnId (see AT#SCFG)

 


5.1.6.6.8. DNS Response Caching - #CACHEDNS

#CACHEDNS – DNS Response Caching		SELINT 2
AT#CACHEDNS=[<mode>]	<p>Set command enables caching a mapping of domain names to IP addresses, as does a resolver library.</p> <p>Parameter: <mode> 0 - caching disabled; it cleans the cache too 1 - caching enabled</p> <p>Note: the validity period of each cached entry (i.e. how long a DNS response remains valid) is determined by a value called the Time To Live (TTL), set by the administrator of the DNS server handing out the response.</p> <p>Note: If the cache is full (8 elements) and a new IP address is resolved, an element is deleted from the cache: the one that has not been used for the longest time.</p> <p>Note: it is recommended to clean the cache, if command +CCLK has been issued while the DNS Response Caching was enabled.</p>	
AT#CACHEDNS?	<p>Read command reports whether the DNS Response Caching is currently enabled or not, in the format:</p> <p>#CACHEDNS: <mode></p>	
AT#CACHEDNS=?	<p>Test command returns the currently cached mapping along with the range of available values for parameter <mode>, in the format:</p> <p>#CACHEDNS: [<hostn/>,<IPaddr/>,[...,<hostnn>,<IPaddrn>,]](0,1)</p> <p>where: <hostnn> - hostname, string type <IPaddrn> - IP address, string type, in the format “xxx.xxx.xxx.xxx”</p>	



#DNS – Manual DNS Selection	SELINT 2
AT#DNS=<cid>, <primary>, <secondary>	<p>Set command allows to manually set primary and secondary DNS servers either for a PDP context defined by +CGDCONT or for a GSM context defined by #GSMCONT</p> <p>Parameters:</p> <p><cid> - context identifier 0 - specifies the GSM context 1..5 - numeric parameter which specifies a particular PDP context definition</p> <p><primary> - manual primary DNS server, string type, in the format “xxx.xxx.xxx.xxx” used for the specified cid; we’re using this value instead of the primary DNS server come from the network (default is “0.0.0.0”)</p> <p><secondary> - manual secondary DNS server, string type, in the format “xxx.xxx.xxx.xxx” used for the specified cid; we’re using this value instead of the secondary DNS server come from the network (default is “0.0.0.0”).</p> <p>Note: if <primary> is ”0.0.0.0” and <secondary> is not “0.0.0.0”, then issuing AT#DNS=... raises an error.</p> <p>Note: if <primary> is ”0.0.0.0” we’re using the primary DNS server come from the network as consequence of a context activation.</p> <p>Note: if <primary> is not ”0.0.0.0” and <secondary> is “0.0.0.0”, then we’re using only the manual primary DNS server.</p> <p>Note: the context identified by <cid> has to be previously defined, elsewhere issuing AT#DNS=... raises an error.</p> <p>Note: the context identified by <cid> has to be not activated yet, elsewhere issuing AT#DNS=... raises an error.</p>
AT#DNS?	<p>Read command returns the manual DNS servers set either for every defined PDP context and for the single GSM context (only if defined), in the format:</p> <p>[#DNS: <cid>,<primary>,<secondary>[<CR><LF> #DNS: <cid>,<primary>,<secondary>]]</p>
AT#DNS=?	<p>Test command reports the supported range of values for the <cid> parameter. only, in the format:</p> <p>#DNS: (0-5),,</p>



5.1.6.6.10. Socket TCP Connection Time-Out - #SKTCT

#SKTCT - Socket TCP Connection Time-Out		SELINT 2
AT#SKTCT= [<tout>]	<p>Set command sets the TCP connection time-out for the first CONNECT answer from the TCP peer to be received.</p> <p>Parameter: <tout> - TCP first CONNECT answer time-out in 100ms units 10..1200 - hundreds of ms (factory default value is 600).</p> <p>Note: this time-out applies only to the time that the TCP stack waits for the CONNECT answer to its connection request.</p> <p>Note: The time for activate the GPRS and resolving the name with the DNS query (if the peer was specified by name and not by address) is not counted in this time-out.</p> <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#SKTCT?	Read command reports the current TCP connection time-out.	
AT#SKTCT=?	Test command returns the allowed values for parameter <tout>.	
Example	AT#SKTCT=600 OK <i>socket first connection answer time-out has been set to 60 s.</i>	

5.1.6.6.11. Socket Parameters Save - #SKTSAV

#SKTSAV - Socket Parameters Save		SELINT 2
AT#SKTSAV	<p>Execution command stores the current socket parameters in the NVM of the device.</p> <p>The socket parameters to store are:</p> <ul style="list-style-type: none"> - User ID - Password - Packet Size - Socket Inactivity Time-Out - Data Sending Time-Out - Socket Type (UDP/TCP) - Remote Port - Remote Address - TCP Connection Time-Out <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>	
AT#SKTSAV=?	Test command returns the OK result code.	
Example	AT#SKTSAV OK	



#SKTSAV - Socket Parameters Save	SELINT 2
	<i>socket parameters have been saved in NVM</i>
Note	If some parameters have not been previously specified then a default value will be stored.

5.1.6.6.12. Socket Parameters Reset - #SKTRST

#SKTRST - Socket Parameters Reset	SELINT 2
AT#SKTRST	<p>Execution command resets the socket parameters to the “factory default” configuration and stores them in the NVM of the device.</p> <p>The socket parameters to reset are:</p> <ul style="list-style-type: none"> - User ID - Password - Packet Size - Socket Inactivity Time-Out - Data Sending Time-Out - Socket Type - Remote Port - Remote Address - TCP Connection Time-Out
AT#SKTRST=?	Test command returns the OK result code.
Example	AT#SKTRST OK <i>socket parameters have been reset</i>

5.1.6.6.13. GPRS Context Activation - #GPRS

#GPRS - GPRS Context Activation	SELINT 2
AT#GPRS= [<mode>]	<p>Execution command deactivates/activates the PDP context #1, eventually proceeding with the authentication with the parameters given with #PASSW and #USERID.</p> <p>Parameter:</p> <p><mode> - PDP context activation mode</p> <ul style="list-style-type: none"> 0 - PDP context #1 deactivation request 1 - PDP context #1 activation request <p>In the case that the PDP context #1 has been activated, the result code OK is preceded by the intermediate result code:</p> <p>+IP: <ip_address_obtained></p> <p>reporting the local IP address obtained from the network.</p>



#GPRS - GPRS Context Activation		SELINT 2
	<p>Note: at least a socket identifier needs to be associated with PDP context #1 in order to every #GPRS action be effective; by default the PDP context #1 is associated with socket identifiers 1, 2 and 3, but it is possible to modify these associations through #SCFG. Trying to issue a #GPRS action when no socket identifier is associated with PDP context #1 raises an error.</p> <p>Note: if the PDP context #1 has been activated issuing AT#GPRS=1, then</p> <ul style="list-style-type: none">if you request to deactivate the PDP context #1 during a call issuing AT#GPRS=0 and then, after the call termination, you want to activate the PDP context #1 again through #GPRS, you need to issue the following sequence of three commands <p>AT#GPRS=1 OK AT#GPRS=0 OK AT#GPRS=1 OK</p> <p>Note: this command is not allowed if GSM context has been activated (see AT#SGACT=0,1).</p>	
AT#GPRS?	<p>Read command reports the current status of the PDP context #1, in the format:</p> <p>#GPRS: <status></p> <p>where:</p> <p><status></p> <ul style="list-style-type: none">0 - PDP context #1 deactivated1 - PDP context #1 activated2 - PDP context #1 activation pending.	
AT#GPRS=?	Test command returns the allowed values for parameter <mode> .	
Example	<p>AT#GPRS=1 +IP: 129.137.1.1 OK <i>Now PDP Context #1 has been activated and our IP is 129.137.1.1</i></p> <p>AT#GPRS=0 OK <i>Now PDP Context #1 has been deactivated, IP is lost.</i></p>	
Note	It is strongly recommended to use the same command (e.g. #GPRS) to activate the context, deactivate it and interrogate about its status.	



5.1.6.6.14. Socket Dial - #SKTD

#SKTD - Socket Dial	SELINT 2
AT#SKTD= [<socket type>, <remote port>, <remote addr>, [<closure type>], [<local port>]]	<p>Set command opens the socket towards the peer specified in the parameters.</p> <p>Parameters:</p> <p><socket type> - socket protocol type 0 - TCP (factory default) 1 - UDP</p> <p><remote port> - remote host port to be opened 1..65535 - port number</p> <p><remote addr> - address of the remote host, string type. This parameter can be either:</p> <ul style="list-style-type: none"> - any valid IP address in the format: xxx.xxx.xxx.xxx - any host name to be solved with a DNS query in the format: <host name> (factory default is the empty string "") <p><closure type> - socket closure behaviour for TCP when remote host has closed 0 - local host closes immediately when remote host has closed (default) 255 - local host closes after an escape sequence (+++) or immediately in case of an abortive disconnect from remote.</p> <p><local port> - local host port to be used on UDP socket 1..65535 - port number</p> <p>Note: <closure type> parameter is valid only for TCP socket type, for UDP sockets shall be left unused.</p> <p>Note: <local port> parameter is valid only for UDP socket type, for TCP sockets shall be left unused.</p> <p>Note: the resolution of the host name is done when opening the socket, therefore if an invalid host name is given to the #SKTD command, then an error message will be issued.</p> <p>Note: the command to be successful requests that:</p> <ul style="list-style-type: none"> - the GPRS context 1 is correctly set with +CGDCONT - the authentication parameters are set (#USERID, #PASSW) the GPRS coverage is enough to permit a connection - the GPRS has been activated with AT#GPRS=1 <p>Note: this command is not allowed for sockets associated to a GSM context (see #SCFG).</p>
AT#SKTD?	<p>Read command reports the socket dial parameters values, in the format:</p> <p>AT#SKTD: <socket type>,<remote port>,<remote addr>,<closure type>,<local port></p>
AT#SKTD=?	Test command returns the allowed values for the parameters.



#SKTD - Socket Dial	SELINT 2
Example	<p>AT#SKTD=0,1024,"123.255.020.001",255 CONNECT</p> <p>AT#SKTD=1,1024,"123.255.020.001",,1025 CONNECT</p> <p><i>In this way my local port 1025 is opened to the remote port 1024</i></p> <p>AT#SKTD=0,1024,"www.telit.net", 255 CONNECT</p>

5.1.6.6.15. Socket Listen - #SKTL

#SKTL - Socket Listen	SELINT 2
<p>AT#SKTL =[<mode>, <socket type>, <input port>, <closure type>]]</p>	<p>Execution command opens/closes the socket listening for connection requests.</p> <p>Parameters:</p> <p><mode> - socket mode 0 - closes socket listening 1 - starts socket listening</p> <p><socket type> - socket protocol type 0 - TCP (default) 1 - UDP</p> <p><input port> - local host input port to be listened 1..65535 - port number</p> <p><closure type> - socket closure behaviour for TCP when remote host has closed 0 - local host closes immediately when remote host has closed (default) 255 - local host closes after an escape sequence (+++) or immediately in case of an abortive disconnect from remote.</p> <p>Command returns the OK result code if successful.</p> <p>Note: the command to be successful requests that:</p> <ul style="list-style-type: none"> - the GPRS context 1 is correctly set with +CGDCONT - the authentication parameters are set (#USERID, #PASSW) - the GPRS coverage is enough to permit a connection - the GPRS has been activated with AT#GPRS=1 <p>When a connection request comes on the input port, if the sender is not filtered by the internal firewall (see command #FRWL), an unsolicited code is reported:</p> <p>+CONN FROM: <remote addr></p> <p>Where: <remote addr> - host address of the remote machine that contacted the device.</p> <p>When the connection is established the CONNECT indication is given and the</p>



#SKTL - Socket Listen	SELINT 2
	<p>modem goes into data transfer mode.</p> <p>On connection close or when context is closed with #GPRS=0 the socket is closed and no listen is anymore active.</p> <p>If the context is closed by the network while in listening, the socket is closed, no listen is anymore active and an unsolicited code is reported:</p> <p>#SKTL: ABORTED</p> <p>Note: when closing the listening socket <input port> is a don't care parameter</p>
AT#SKTL?	<p>Read command returns the current socket listening status and the last settings of parameters <input port> and <closure type>, in the format:</p> <p>#SKTL: <status>,<socket type>,<input port>,<closure type></p> <p>Where</p> <p><status> - socket listening status</p> <p>0 - socket not listening</p> <p>1 - socket listening</p>
AT#SKTL=?	<p>Test command returns the allowed values for parameters <mode>, <socket type>, <input port> and <closure type>.</p>
Example	<p><i>Activate GPRS</i></p> <p>AT#GPRS=1</p> <p>+IP: ###.###.###.###</p> <p>OK</p> <p><i>Start TCP listening</i></p> <p>AT#SKTL=1,0,1024</p> <p>OK</p> <p>or</p> <p>AT#SKTL=1,0,1024,255</p> <p>OK</p> <p><i>Receive TCP connection requests</i></p> <p>+CONN FROM: 192.164.2.1</p> <p>CONNECT</p> <p><i>exchange data with the remote host</i></p> <p><i>send escape sequence</i></p> <p>+++</p> <p>NO CARRIER</p> <p><i>Now listen is not anymore active</i></p> <p><i>to stop listening</i></p> <p>AT#SKTL=0,0,1024, 255</p> <p>OK</p>



#SKTL - Socket Listen	SELINT 2
Note	The main difference between this command and #SKTD is that #SKTL does not contact any peer, nor does any interaction with the GPRS context status, leaving it ON or OFF according to the #GPRS setting, therefore when the connection made with #SKTL is closed the context (and hence the local IP address) is maintained.

5.1.6.6.16. Socket Listen Ring Indicator - #E2SLRI

#E2SLRI - Socket Listen Ring Indicator	SELINT 2
AT#E2SLRI=[<n>]	Set command enables/disables the Ring Indicator pin response to a Socket Listen connect and, if enabled, the duration of the negative going pulse generated on receipt of connect. Parameter: <n> - RI enabling 0 - RI disabled for Socket Listen connect (factory default) 50..1150 - RI enabled for Socket Listen connect; a negative going pulse is generated on receipt of connect and <n> is the duration in ms of this pulse.
AT#E2SLRI?	Read command reports whether the Ring Indicator pin response to a Socket Listen connect is currently enabled or not, in the format: #E2SLRI: <n>
AT#E2SLRI=?	Test command returns the allowed values for parameter <status>.

5.1.6.6.17. Firewall Setup - #FRWL

 
#FRWL - Firewall Setup	SELINT 2
AT#FRWL=[<action>, <ip_address>, <net mask>]	Execution command controls the internal firewall settings. Parameters: <action> - command action 0 - remove selected chain 1 - add an ACCEPT chain 2 - remove all chains (DROP everything); <ip_addr> and <net_mask> has no meaning in this case. <ip_addr> - remote address to be added into the ACCEPT chain; string type, it can be any valid IP address in the format: xxx.xxx.xxx.xxx <net_mask> - mask to be applied on the <ip_addr>; string type, it can be any valid IP address mask in the format: xxx.xxx.xxx.xxx Command returns OK result code if successful. Note: the firewall applies for incoming (listening) connections only. Firewall general policy is DROP , therefore all packets that are not included into an ACCEPT chain rule will be silently discarded.



#FRWL - Firewall Setup		SELINT 2
	<p>When a packet comes from the IP address incoming_IP, the firewall chain rules will be scanned for matching with the following criteria:</p> <p>incoming_IP & <net_mask> = <ip_addr> & <net_mask></p> <p>If criteria is matched, then the packet is accepted and the rule scan is finished; if criteria is not matched for any chain the packet is silently dropped.</p>	
AT#FRWL?	<p>Read command reports the list of all ACCEPT chain rules registered in the Firewall settings in the format:</p> <p>#FRWL: <ip_addr>,<net_mask> #FRWL: <ip_addr>,<net_mask> OK</p>	
AT#FRWL=?	Test command returns the allowed values for parameter <action> .	
Example	<p><i>Let assume we want to accept connections only from our devices which are on the IP addresses ranging from 197.158.1.1 to 197.158.255.255</i></p> <p><i>We need to add the following chain to the firewall:</i> AT#FRWL=1,"197.158.1.1","255.255.0.0" OK</p>	
Note	<p>For outgoing connections made with #SKTD the remote host is dynamically inserted into the ACCEPT chain for all the connection duration. Therefore the #FRWL command shall be used only for defining the #SKTL behaviour, deciding which hosts are allowed to connect to the local device.</p> <p>Rules are not saved in NVM, at startup the rules list will be empty.</p>	



#GDATAVOL - GPRS Data Volume	SELINT 2
<p>AT#GDATAVOL= [<mode>]</p>	<p>Execution command reports, for every active PDP context, the amount of data the last GPRS session (and the last GSM session, if GSM context is active) received and transmitted, or it will report the total amount of data received and transmitted during all past GPRS (and GSM) sessions, since last reset.</p> <p>Parameter: <mode></p> <p>0 - it resets the GPRS data counter for the all the available PDP contexts (1-5) and GSM data counter for GSM context 0</p> <p>1 - it reports the last GPRS session data counter for the all the set PDP contexts (i.e. all the PDP contexts with APN parameter set using +CGDCONT) (and the last GSM session data counter for the GSM context, if set through #GSMCONT), in the format:</p> <p>#GDATAVOL: <cidn>,<totn>,<sentn>,<receivedn>[<CR><LF> #GDATAVOL: <cidm>,<totm>,<sentm>,<receivedm>[...]]</p> <p>where:</p> <p><cidn> - PDP context identifier</p> <p>0 - specifies the GSM context</p> <p>1..5 - numeric parameter which specifies a particular PDP context definition</p> <p><totn> - number of bytes either received or transmitted in the last GPRS (or GSM) session for <cidn> PDP context;</p> <p><sentn> - number of bytes transmitted in the last GPRS (or GSM) session for <cidn> PDP context;</p> <p><receivedn> - number of bytes received in the last GPRS (or GSM) session for <cidn> PDP context;</p> <p>2 - it reports the total GPRS data counter, since last reset, for the all the set PDP contexts (i.e. all the PDP context with APN parameter set using +CGDCONT) and the total GSM data counter for the GSM context, if set through #GSMCONT, in the format:</p> <p>#GDATAVOL: <cidn>,<totn>,<sentn>,<receivedn>[<CR><LF> #GDATAVOL: <cidm>,<totm>,<sentm>,<receivedm>[...]]</p> <p>where:</p> <p><cidn> - PDP context identifier</p> <p>0 - specifies the GSM context</p> <p>1..5 - numeric parameter which specifies a particular PDP context definition</p> <p><totn> - number of bytes either received or transmitted, in every GPRS (or GSM) session since last reset, for <cidn> PDP context;</p> <p><sentn> - number of bytes transmitted, in every GPRS (or GSM) session since last reset, for <cidn> PDP context;</p> <p><receivedn> - number of bytes received, in every GPRS (or GSM) session</p>



#GDATAVOL - GPRS Data Volume		SELINT 2
	<p>since last reset, for <cidn> PDP context;</p> <p>Note: last GPRS and GSM session counters are not saved in NVM so they are loosen at power off.</p> <p>Note: total GPRS and GSM session counters are saved on NVM.</p>	
AT#GDATAVOL=?	Test command returns the range of supported values for parameter <mode>.	

5.1.6.6.19. ICMP Ping Support - #ICMP

#ICMP - ICMP Ping Support		SELINT 2
AT#ICMP=<mode>	<p>Set command enables/disables the ICMP Ping support.</p> <p>Parameter: <mode></p> <ul style="list-style-type: none"> 0 - disable ICMP Ping support (default) 1 - enable firewalled ICMP Ping support: the module is sending a proper ECHO_REPLY only to a subset of IP Addresses pinging it; this subset of IP Addresses has been previously specified through #FRWL (see) 2 - enable free ICMP Ping support; the module is sending a proper ECHO_REPLY to every IP Address pinging it. 	
AT#ICMP?	<p>Read command returns whether the ICMP Ping support is currently enabled or not, in the format:</p> <p>#ICMP: <mode></p>	
AT#ICMP=?	Test command reports the supported range of values for the <mode> parameter.	



5.1.6.6.20. PING request - #PING

#PING – Send PING request	
AT#PING= <IPaddr>[,<retryNum>[,<len>[,<timeout>[,<ttl>]]]]	<p>This command is used to send Ping Echo Request messages and to receive the corresponding Echo Reply.</p> <p>Parameters:</p> <p><IPaddr> - address of the remote host, string type. This parameter can be either:</p> <ul style="list-style-type: none"> - any valid IP address in the format: “xxx.xxx.xxx.xxx” - any host name to be solved with a DNS query <p><retryNum> - the number of Ping Echo Request to send 1-64 (default 4)</p> <p><len> - the lenght of Ping Echo Request message 32-1460 (default 32)</p> <p><timeout> - the timeout, in 100 ms units, waiting a single Echo Reply 1-600 (default 50)</p> <p><ttl> - time to live 1-255 (default 128)</p> <p>Once the single Echo Reply message is receive a string like that is displayed:</p> <p>#PING: <replyId>,<Ip Address>,<replyTime>,<ttl></p> <p>Where:</p> <p><replyId> - Echo Reply number</p> <p><Ip Address> - IP address of the remote host</p> <p><replyTime> - time, in 100 ms units, required to receive the response</p> <p><ttl> - time to live of the Echo Reply message</p> <p>Note1: when the Echo Request timeout expires (no reply received on time) the response will contain <replyTime> set to 600 and <ttl> set to 255</p> <p>Note2: To receive the corresponding Echo Reply is not required to enable separately AT#ICMP</p> <p>Note3: Before send PING Request the GPRS context must have been activated by AT#SGACT=1,1</p>
AT#PING=?	Test command reports the supported range of values for the #PING command parameters.
Example	AT#PING="www.telit.com" #PING: 01,"81.201.117.177",6,50 #PING: 02,"81.201.117.177",5,50 #PING: 03,"81.201.117.177",6,50 #PING: 04,"81.201.117.177",5,50 OK



5.1.6.6.21. DNS from Network - #NWDNS

#NWDNS – DNS from Network	SELINT 2
<p>AT#NWDNS= [<cid>[,<cid> [,...]]]</p>	<p>Execution command returns either the primary and secondary DNS addresses for the GSM context (if specified) and/or a list of primary and secondary DNS addresses for the specified PDP context identifiers</p> <p>Parameters:</p> <p><cid> - context identifier 0 - specifies the GSM context (see +GSMCONT). 1..5 - numeric parameter which specifies a particular PDP context definition (see +CGDCONT command).</p> <p>Note: if no <cid> is specified, the DNS addresses for all defined contexts are returned.</p> <p>Note: issuing the command with more than 6 parameters raises an error.</p> <p>Note: the command returns only one row of information for every specified <cid>, even if the same <cid> is present more than once.</p> <p>The command returns a row of information for every specified <cid> whose context has been already defined. No row is returned for a <cid> whose context has not been defined yet. Response format is:</p> <p>#NWDNS: <cid>,<PDNSaddress>,<SDNSaddress>[<CR><LF> #NWDNS: <cid>,<PDNSaddress>,<SDNSaddress> [...]]</p> <p>where:</p> <p><cid> - context identifier, as before <PDNSaddress>,<SDNSaddress> - primary and secondary DNS addresses set through AT#DNS command. If not set, they are the primary and secondary DNS addresses assigned during the PDP(or GSM) context activation.</p>
<p>AT#NWDNS=?</p>	<p>Test command returns a list of defined <cid>s.</p>



5.1.6.7. SMS AT Commands

5.1.6.7.1. Move Short Message to other memory - #SMSMOVE

#SMSMOVE – Move Short Message to other memory		SELINT 2
AT#SMSMOVE= <index>	<p>Execution command moves selected Short Message from current memory to destination memory.</p> <p>Parameter: <index> - message index in the memory selected by +CPMS command. It can have values form 1 to N, where N depends on the available space (see +CPMS)</p> <p>Note: if the destination memory is full, an error is returned.</p>	
AT#SMSMOVE?	<p>Read command reports the message storage status of the current memory and the destination memory in the format:</p> <p>#SMSMOVE: <curr_mem>,<used_curr_mem>,<total_curr_mem>,<dest_mem>,<used_dest_mem>,<total_dest_mem></p> <p>Where:</p> <ul style="list-style-type: none"> - <curr_mem> is the current memory, selected by +CPMS command. It can assume the values “SM” or “ME” - <used_curr_mem> is the number of SMs stored in the current memory - <total_curr_mem> is the max number of SMs that the current memory can contain - <dest_mem> is the destination memory. It can assume the values “SM” or “ME” - <used_dest_mem> is the number of SMs stored in the destination memory - <total_dest_mem> is the max number of SMs that the destination memory can contain 	
AT#SMSMOVE=?	Test command reports the supported values for parameter <index>	
Example	<p>AT#SMSMOVE? #SMSMOVE: "ME",3,100,"SM",0,50</p> <p>OK //the current memory is ME where 3 SMs are stored; the destination memory is SIM that is empty</p> <p>AT+CMGL=ALL +CMGL: 1,"STO UNSENT","32XXXXXXXX","", test 1 +CMGL: 2,"STO UNSENT","32XXXXXXXX","", test 2 +CMGL: 3,"STO UNSENT","32XXXXXXXX","",</p>	



#SMSMOVE – Move Short Message to other memory		SELINT 2
	<pre>test 3 OK //list the SMs to discover the memory index AT#SMSMOVE=1 OK //move the SM in the first position of ME to SIM AT#SMSMOVE? #SMSMOVE: "ME",2,100,"SM",1,50 OK //now we have 2 SMs in ME and 1 in SIM</pre>	

5.1.6.7.2. SMS Commnads Operation Mode - #SMSMODE

#SMSMODE - SMS Commands Operation Mode		SELINT 2
AT#SMSMODE= <mode>	<p>Set command enables/disables the check for presence of SMS Service Centre Address in the FDN phonebook</p> <p>Parameter: <mode></p> <ul style="list-style-type: none"> 1 - disables the check for presence of SMS SCA in FDN 2 – enables the check for presence of SMS SCA in the FDN phonebook when FDN are enabled; if the SMS SCA is not present, then a SMS cannot be sent (default) 	
AT#SMSMODE?	<p>Read command reports whether the check of SMS SCA in FDN is enabled or not, in the format:</p> <p>#SMSMODE: <mode> (<mode> described above)</p>	
AT#SMSMODE=?	Test command reports the supported range of values for parameter <mode>	



5.1.6.8. E-mail Management AT Commands

5.1.6.8.1. E-mail SMTP Server - #ESMTP

#ESMTP - E-mail SMTP Server		SELINT 2
AT#ESMTP= [<smtp>]	Set command sets the SMTP server address, used for E-mail sending. SMTP server can be specified as IP address or as nick name. Parameter: <smtp> - SMTP server address, string type. This parameter can be either: <ul style="list-style-type: none"> - any valid IP address in the format: xxx.xxx.xxx.xxx - any host name to be solved with a DNS query in the format: <host name> (factory default is the empty string "") Note: the max length for <smtp> is the output of Test command.	
AT#ESMTP?	Read Command reports the current SMTP server address, in the format: #ESMTP: <smtp>	
AT#ESMTP=?	Test command returns the max length for the parameter <smtp>.	
Example	AT#ESMTP="smtp.mydomain.com" OK	
Note	The SMTP server used shall be inside the APN space (the smtp server provided by the network operator) or it must allow the Relay, otherwise it will refuse to send the e-mail.	

5.1.6.8.2. E-mail Sender Address - #EADDR

#EADDR - E-mail Sender Address		SELINT 2
AT#EADDR= [<e-addr>]	Set command sets the sender address string to be used for sending the e-mail. Parameter: <e-addr> - sender address, string type. <ul style="list-style-type: none"> - any string value up to max length reported in the Test command. (factory default is the empty string "") 	
AT#EADDR?	Read command reports the current sender address, in the format: #EADDR: <e-addr>	
AT#EADDR=?	Test command returns the maximum allowed length of the string parameter <e-addr>.	
Example	AT#EADDR="me@email.box.com" OK AT#EADDR? #EADDR: "me@email.box.com" OK	



5.1.6.8.3. E-mail Authentication User Name - #EUSER

#EUSER - E-mail Authentication User Name		SELINT 2
AT#EUSER= [<e-user>]	Set command sets the user identification string to be used during the authentication step of the SMTP. Parameter: <e-user> - e-mail authentication User ID, string type. - any string value up to max length reported in the Test command. (factory default is the empty string "") Note: if no authentication is required then the <e-user> parameter shall be empty "".	
AT#EUSER?	Read command reports the current user identification string, in the format: #EUSER: <e-user>	
AT#EUSER=?	Test command returns the maximum allowed length of the string parameter <e-user>.	
Example	AT#EUSER="myE-Name" OK AT#EUSER? #EUSER: "myE-Name" OK	
Note	It is a different user field than the one used for GPRS authentication (see #USERID).	

5.1.6.8.4. E-mail Authentication Password - #EPASSW

#EPASSW - E-mail Authentication Password		SELINT 2
AT#EPASSW= [<e-pwd>]	Set command sets the password string to be used during the authentication step of the SMTP. Parameter: <e-pwd> - e-mail authentication password, string type. - any string value up to max length reported in the Test command. (factory default is the empty string "") Note: if no authentication is required then the <e-pwd> parameter shall be empty "".	
AT#EPASSW=?	Test command returns the maximum allowed length of the string parameter <e-pwd>.	
Example	AT#EPASSW="myPassword" OK	
Note	It is a different password field than the one used for GPRS authentication (see #PASSW).	



5.1.6.8.5. E-mail Sending - #EMAILD

#EMAILD - E-mail Sending	SELINT 2
AT#EMAILD=[<da>, <subj>] 	<p>Execution command sends an e-mail message if GPRS context has already been activated by either AT#SGACT=1,1 or AT#GPRS=1.</p> <p>It is also possible to send an e-mail on the GSM context, if it has already been activated by AT#SGACT=0,1.</p> <p>Parameters: <da> - destination address, string type. (maximum length 100 characters) <subj> - subject of the message, string type. (maximum length 100 characters)</p> <p>The device responds to the command with the prompt '>' and awaits for the message body text.</p> <p>To complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex).</p> <p>If e-mail message is successfully sent, then the response is OK. If message sending fails for some reason, an error code is reported.</p> <p>Note: if the length of one of the string type parameters exceeds the maximum length, then the string is truncated.</p> <p>Note: Care must be taken to ensure that during the command execution, no other commands are issued.</p> <p>To avoid malfunctions is suggested to wait for the OK or ERROR / +CMS ERROR:<err> response before issuing further commands.</p> <p>Note: maximum length for message body is 1500 trying to send more data will cause the surplus to be discarded and lost.</p>
AT#EMAILD=?	Test command returns the OK result code.
Example	AT#EMAILD="me@myaddress.com","subject of the mail" >message body... this is the text of the mail message... CTRL-Z ..wait.. OK <i>Message has been sent.</i>



5.1.6.8.6. E-mail Parameters Save - #ESAV

#ESAV - E-mail Parameters Save		SELINT 2
AT#ESAV	Execution command stores the e-mail parameters in the NVM of the device. The e-mail parameters to store are: - E-mail User Name - E-mail Password - E-mail Sender Address - E-mail SMTP server	
AT#ESAV=?	Test command returns the OK result code.	
Note	If some parameters have not been previously specified then a default value will be taken.	

5.1.6.8.7. E-mail Parameters Reset - #ERST

#ERST - E-mail Parameters Reset		SELINT 2
AT#ERST	Execution command resets the e-mail parameters to the “factory default” configuration and stores them in the NVM of the device. The e-mail parameters to reset are: - E-mail User Name - E-mail Password - E-mail Sender Address - E-mail SMTP server	
AT#ERST=?	Test command returns the OK result code.	

5.1.6.8.8. SMTP Read Message - #EMAILMSG

#EMAILMSG - SMTP Read Message		SELINT 2
AT#EMAILMSG	Execution command returns the last response from SMTP server.	
AT#EMAILMSG=?	Test command returns the OK result code.	

5.1.6.8.9. Send mail with attachment - #SMTPCL

#SMTPCL – send mail with attachment		SELINT 2
AT#SMTPCL= <da>,<subj>,<att> [,<filename>,<encod>]	<p>This command permits to send an email with different types of attachments if GPRS context has already been activated (#SGACT or #GPRS).</p> <p>After sending message body text (as with #EMAILD), the command switch to online mode if attachment has to be sent. While in online mode data received on the serial port are transmitted on the SMTP socket as MIME attachment. The escape sequence has to be sent to close the SMTP connection.</p>	



	<p>Encoding of data received on the serial port is performed if required (binary data), before transmission on the SMTP socket.</p> <p>Parameters:</p> <p><da> - destination address, string type. (maximum length 100 characters)</p> <p><subj> - subject of the message, string type. (maximum length 100 characters)</p> <p><att> - attached file flag 0 – no attachment 1 – attach a txt file 2 – attach a binary file(jpg,bin,pdf,...)</p> <p><filename> - attached file name (maximum length 50 characters)</p> <p><encod> -Content-Transfer-Encoding used for attachment 0 – “7bit” means data all represented as short lines of US-ASCII data 1 – “base64” designed to represent arbitrary sequences of octets in a form that need not be humanly readable</p> <p>Note: if no attachment (<att> 0) has to be sent, the behavior is the same as with #EMAILD.</p> <p>OK after CTRL-Z is returned(if connection was successful), the switch to online mode is not performed.</p> <p>Note:</p> <p>If a txt file (<att>=1) is attached, only <encod>0(“7bit”) is possible. If a binary file (<att>=2) is attached, only <encod>1(“base64”) is possible.</p> <p>Note: if <att>=0 and <filename> is present and not empty, the attachment won't be considered</p> <p>Note: if <att> 1 or 2 and <filename> is not present, command will return an ERROR</p>
AT#SMTPCL=?	<p>Test command reports the supported range of values for parameters <da>,<subj>,<att>[,<filename>,<encod>]</p>
Examples	<p>at#smtpcl="me@myaddress.com","test1",1,"sample.txt",0 >message body...this is the text of the mail message... Send CTRL-Z CONNECT</p> <p>...data received on the serial port are sent as attachment....</p>



	<p><i>Send escape sequence to close the SMTP connection</i> +++ NO CARRIER</p> <p>at#smtpcl="me@myaddress.com","test2",2,"image.jpg",1 >message body...this is the text of the mail message... <i>Send CTRL-Z</i> CONNECT</p> <p><i>...data received on the serial port are base64-encoded and sent as attachment....</i></p> <p><i>Send escape sequence to close the SMTP connection</i> +++ NO CARRIER</p>
--	---



5.1.6.9. HTTP Client AT Commands

5.1.6.9.1. Configure HTTP Parameters - #HTTPCFG

#HTTPCFG – configure HTTP parameters	SELINT 2
AT#HTTPCFG=<prof_id>[,<server_address>[,<server_port>[,<auth_type>[,<username>[,<password>[,<ssl_enabled>[,<timeout>[,<cid>]]]]]]]]	<p>This command sets the parameters needed to the HTTP connection</p> <p>Parameters:</p> <p><prof_id> - Numeric parameter indicating the profile identifier. Range: 0-2</p> <p><server_address> - String parameter indicating the IP address of the HTTP server. This parameter can be either:</p> <ul style="list-style-type: none"> - any valid IP address in the format: "xxx.xxx.xxx.xxx" - any host name to be solved with a DNS query <p>Default: "" for first and second profile; "m2mlocate.telit.com" for third profile.</p> <p><server_port> - Numeric parameter indicating the TCP remote port of the HTTP server to connect to. Default: 80 for first and second profile; 9978 for third profile. Range 1...65535.</p> <p><auth_type> - Numeric parameter indicating the HTTP authentication type.</p> <ul style="list-style-type: none"> 0 – no authentication (default) 1 – basic authentication <p><username> - String parameter indicating authentication user identification string for HTTP.</p> <p><password> - String parameter indicating authentication password for HTTP.</p> <p><ssl_enabled> - Numeric parameter indicating if the SSL encryption is enabled.</p> <ul style="list-style-type: none"> 0 – SSL encryption disabled (default) 1 – SSL encryption enabled (not yet implemented and not available for setting) <p><timeout>: Numeric parameter indicating the time interval in seconds to wait for receiving data from HTTP server. Range: (1- 65535). Default: 120.</p> <p><cid> - Numeric parameter indicating the PDP Context Identifier. Range: (1-5). Default: 1</p>



	<p>Note: a special form of the Set command, #HTTPCFG=<prof_id>, causes the values for profile number <prof_id> to reset to default values.</p> <p>Note: if the SSL encryption is enabled, the <cid> parameter has to be set to 1.</p> <p>Note: only one profile can use the SSL encryption.</p> <p>Note: values are automatically saved in NVM.</p>
AT#HTTPCFG?	<p>Read command returns the current settings for each defined profile in the format:</p> <p>#HTTPCFG: <prof_id>,<server_address>,<server_port>,<auth_type>,<username> ,<password>,<ssl_enabled>,<timeout>,<cid><CR><LF>[<CR><LF># HTTPCFG: <prof_id>,<server_address>,<server_port>,<auth_type>,<username> ,<password>,<ssl_enabled>,<timeout>,<cid>]<CR><LF>[...]]</p>
AT#HTTPCFG=?	<p>Test command returns the supported range of parameters <prof_id>, <server_port>, <auth_type>, <ssl_enabled>, <timeout> and <cid> and the maximum length of <server_address>, <username> and <password> parameters in the format:</p> <p># HTTPCFG: (list of supported <prof_id>s),<s_length>,(list of supported <server_port>s), (list of supported <auth_type>s),<u_length>,<p_length>,(list of supported <ssl_enabled>s),(list of supported <timeout>s),(list of supported <cid>s)</p> <p>where:</p> <p><s_length> - integer type value indicating the maximum length of parameter <server_address>.</p> <p><u_length> - integer type value indicating the maximum length of parameter <username>.</p> <p><p_length> - integer type value indicating the maximum length of parameter <password></p>



5.1.6.9.2. Send HTTP GET, HEAD or DELETE request - #HTTPQRY

#HTTPQRY – send HTTP GET, HEAD or DELETE request	SELINT 2
<p>AT#HTTPQRY=<prof_id>,<command>,<resource>[,<extra_header_line>]</p>	<p>Execution command performs a GET, HEAD or DELETE request to HTTP server.</p> <p>Parameters:</p> <p><prof_id> - Numeric parameter indicating the profile identifier. Range: 0-2</p> <p><command>: Numeric parameter indicating the command requested to HTTP server: 0 – GET 1 – HEAD 2 – DELETE</p> <p><resource>: String parameter indicating the HTTP resource (uri), object of the request</p> <p><extra_header_line>: String parameter indicating optional HTTP header line</p> <p>If sending ends successfully, the response is OK; otherwise an error code is reported.</p> <p>Note: the HTTP request header sent with #HTTPQRY always contains the “Connection: close” line, and it can not be removed.</p> <p>When the HTTP server answer is received, then the following URC is put on the serial port:</p> <p>#HTTPRING: <prof_id>,<http_status_code>,<content_type>,<data_size></p> <p>Where:</p> <p><prof_id> is defined as above <http_status_code> is the numeric status code, as received from the server (see RFC 2616) <content_type> is a string reporting the “Content-Type” header line, as received from the server (see RFC 2616) <data_size> is the byte amount of data received from the server. If the server doesn't report the "Content-Length:" header line, the parameter value is 0.</p> <p>Note: if there are no data from server or the server doesn't answer within the time interval specified in <timeout> parameter of #HTTPCFG</p>



	command, then the URC #HTTTPRING <http_status_code> parameter has value 0.
AT#HTTPQRY=?	<p>Test command reports the supported range of values for the parameters <prof_id> and <command> and the maximum length of <resource> parameter in the format:</p> <p>#HTTPQRY: (list of supported <prof_id>s),(list of supported <command>s),<r_length>,<m_length></p> <p>where:</p> <p><r_length> - integer type value indicating the maximum length of parameter <resource>.</p> <p><m_length> - integer type value indicating the maximum length of parameter <extra_header_line>.</p>

5.1.6.9.3. Send HTTP POST or PUT request - #HTTPSND

#HTTPSND – send HTTP POST or PUT request	SELINT 2
AT#HTTPSND=<prof_id>,<command>,<resource>,<data_len>[,<post_param>[,<extra_header_line>]]	<p>Execution command performs a POST or PUT request to HTTP server and starts sending data to the server.</p> <p>The device shall prompt a three character sequence <greater_than><greater_than><greater_than> (IRA 62, 62, 62) after command line is terminated with <CR>; after that the data can be entered from TE, sized <data_len> bytes.</p> <p>Parameters:</p> <p><prof_id> - Numeric parameter indicating the profile identifier. Range: 0-2</p> <p><command>: Numeric parameter indicating the command requested to HTTP server: 0 – POST 1 – PUT</p> <p><resource>: String parameter indicating the HTTP resource (uri), object of the request</p> <p><data_len>: Numeric parameter indicating the data length to input in bytes</p> <p><post_param>: Numeric/string parameter indicating the HTTP Content-type identifier, used only for POST command, optionally followed by colon character (:) and a string that extends with sub-types the identifier:</p>



	<p>“0[:extension]” – “application/x-www-form-urlencoded” with optional extension “1[:extension]” – “text/plain” with optional extension “2[:extension]” – “application/octet-stream” with optional extension “3[:extension]” – “multipart/form-data” with optional extension other content – free string corresponding to other content type and possible sub-types</p> <p><extra_header_line>: String parameter indicating optional HTTP header line</p> <p>If sending ends successfully, the response is OK; otherwise an error code is reported. Note: the HTTP request header sent with #HTTPSND always contains the “Connection: close” line, and it can not be removed.</p> <p>When the HTTP server answer is received, then the following URC is put on the serial port:</p> <p>#HTTTPRING: <prof_id>,<http_status_code>,<content_type>,<data_size></p> <p>Where: <prof_id> is defined as above <http_status_code> is the numeric status code, as received from the server (see RFC 2616) <content_type> is a string reporting the “Content-Type” header line, as received from the server (see RFC 2616) <data_size> is the byte amount of data received from the server. If the server doesn’t report the “Content-Length:” header line, the parameter value is 0.</p> <p>Note: if there are no data from server or the server doesn’t answer within the time interval specified in <timeout> parameter of #HTTPCFG command, then the URC #HTTTPRING <http_status_code> parameter has value 0.</p>
AT#HTTPSND=?	<p>Test command returns the supported range of parameters <prof_id>, <command> and <data_len> and the maximum length of <resource>, <post_param> and <extra_header_line> parameters in the format:</p> <p># HTTPSND: (list of supported <prof_id>s),(list of supported <command>s), <r_length>, (list of supported <data_len>s),<p_length>,<m_length></p> <p>where: <r_length> - integer type value indicating the maximum length of</p>



	<p>parameter <resource>.</p> <p><p_length> - integer type value indicating the maximum length of parameter <post_param>.</p> <p><m_length> - integer type value indicating the maximum length of parameter <extra_header_line></p>
Example	<p><i>Post 100 byte without “Content-type” header</i></p> <p>AT#HTTPSND=0,0,””,100</p> <p>>>></p> <p><i>Post 100 byte with “application/x-www-form-urlencoded”</i></p> <p>AT#HTTPSND=0,0,””,100,0</p> <p>>>></p> <p><i>Post 100 byte with “multipart/form-data” and extension</i></p> <p>AT#HTTPSND=0,0,””,100,”3:boundary=---FormBoundary”</p> <p>>>></p>

5.1.6.9.4. receive HTTP server data - #HTTTPRCV

#HTTTPRCV – receive HTTP server data		SELINT 2
AT#HTTTPRCV=<prof_id>	<p>Execution command permits the user to read data from HTTP server in response to a previous HTTP module request. The module is notified of these data by the #HTTTPRING URC.</p> <p>The device shall prompt a three character sequence <less_than><less_than><less_than> (IRA 60, 60, 60) followed by the data.</p> <p>If reading ends successfully, the response is OK; otherwise an error code is reported</p> <p>Parameters:</p> <p><prof_id> - Numeric parameter indicating the profile identifier. Range: 0-2</p> <p>Note: If the data are not present or the #HTTTPRING <http_status_code> parameter has value 0, an error code is reported.</p>	
AT#HTTTPRCV=?	<p>Test command reports the supported range of values for <prof_id> parameter in the format:</p> <p># HTTTPRCV: (list of supported <prof_id>s)</p>	

5.1.6.10. Easy Script® Extension - Python9 Interpreter, AT Commands

5.1.6.10.1. Write Script - #WSCRIPT

#WSCRIPT - Write Script	SELINT 2
AT#WSCRIPT= [<script_name>, <size>, [,<hidden>]]	<p>Execution command causes the MODULE to store a file in the Easy Script® related NVM, naming it <script_name></p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>The file should be sent using RAW ASCII file transfer. It is important to set properly the port settings. In particular: Flow control: hardware. Baud rate: 115200 bps</p> </div> <p>Parameters: <script_name> - name of the file in NVM, string type (max 16 chars, case sensitive). <size> - file size in bytes <hidden> - file hidden attribute 0 - file content is readable with #RSCRIPT (default). 1 - file content is readable with #RSCRIPT (no effect).</p> <p>The device shall prompt a five character sequence <CR><LF><greater_than><greater_than><greater_than> (IRA 13, 10, 62, 62, 62) after command line is terminated with <CR>; after that a file can be entered from TE, sized <size> bytes.</p> <p>The operations completes when all the bytes are received.</p> <p>If writing ends successfully, the response is OK; otherwise an error code is reported.</p> <p>Note: the file name should be passed between quotes; every textual script file must have .py extension, whilst every pre-compiled executable script file must have .pyo extension; file names are case sensitive.</p> <p>Note: when sending the script be sure that the line terminator is <CR><LF> and that your terminal program does not change it.</p>
AT#WSCRIPT=?	Test command returns OK result code.
Example	AT#WSCRIPT="First.py ",54,0 >>> <i>here receive the prompt; then type or send the textual script, sized 54 bytes</i> OK

⁹ PYTHON is a registered trademark of the Python Software Foundation.



#WSCRIPT - Write Script		SELINT 2
	<i>Textual script has been stored</i>	
Note	It's recommended to use the extension .py only for textual script files and the extension .pyo only for pre-compiled executable script files.	

5.1.6.10.2. Select Active Script - #ESCRIP

#ESCRIP - Select Active Script		SELINT 2
AT#ESCRIP= [<script_name>]	<p>Set command selects either</p> <ol style="list-style-type: none"> the name of the textual script file that will be compiled and executed by the Easy Script® compiler at startup according to last #STARTMODESCR setting, or the name of the pre-compiled executable file that will be executed at startup according to last #STARTMODESCR setting. <p>We call this file (either textual or pre-compiled) the current script.</p> <p>Parameter: <script_name> - file name, string type (max 16 chars, case sensitive).</p> <p>Note: all textual script files must have .py extension; all pre-compiled executable files must have .pyo extension.</p> <p>Note: <script_name> must match to the name of a file written by #WSCRIPT in order to have it run.</p> <p>Note: the command does not check whether a textual script named <script_name> does exist or not in the Easy Script® related NVM. If the file <script_name> is not present at startup then the compiler will not execute.</p>	
AT#ESCRIP?	Read command reports as a quoted string the file name of the current script .	
AT#ESCRIP=?	Test command returns OK result code.	



5.1.6.10.3. Script Execution Start Mode - #STARTMODESCR

#STARTMODESCR - Script Execution Start Mode		SELINT 2
AT#STARTMODESCR= <script_start_mode> [,<script_start_to>]	<p>Set command sets the current script (see #ESCRIP) execution start mode.</p> <p>Parameter:</p> <p><script_start_mode> - currente script execution start mode</p> <p>0 - current script will be executed at startup only if the DTR line is found Low (that is: COM is not open on a PC), otherwise the Easy Script® interpreter will not execute and the MODULE will behave normally answering only to AT commands on the serial port (factory default).</p> <p>1 - current script will be executed at startup only if the user does not send any AT command on the serial port for the time interval specified in <script_start_to> parameter, otherwise the Easy Script® interpreter will not execute and the MODULE will behave normally answering only to AT commands on the serial port. The DTR line is not tested.</p> <p><script_start_to> - current script start time-out;</p> <p>10..60 - time interval in seconds; this parameter is used only if parameter <script_start_mode> is set to 1; it is the waiting time for an AT command on the serial port to disable active script execution start. If the user does not send any AT command on the serial port for the time specified in this parameter active script will not be executed (default is 10).</p>	
AT#STARTMODESCR?	<p>Read command reports the current script start mode and the current script start time-out, in the format:</p> <p>#STARTMODESCR= <script_start_mode>,<script_start_timeout></p>	
AT#STARTMODESCR=?	<p>Test command returns the range of available values for parameters <script_start_mode> and <script_start_timeout>, in the format:</p> <p>#STARTMODESCR: (0,1),(10-60)</p>	



5.1.6.10.4. Execute Active Script - #EXECSCR

#EXECSCR - Execute Active Script		SELINT 2
AT#EXECSCR	Execution command causes the current script (see #ESCRIP) execution not at startup. This command is useful when the execution at startup has been blocked deliberately and the user wants to control execution start.	
AT#EXECSCR=?	Test command returns OK result code.	

5.1.6.10.5. Read Script - #RSCRIPT

#RSCRIPT - Read Script		SELINT 2
AT#RSCRIPT=[<script_name>]	Execution command reports the content of file <script_name>. Parameter: <script_name> - file name, string type (max 16 chars, case sensitive). The device shall prompt a five character sequence <CR><LF><less_than><less_than><less_than> (IRA 13, 10, 60, 60, 60) followed by the file content. Note: if the file <script_name> was saved with the hidden attribute, then an empty file is reported with the OK result code. Note: If the file <script_name> is not present an error code is reported.	
AT#RSCRIPT=?	Test command returns OK result code.	
Example	AT#RSCRIPT="First.py " <i>hereafter receive the prompt; then the script is displayed, immediately after the prompt</i> <<<import MDM MDM.send('AT\r',10) Ans=MDM.receive(20) OK	



5.1.6.10.6. List Script Names - #LSCRIPT

#LSCRIPT - List Script Names		SELINT 2
AT#LSCRIPT	<p>Execution command reports either the list of file names for the files currently stored in the Easy Script® related NVM and the available free NVM memory in the format:</p> <p>[#LSCRIPT: <script_name1>,<size1>... [<CR><LF>#LSCRIPT: <script_namen>,<size>]] <CR><LF>#LSCRIPT: free bytes: <free_NVM></p> <p>where: <script_namen> - file name, quoted string type (max 16 chars, case sensitive) <size> - size of script in bytes <free_NVM> - size of available NVM memory in bytes</p>	
AT#LSCRIPT=?	Test command returns OK result code.	
Example	AT#LSCRIPT #LSCRIPT: "First.py",51 #LSCRIPT: "Second.py",178 #LSCRIPT: "Third.py",95 #LSCRIPT: free bytes: 20000 OK	

#LCSCRIPT - List Script Names		SELINT 2
AT#LCSCRIPT	<p>Execution command reports either the list of file names for the files currently stored in the Easy Script® related NVM, adding CRC16 information, and the available free NVM memory in the format:</p> <p>[#LCSCRIPT: <script_name1>,<size1>[,<crc1>]... [<CR><LF>#LCSCRIPT: <script_namen>,<size>[,<crcn>]] <CR><LF>#LCSCRIPT: free bytes: <free_NVM></p> <p>where: <script_namen> - file name, quoted string type (max 16 chars, case sensitive) <size> - size of script in bytes <crcn> - CRC16 poly ($x^{16}+x^{12}+x^5+1$) of script in hex format <free_NVM> - size of available NVM memory in bytes</p> <p>Note: CRC16 is calculated using the standard CRC16-CCITT $x^{16}+x^{12}+x^5+1$ polynomial (0x1021 representation) with initial value FFFF.</p> <p>Note: if one file currently stored in NVM is in use than CRC16 cannot be calculated and execution command does not report <crcn> for that file. This is always true if command is executed by a Python script because at least the file pointed by #ESCRIP is in use.</p>	
AT#LCSCRIPT=	Execution command reports size and CRC16 information of file <script_name> in	



#LCSCRIPT - List Script Names	SELINT 2
<script_name>	<p>the format:</p> <p>[#LCSCRIPT: <script_name>,<size>[,<crc>]]</p> <p>where:</p> <p><script_name> - file name, quoted string type (max 16 chars, case sensitive)</p> <p><size> - size of script in bytes</p> <p><crc> - CRC16 poly ($x^{16}+x^{12}+x^5+1$) of script in hex format</p> <p>Parameter:</p> <p><script_name> - file name, string type (max 16 chars, case sensitive).</p> <p>Note: CRC16 is calculated using the standard CRC16-CCITT $x^{16}+x^{12}+x^5+1$ polynomial (0x1021 representation) with initial value FFFF.</p> <p>Note: if file <script_name> is in use than CRC16 cannot be calculated and execution command does not report <crc>.</p> <p>Note: if file <script_name> is not in the list of files stored in NVM execution command exits with error message.</p>
AT#LCSCRIPT=?	Test command returns OK result code.
Example	<p>AT#LCSCRIPT</p> <p>#LCSCRIPT: "First.py",51,8FD6</p> <p>#LCSCRIPT: "Second.py",178,A034</p> <p>#LCSCRIPT: "Third.py",120,7C48</p> <p>#LCSCRIPT: free bytes: 20000</p> <p>OK</p> <p>AT#LCSCRIPT="Second.py"</p> <p>#LCSCRIPT: "Second.py",178,A034</p> <p>OK</p> <p>If file Third.py is already in use.</p> <p>AT#LCSCRIPT</p> <p>#LCSCRIPT: "First.py",51,8FD6</p> <p>#LCSCRIPT: "Second.py",178,A034</p> <p>#LCSCRIPT: "Third.py",120</p> <p>#LCSCRIPT: free bytes: 20000</p> <p>OK</p>



5.1.6.10.7. Delete Script - #DSCRIPT

#DSCRIPT - Delete Script		SELINT 2
AT#DSCRIPT=[<script_name>]	<p>Execution command deletes a file from Easy Script® related NVM memory.</p> <p>Parameter:</p> <p><script_name> - name of the file to delete, string type (max 16 chars, case sensitive)</p> <p>Note: if the file <script_name> is not present an error code is reported.</p>	
AT#DSCRIPT=?	Test command returns OK result code.	
Example	AT#DSCRIPT="Third.py" OK	

5.1.6.10.8. Reboot - #REBOOT

#REBOOT - Reboot		SELINT 2
AT#REBOOT	<p>Execution command reboots immediately the unit.</p> <p>It can be used to reboot the system after a remote update of the script in order to have the new one running.</p> <p>Note: if AT#REBOOT follows an AT command that stores some parameters in NVM, it is recommended to insert a delay of at least 5 seconds before to issue AT#REBOOT, to permit the complete NVM storing</p> <p>Note: AT#REBOOT is an obsolete AT command; please refer to AT#ENHRST to perform a module reboot</p>	
AT#REBOOT=?	Test command returns OK result code.	
Example	AT#REBOOT OK ... Module Reboots ...	



5.1.6.11. SIM Toolkit Commands

5.1.6.11.1. SIM Toolkit Interface Activation - #STIA

#STIA - SIM Toolkit Interface Activation	SELINT 2
<p>AT#STIA= [<mode> [,<timeout>]]</p>	<p>Set command is used to activate the SAT sending of unsolicited indications when a proactive command is received from SIM.</p> <p>Parameters:</p> <p><mode></p> <ul style="list-style-type: none"> 0 - disable SAT 1 - enable SAT without unsolicited indication #STN (default) 2 - enable SAT and extended unsolicited indication #STN (see #STGI) 3 - enable SAT and reduced unsolicited indication #STN (see #STGI) 17 - enable SAT without unsolicited indication #STN and 3GPP TS 23.038 alphabet used 18 - enable SAT and extended unsolicited indication #STN (see #STGI) and 3GPP TS 23.038 alphabet used 19 - enable SAT and reduced unsolicited indication #STN (see #STGI) and 3GPP TS 23.038 alphabet used 33 - enable SAT without unsolicited indication #STN and UCS2 alphabet used 34 - enable SAT and extended unsolicited indication #STN (see #STGI) and UCS2 alphabet used 35 - enable SAT and reduced unsolicited indication #STN (see #STGI) and UCS2 alphabet used <p><timeout> - time-out for user responses</p> <ul style="list-style-type: none"> 1.. 2 - time-out in minutes (default 2). Any ongoing (but unanswered) proactive command will be aborted automatically after <timeout> minutes. In this case, the terminal response is either “ME currently unable to process command”, or if applicable, “No response from user”. In addition an unsolicited indication will be sent to the external application: <p>#STN: <cmdTerminateValue></p> <p>where:</p> <p><cmdTerminateValue> is defined as <cmdType> + terminate offset; the terminate offset equals 100.</p> <p>Note: every time the SIM application issues a proactive command that requires user interaction an unsolicited code will be sent, if enabled with #STIA command, as follows:</p> <ul style="list-style-type: none"> • if <mode> parameter of #STIA command has been set to 3 (reduced unsolicited indication) an unsolicited indication will be sent, indicating the type of proactive command issued by the SIM:



#STIA - SIM Toolkit Interface Activation	SELINT 2
<p>#STN: <cmdType></p> <ul style="list-style-type: none"> if <mode> parameter of #STIA command has been set to 2 (extended unsolicited indication) the format of the unsolicited indication depends on the specific command: <p style="text-align: center;"><i>if <cmdType>=1 (REFRESH)</i></p> <p>an unsolicited notification will be sent to the user:</p> <p>#STN: <cmdType>,<refresh type></p> <p>where:</p> <p><refresh type></p> <ul style="list-style-type: none"> 0 - SIM Initialization and Full File Change Notification; 1 - File Change Notification; 2 - SIM Initialization and File Change Notification; 3 - SIM Initialization; 4 - SIM Reset <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>In this case neither #STGI nor #STSR commands are required:</p> <ul style="list-style-type: none"> AT#STGI is accepted anyway. AT#STSR=<cmdType>,0 will answer OK but do nothing. </div> <p style="text-align: center;"><i>if <cmdType>=17 (SEND SS)</i> <i>if <cmdType>=19 (SEND SHORT MESSAGE)</i> <i>if <cmdType>=20 (SEND DTMF)</i> <i>if <cmdType>=32 (PLAY TONE)</i></p> <p>an unsolicited notification will be sent if allowed by SIM (see GSM 11.14):</p> <p>#STN: <cmdType>[,<text>]</p> <p>where:</p> <p><text> - (optional) text to be displayed to user</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>In these cases neither #STGI nor #STSR commands are required:</p> <ul style="list-style-type: none"> AT#STGI is accepted anyway. AT#STSR=<cmdType>,0 will answer OK but do nothing. </div> <p>In case of SEND SHORT MESSAGE (<cmdType>=19) command if sending to network fails an unsolicited notification will be sent</p>	



#STIA - SIM Toolkit Interface Activation	SELINT 2
<p>#STN: 119</p> <p><i>if <cmdType>=33 (DISPLAY TEXT)</i></p> <p>an unsolicited notification will be sent if allowed by SIM (see GSM 11.14):</p> <p>#STN: <cmdType>[,<cmdDetails>[,<text>]]</p> <p>where:</p> <p><cmdDetails> - unsigned Integer used as a bit field. 0..255 - used as a bit field:</p> <p>bit 1: 0 - normal priority 1 - high priority</p> <p>bits 2 to 7: reserved for future use</p> <p>bit 8: 0 - clear message after a delay 1 - wait for user to clear message</p> <p><text> - (optional) text to be displayed to user</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>In this case:</p> <ol style="list-style-type: none"> if <cmdDetails>/bit8 is 0 neither #STGI nor #STSR commands are required: <ul style="list-style-type: none"> AT#STGI is accepted anyway. AT#STSR=<cmdType>,0 will answer OK but do nothing. If <cmdDetails>/bit8 is 1 #STSR command is required </div> <p><i>if <cmdType>=40 (SET UP IDLE MODE TEXT)</i></p> <p>an unsolicited notification will be sent:</p> <p>#STN: <cmdType>[,<text>]]</p> <p>where:</p> <p><text> - (optional)text to be displayed to user</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>In these cases neither #STGI nor #STSR commands are required:</p> <ul style="list-style-type: none"> AT#STGI is accepted anyway. AT#STSR=<cmdType>,0 will answer OK but do nothing. </div> <p><i>if <cmdType>=18 (SEND USSD)</i></p>	



#STIA - SIM Toolkit Interface Activation	SELINT 2
	<p>an unsolicited notification will be sent to the user:</p> <p>#STN: <cmdType>[,<text>]</p> <p>where: <text> - optional text string sent by SIM</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>In this case:</p> <ul style="list-style-type: none"> • AT#STSR=18,20 can be sent to end USSD transaction. • AT#STGI is accepted anyway. • AT#STSR=<cmdType>,0 will answer OK but do nothing. </div> <p style="text-align: center;"><i>if <cmdType>=5 (SET UP EVENT LIST)</i></p> <p>an unsolicited notification will be sent:</p> <p>#STN: <cmdType>[,<event list mask>]</p> <p>where: <event list mask> - (optional)hexadecimal number representing the list of events to monitor (see GSM 11.14)</p> <ul style="list-style-type: none"> - '00' = MT call - '01' = Call connected - '02' = Call disconnected - '03' = Location status - '04' = User activity - '05' = Idle screen available - '06' = Card reader status (if class "a" is supported) - '07' = Language selection - '08' = Browser Termination (if class "c" is supported) - '09' = Data available (if class "e" is supported) - '0A' = Channel status (if class "e" is supported) <p>The hexadecimal number is actually a bit mask, where each bit, when set, indicates that the corresponding event has to be monitored (e.g., if <event list mask> is 0x0001, it means that MT call has to be monitored).</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>In these cases neither #STGI nor #STSR commands are required:</p> <ul style="list-style-type: none"> • AT#STGI is accepted anyway. • AT#STSR=<cmdType>,0 will answer OK but do nothing. </div> <p>All other commands:</p>



#STIA - SIM Toolkit Interface Activation	SELINT 2
	<p>the unsolicited indication will report just the proactive command type:</p> <p>#STN: <cmdType></p> <p>Note: if the call control or SMS control facility in the SIM is activated, when the customer application makes an outgoing call, or sends an SS or USSD, or an SMS, the following #STN unsolicited indication could be sent, according to GSM 11.14, to indicate whether the outgoing call has been accepted, rejected or modified by the SIM, or if the SMS service centre address or destination has been changed:</p> <p>#STN: <cmdTerminateValue>,<Result>[,<TextInfo>[,<Number>[,<MODestAddr>]]]</p> <p>where</p> <p><cmdTerminateValue></p> <ul style="list-style-type: none"> 150 - SMS control response 160 - call/SS/USSD response <p><Result></p> <ul style="list-style-type: none"> 0 - Call/SMS not allowed 1 - Call/SMS allowed 2 - Call/SMS allowed with modification <p><Number> - Called number, Service Center Address or SS String in ASCII format.</p> <p><MODestAddr> - MO destination address in ASCII format.</p> <p><TextInfo> - alpha identifier provided by the SIM in ASCII format.</p> <p>Note: an unsolicited result code</p> <p>#STN: 254</p> <p>is sent if the user has indicated the need to end the proactive SIM application session (AT#STSR=<cmdType>,16 i.e. “proactive SIM application session terminated by the user” according to GSM 11.14).</p> <p>The TA does not need to respond directly, i.e. AT#STSR is not required. It is possible to restart the SAT session from the main menu again with the command AT#STGI=37.</p> <p>Note: The settings are saved on user profile and available on following reboot. SIM Toolkit activation/deactivation is only performed at power on.</p> <p>Note: if #ENS=1 then the <mode> parameter is set to 2</p>
AT#STIA?	Read command can be used to get information about the SAT interface in the format:



5.1.6.11.2. SIM Toolkit Get Information - #STGI

#STGI - SIM Toolkit Get Information	SELINT 2
<p>AT#STGI= [<cmdType>]</p>	<p>#STGI set command is used to request the parameters of a proactive command from the ME.</p> <p>Parameter:</p> <p><cmdType> - proactive command ID according to GSM 11.14 (decimal); these are only those command types that use the AT interface; SAT commands which are not using the AT interface (not MMI related SAT commands, e.g. PROVIDE LOCAL INFORMATION) are executed without sending any indication to the user</p> <ul style="list-style-type: none"> 1 - REFRESH 5 - SET UP EVENT LIST 16 - SET UP CALL 17 - SEND SS 18 - SEND USSD 19 - SEND SHORT MESSAGE 20 - SEND DTMF 32 - PLAY TONE 33 - DISPLAY TEXT 34 - GET INKEY 35 - GET INPUT 36 - SELECT ITEM 37 - SET UP MENU 40 - SET UP IDLE MODE TEXT <p>Requested command parameters are sent using an #STGI indication:</p> <p>#STGI: <parameters></p> <p>where <parameters> depends upon the ongoing proactive command as follows:</p> <p style="text-align: center;"><i>if <cmdType>=1 (REFRESH)</i></p> <p>#STGI: <cmdType>,<refresh type> where:</p> <p><refresh type></p> <ul style="list-style-type: none"> 0 - SIM Initialization and Full File Change Notification; 1 - File Change Notification; 2 - SIM Initialization and File Change Notification; 3 - SIM Initialization; 4 - SIM Reset <p style="text-align: center;"><i>if <cmdType>=5 (SET UP EVENT LIST)</i></p> <p>#STGI: <cmdType>,<event list mask></p>



#STGI - SIM Toolkit Get Information	SELINT 2
	<p>where:</p> <p><event list mask> - hexadecimal number representing the list of events to monitor (see GSM 11.14):</p> <ul style="list-style-type: none"> - '00' = MT call - '01' = Call connected - '02' = Call disconnected - '03' = Location status - '04' = User activity - '05' = Idle screen available - '06' = Card reader status (if class "a" is supported) - '07' = Language selection - '08' = Browser Termination (if class "c" is supported) - '09' = Data available (if class "e" is supported) - '0A' = Channel status (if class "e" is supported) <p>The hexadecimal number is actually a bit mask, where each bit, when set, indicates that the corresponding event has to be monitored (e.g., if <event list mask> is 0x0001, it means that MT call has to be monitored).</p> <p style="text-align: center;"><i>if <cmdType>=16 (SET UP CALL)</i></p> <p>#STGI: <cmdType>,<commandDetails>,[<confirmationText>],<calledNumber></p> <p>where:</p> <p><commandDetails> - unsigned integer, used as an enumeration</p> <ul style="list-style-type: none"> 0 Set up call, but only if not currently busy on another call 1 Set up call, but only if not currently busy on another call, with redial 2 Set up call, putting all other calls (if any) on hold 3 Set up call, putting all other calls (if any) on hold, with redial 4 Set up call, disconnecting all other calls (if any) 5 Set up call, disconnecting all other calls (if any), with redial <p><confirmationText> - string for user confirmation stage</p> <p><calledNumber> - string containing called number</p> <p style="text-align: center;"> <i>if <cmdType>=17 (SEND SS)</i> <i>if <cmdType>=18 (SEND USSD)</i> <i>if <cmdType>=19 (SEND SHORT MESSAGE)</i> <i>if <cmdType>=20 (SEND DTMF)</i> <i>if <cmdType>=32 (PLAY TONE)</i> <i>if <cmdType>=40 (SET UP IDLE MODE TEXT)</i> </p>



#STGI - SIM Toolkit Get Information	SELINT 2
<p>#STGI: <cmdType>[,<text>]</p> <p>where: <text> - text to be displayed to user</p> <p style="text-align: center;"><i>if <cmdType>=33 (DISPLAY TEXT)</i></p> <p>#STGI: <cmdType>,<cmdDetails>[,<text>]</p> <p>where: <cmdDetails> - unsigned Integer used as a bit field. 0..255 - used as a bit field:</p> <ul style="list-style-type: none"> bit 1: <ul style="list-style-type: none"> 0 - normal priority 1 - high priority bits 2 to 7: reserved for future use bit 8: <ul style="list-style-type: none"> 0 - clear message after a delay 1 - wait for user to clear message <p><text> - text to be displayed to user</p> <p style="text-align: center;"><i>if <cmdType>=34 (GET INKEY)</i></p> <p>#STGI: <cmdType>,<commandDetails>,<text></p> <p>where: <commandDetails> - unsigned Integer used as a bit field. 0..255 - used as a bit field:</p> <ul style="list-style-type: none"> bit 1: <ul style="list-style-type: none"> 0 - Digits only (0-9, *, # and +) 1 - Alphabet set; bit 2: <ul style="list-style-type: none"> 0 - SMS default alphabet (GSM character set) 1 - UCS2 alphabet bit 3: <ul style="list-style-type: none"> 0 - Character sets defined by bit 1 and bit 2 are enabled 1 - Character sets defined by bit 1 and bit 2 are disabled and the "Yes/No" response is requested bits 4 to 7: <ul style="list-style-type: none"> 0 bit 8: <ul style="list-style-type: none"> 0 - No help information available 1 - Help information available <p><text> - String as prompt for text.</p>	



#STGI - SIM Toolkit Get Information	SELINT 2
	<p><i>if <cmdType>=35 (GET INPUT)</i></p> <p>#STGI: <cmdType>,<commandDetails>,<text>,<responseMin>,<responseMax>[,<defaultText>]</p> <p>where:</p> <p><commandDetails> - unsigned Integer used as a bit field. 0..255 - used as a bit field:</p> <p>bit 1: 0 - Digits only (0-9, *, #, and +) 1 - Alphabet set</p> <p>bit 2: 0 - SMS default alphabet (GSM character set) 1 - UCS2 alphabet</p> <p>bit 3: 0 - ME may echo user input on the display 1 - User input shall not be revealed in any way. Hidden entry mode (see GSM 11.14) is only available when using digit input. In hidden entry mode only characters ('0'-'9', '*' and '#') are allowed.</p> <p>bit 4: 0 - User input to be in unpacked format 1 - User input to be in SMS packed format</p> <p>bits 5 to 7: 0</p> <p>bit 8: 0 - No help information available 1 - Help information available</p> <p><text> - string as prompt for text <responseMin> - minimum length of user input 0..255 <responseMax> - maximum length of user input 0..255 <defaultText> - string supplied as default response text</p> <p><i>if <cmdType>=36 (SELECT ITEM)</i></p> <p>The first line of output is:</p> <p>#STGI: <cmdType>,<commandDetails>,<numOfItems>[,<titleText>] <CR><LF></p> <p>One line follows for every item, repeated for <numOfItems>:</p>



#STGI - SIM Toolkit Get Information	SELINT 2
<p>#STGI: <cmdType>,<itemId>,<itemText>[,<nextActionId>]</p> <p>where:</p> <p><commandDetails> - unsigned Integer used as a bitfield 0..255 - used as a bit field:</p> <p>bit 1: 0 - Presentation type is not specified 1 - Presentation type is specified in bit 2</p> <p>bit 2: 0 - Presentation as a choice of data values if bit 1 = '1' 1 - Presentation as a choice of navigation options if bit 1 is '1'</p> <p>bit 3: 0 - No selection preference 1 - Selection using soft key preferred</p> <p>bits 4 to 7: 0</p> <p>bit 8: 0 - No help information available 1 - Help information available</p> <p><numOfItems> - number of items in the list <titleText> - string giving menu title <itemId> - item identifier 1..<numOfItems> <itemText> - title of item <nextActionId> - the next proactive command type to be issued upon execution of the menu item. 0 - no next action information available.</p> <p style="text-align: center;"><i>if <cmdType>=37 (SET UP MENU)</i></p> <p>The first line of output is:</p> <p>#STGI: <cmdType>,<commandDetails>,<numOfItems>,<titleText> <CR><LF></p> <p>One line follows for every item, repeated for <numOfItems>:</p> <p>#STGI: <cmdType>,<itemId>,<itemText>[,<nextActionId>]</p> <p>where:</p> <p><commandDetails> - unsigned Integer used as a bitfield 0..255 - used as a bit field:</p> <p>bit 1: 0 - no selection preference 1 - selection using soft key preferred</p>	



#STGI - SIM Tookit Get Information	SELINT 2
<p>#STN:237</p> <p>is an indication that the main menu of the SIM Application has been removed from the TA, and it is no longer available. In this case AT#STGI=37 command response will be always ERROR.</p>	

5.1.6.11.3. SIM Toolkit Send Response - #STSR

#STSR - SIM Toolkit Send Response	SELINT 2
<p>AT#STSR= [<cmdType>, <userResponse> [,<data>]]</p>	<p>The write command is used to provide to SIM user response to a command and any required user information, e.g. a selected menu item.</p> <p>Parameters:</p> <p><cmdType> - integer type; proactive command ID according to GSM 11.14 (see #STGI)</p> <p><userResponse> - action performed by the user</p> <ul style="list-style-type: none"> 0 - command performed successfully (call accepted in case of call setup) 16 - proactive SIM session terminated by user 17 - backward move in the proactive SIM session requested by the user 18 - no response from user 19 - help information required by the user 20 - USSD/SS Transaction terminated by user 32 - TA currently unable to process command 34 - user has denied SIM call setup request 35 - user cleared down SIM call before connection or network release <p><data> - data entered by user, depending on <cmdType>, only required if <Result> is 0:</p> <p style="text-align: center;">Get Inkey</p> <p><data> contains the key pressed by the user; used character set should be the one selected with +CSCS.</p> <p>Note: if, as a user response, a binary choice (Yes/No) is requested by the SIM application using bit 3 of the <commandDetails> parameter the valid content of the <inputString> is:</p> <ul style="list-style-type: none"> a) "IRA", "8859-1", "PCCP437" charsets: "Y" or "y" (positive answer) and "N" or "n" (negative answer) b) UCS2 alphabet "0079" or "0059" (positive answer) and "006E" or "004E" (negative answer) <p style="text-align: center;">Get Input</p> <p><data> - contains the string of characters entered by the user (see above)</p> <p style="text-align: center;">Select Item</p> <p><data> - contains the item identifier selected by the user</p> <p>Note:</p>



#STSR - SIM Toolkit Send Response		SELINT 2
	Use of icons is not supported. All icon related actions will respond with no icon available.	
AT#STSR?	<p>The read command can be used to request the currently ongoing proactive command and the SAT state in the format</p> <p>#STSRI: <state>,<cmdType> where: <state> - SAT interface state (see #STIA) <cmdType> - ongoing proactive command</p> <p>An error message will be returned if there is no pending command.</p>	
AT#STSR=?	Test command returns the range for the parameters <state> and <cmdType>.	

5.1.6.11.4. SIM Toolkit terminal Attach - #STTA

#STTA – SIM Toolkit Terminal Attach		SELINT 2
AT#STTA=<state>	<p>This command attaches/detaches the SIM Toolkit application to the AT instance reserved for this use.</p> <p>Parameters: <state>: attached state 0 – SIM Toolkit detaches 1 – SIM Toolkit attaches</p> <p>If SIM Toolkit application has been already attached/detached the command does nothing and returns OK.</p>	
AT#STTA?	Read command reports the current <state> in the format: #STTA: <state>	
AT#STTA=?	Test command reports the supported range of values for parameter <state>	
Note	<p>The AT instance reserved for the SIM Toolkit application is the #3.</p> <p>Issuing AT#STTA=<state> when the AT instance has been already attached to another service (CMUX, SMSATRUN/TCPATRUN) causes an ERROR result code to be returned.</p>	



5.1.6.12. Phonebook AT Commands Set

5.1.6.12.1. Read Group Entries - #CPBGR

#CPBGR- Read Group Entries	SELINT 2
AT#CPBGR= <index1> [,<index2>]	<p>Execution command returns Grouping information Alpha String (GAS) USIM file entries in location number range <index1>...<index2>. If <index2> is omitted, only location <index1> is returned. These strings are the names used for groups an ADN entry could belong to.</p> <p>Parameters: <index1> - integer type, value in the range of location numbers of GAS. <index2> - integer type, value in the range of location numbers of GAS.</p> <p>The response format is: [#CPBGR: <index1>,<text>[<CR><LF> #CPBGR: <index2>,<text>[...]]]</p> <p>where: <indexn> - the location number of the GAS entry <text> - the alphanumeric text associated to the entry</p>
AT#CPBGR=?	<p>Test command returns the supported range of values for parameters <indexn> and the maximum length of <text> field, in the format:</p> <p>#CPBGR: (<minIndex> - <maxIndex>),<tlength></p> <p>where: <minIndex> - the minimum <index> number, integer type <maxIndex>- the maximum <index> number, integer type <tlength> - maximum <text> field length, integer type</p>



5.1.6.12.2. Write Group Entries - #CPBGW

#CPBGW - Write Group Entry		SELINT 2
AT#CPBGW= <index>,<text>	<p>Execution command writes Grouping information Alpha String (GAS) USIM file entry in location number <index>.</p> <p>Parameters: <index> - integer type, value in the range of location numbers of the GAS file. <text> - the text associated to the entry, string type</p> <p>Note: If record number <index> already exists, it will be overwritten.</p>	
AT#CPBGW=?	<p>Test command returns location range supported by the current storage as a compound value, and maximum length of <text> field. The format is:</p> <p>+CPBGW: (list of supported <index>s),<tlength></p> <p>where: <tlength> - integer type value indicating the maximum length of field <text> in bytes; actual maximum number of characters that can be stored depends upon <text> coding (see +CSCS)</p>	



5.1.6.13. GPS AT Commands Set

5.1.6.13.1. GPS Controller Power Management - \$GPSP

\$GPSP – GPS Controller Power Management		SELINT 2
AT\$GPSP=<status>	<p>Set command allows to manage power-up or down of the GPS controller</p> <p>Parameter: <status> 0 - GPS controller is powered down 1 - GPS controller is powered up</p>	
AT\$GPSP?	<p>Read command reports the current value of the <status> parameter, in the format:</p> <p>\$GPSP: <status></p>	
AT\$GPSP=?	<p>Test command reports the range of supported values for parameter <status></p>	
Example	<p>AT\$GPSP=0 OK</p>	
Note	<p>Power up clears GPS memory and then starts the GPS receiver. GPS data cleaning is performed on the base of the current value of the <reset_type> parameter (see \$GPSR)</p> <p>The current setting is stored through \$GPSSAV</p>	

5.1.6.13.2. GPS Reset - \$GPSR

\$GPSR – GPS Reset		SELINT 2
AT\$GPSR= <reset_type>	<p>Execution command allows to reset the GPS controller.</p> <p>Parameter: <reset_type> 0 – Factory Reset: this option clears all GPS memory including clock drift. 1 - Coldstart (No Almanac, No Ephemeris): this option clears all data that is currently stored in the internal memory of the GPS receiver including position, almanac, ephemeris, and time. The stored clock drift however, is retained. 2 - Warmstart (No ephemeris): this option clears all initialization data in the GPS receiver and subsequently reloads the data that is currently displayed in the Receiver Initialization Setup screen. The almanac is retained but the ephemeris is cleared. 3 - Hotstart (with stored Almanac and Ephemeris): the GPS receiver restarts by using the values stored in the internal memory of the GPS receiver; validated ephemeris and almanac.</p>	
AT\$GPSR=?	Test command reports the range of supported values for parameter <reset_type>	
Example	AT\$GPSR=0 OK	
Note	The current setting is stored through \$GPSSAV	



5.1.6.13.3. Unsolicited NMEA Data Configuration - \$GPSNMUN

\$GPSNMUN - Unsolicited NMEA Data Configuration	SELINT 2
<p>AT\$GPSNMUN= <enable> [,<GGA>,<GLL>,<GSA>,<GSV>,<RMC>,<VTG >]</p>	<p>Set command permits to activate an Unsolicited streaming of GPS data (in NMEA format) through the standard GSM serial port and defines which NMEA sentences will be available</p> <p>Parameters: <enable> 0 - NMEA data stream de-activated (default) 1 - NMEA data stream activated with the following unsolicited response syntax: \$GPSNMUN:<CR><NMEA SENTENCE><CR> 2 - NMEA data stream activated with the following unsolicited response syntax: <NMEA SENTENCE><CR> 3 - dedicated NMEA data stream; it is not possible to send AT commands; with the escape sequence '+++' the user can return to command mode</p> <p><GGA> - Global Positioning System Fix Data 0 - disable (default) 1 - enable</p> <p><GLL> - Geographical Position - Latitude/Longitude 0 - disable (default) 1 - enable</p> <p><GSA> - GPS DOP and Active Satellites 0 - disable (default) 1 - enable</p> <p><GSV> - GPS Satellites in View 0 - disable (default) 1 - enable</p> <p><RMC> - recommended Minimum Specific GPS Data 0 - disable (default) 1 - enable</p> <p><VTG> - Course Over Ground and Ground Speed 0 - disable (default) 1 - enable</p>
<p>AT\$GPSNMUN?</p>	<p>Read command returns whether the unsolicited GPS NMEA data streaming is currently enabled or not, along with the NMEA sentences availability status, in the format:</p> <p>\$GPSNMUN:<enable>,<GGA>,<GLL>,<GSA>,<GSV>,<RMC>,<VTG ></p>
<p>AT\$GPSNMUN=?</p>	<p>Test command returns the supported range of values for parameters <enable>, <GGA>, <GLL>, <GSA>, <GSV>, <RMC>, <VTG></p>



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

Example	<p>AT\$GPSNMUN=1,0,0,1,0,0,0</p> <p>OK</p> <p><i>These sets the GSA as available sentence in the unsolicited message</i></p> <p>AT\$GPSNMUN=0</p> <p>OK</p> <p><i>Turn-off the unsolicited mode</i></p> <p>AT\$GPSNMUN?</p> <p>\$GPSNMUN: 1,0,0,1,0,0,0</p> <p>OK</p> <p><i>Give the current frame selected (GSA)</i></p> <p>The unsolicited message will be:</p> <p>\$GPSNMUN:</p> <p>\$GPGSA,A,3,23,20,24,07,13,04,02,,,,,2.4,1.6,1.8*3C</p>
---------	--



5.1.6.13.4. Get Acquired Position - \$GPSACP

\$GPSACP – Get Acquired Position	SELINT 2
AT\$GPSACP	<p>Execution command returns information about the last GPS position in the format:</p> <p>\$GPSACP: <UTC>,<latitude>,<longitude>,<hdop>,<altitude>,<fix>,<cog>,<spkm>,<spkn>,<date>,<nsat></p> <p>where:</p> <p><UTC> - UTC time (hhmmss.sss) referred to GGA sentence</p> <p><latitude> - format is ddmm.mmmm N/S (referred to GGA sentence)</p> <p>where:</p> <p>dd - degrees 00..90</p> <p>mm.mmmm - minutes 00.0000..59.9999</p> <p>N/S: North / South</p> <p><longitude> - format is dddmm.mmmm E/W (referred to GGA sentence)</p> <p>where:</p> <p>ddd - degrees 000..180</p> <p>mm.mmmm - minutes 00.0000..59.9999</p> <p>E/W: East / West</p> <p><hdop> - x.x - Horizontal Dilution of Precision (referred to GGA sentence)</p> <p><altitude> - x.x Altitude - mean-sea-level (geoid) in meters (referred to GGA sentence)</p> <p><fix> -</p> <p>0 or 1 - Invalid Fix</p> <p>2 - 2D fix</p> <p>3 - 3D fix</p> <p><cog> - ddd.mm - Course over Ground (degrees, True) (referred to VTG sentence)</p> <p>where:</p> <p>ddd - degrees 000..360</p> <p>mm - minutes 00..59</p> <p><spkm> - x.x Speed over ground (Km/hr) (referred to VTG sentence)</p> <p><spkn> - x.x- Speed over ground (knots) (referred to VTG sentence)</p> <p><date> - ddmmyy Date of Fix (referred to RMC sentence)</p> <p>where:</p> <p>dd - day 01..31</p> <p>mm - month</p>



	01..12 yy - year 00..99 - 2000 to 2099 <nsat> - nn - Total number of satellites in use (referred to GGA sentence) 00..12
AT\$GPSACP?	Read command has the same meaning as the Execution command
AT\$GPSACP=?	Test command returns the OK result code
Example	AT\$GPSACP \$GPSACP: 122330.000,4542.8106N,01344.2720E,2.25,338.0,3,0.0,0.02,0.01,2 40613,04 OK

5.1.6.13.5. Save GPS Parameters Configuration - \$GPSSAV

\$GPSSAV – Save GPS Parameters Configuration		SELINT 2
AT\$GPSSAV	Execution command stores the current GPS parameters in the NVM of the device.	
AT\$GPSSAV=?	Test command returns the OK result code	
Example	AT\$GPSSAV OK	
Note	The module must be restarted to use the new configuration	

5.1.6.13.6. Restore To Default GPS Parameters - \$GPRST

\$GPRST – Restore To Default GPS Parameters		SELINT 2
AT\$GPRST	Execution command resets the GPS parameters to “Factory Default” configuration and stores them in the NVM of the device.	
AT\$GPRST=?	Test command returns the OK result code	
Example	AT\$GPRST OK	
Note	The module must be restarted to use the new configuration	



5.1.6.13.7. GPS NVRAM Parameters Delete - \$GPSNVRAM

\$GPSNVRAM – GPS NVRAM Parameters Delete		SELINT 2
AT\$GPSNVRAM = <bitfield>,<action>	Execution command used to delete the GPS information stored in NVRAM Parameter: <bitfield> - in integer format. The assistance data mask for the type(s) of GPS-data to read/delete with the following meaning: 1: Ephemeris 2: Location 4: Time 8: Almanac <action> 0: Delete data described in bitfield	
AT\$GPSNVRAM?	Read command reports the current value of the <bitfield> parameter, in the format: \$GPSNVRAM: <bitfield>	
AT\$GPSNVRAM=?	Test command returns the supported range of values for parameters <bitfield>,<action>	
Example	AT\$GPSNVRAM=15,0 OK	
Note	The current setting is stored through \$GPSSAV	

5.1.6.13.8. GPS Quality of Service - \$GPSQOS

\$GPSQOS – GPS Quality Of Service		SELINT 2
AT\$GPSQOS =[<horiz_accuracy>[,<vertic_accuracy>[,<rsp_time>[,<age_of_location_info>[,<location_type>[,<nav_profile>[,<velocity_request>]]]]]]	Command used to set the location's quality of service (QoS). Parameter: <horiz_accuracy> (horizontal accuracy): 0 – 1800000, where 0 is highest accuracy and 1800000 is lowest accuracy in meters. Default value is 1800000 in meters <vertic_accuracy> (vertical accuracy): 0 – 990, where 0 is highest accuracy and 990 is lowest accuracy in meters. Default is 990 in meters <rsp_time> (response time): 0-14400, where 0 is the low delay and 14400 is the highest delay in seconds. Default value is 14400 in seconds.	



	<p><age_of_location_info> (Maximum age of location): 0-1966020: Value 0 means that stored location information should not be used. Value 1966020 indicates the maximum tolerable age of the stored location information. The valid range of interval for SUPL (Transport protocol) is [0 - 65535] seconds & [0 - 1966020] seconds for C-plane (Transport protocol).</p> <p><location_type> (type of location required): Used only in case of C-Plane. 0: Current Location (default) 1: Current or Last known location 2: Invalid Location, indicates that this parameter shall not be used</p> <p><nav_profile> (navigation profile): 0: Car navigation profile (default) 1: Personal profile 2: Low speed profile 3: Invalid profile, indicates that this parameter shall not be used</p> <p>< velocity_request> (velocity information is needed): 0 FALSE 1 TRUE (default)</p>
AT\$GPSQOS?	<p>Read command returns the current QoS values, in the format:</p> <p>AT\$GPSQOS: <horiz_accuracy>,<vertic_accuracy>,<rsp_time> ,<age_of_location_info>,<location_type>,< nav_profile>,< velocity_request></p>
AT\$GPSQOS=?	<p>Returns the list of supported QoS values for each field.</p> <p>\$GPSQOS: (0-1800000),(0-990),(0-14400),(0-1966020),(0-2),(0-3),(0,1)</p>
Example	<p>AT\$GPSQOS=1800000,990,150,0,0,0 OK</p>
Note	<p>The current setting is stored through \$GPSSAV</p>



5.1.6.13.9. GPS Start Location Service Request - \$GPSSLSR

\$GPSSLSR – GPS Start Location Service Request	SELINT 2
<p>\$GPSSLSR = <transport_protocol>[,<pos_mode>[,<client_id>,<clientid_type>[,<mlc_number>,<mlcnumber_type>[,<interval>[,<service_type_id>[,<pseudonym_indicator>]]]]]]]]</p>	<p>Command used to start the Receiver in Autonomous or A-GPS mode.</p> <p>Parameter: <transport_protocol>: 0 - CPlane 1 - SUPL 2 - Invalid Note: If <pos_mode> is Autonomous the <transport_protocol> should be invalid. Note: If <transport_protocol> is CPlane and <pos_mode> is Pure MS Assisted, then <interval> should be 0 (or omitted).</p> <p><pos_mode> : 0: Pure MS Assisted - Location estimate from the network (MS Assisted mode). 1: MS Based - Assistance Data from the network (MS Based mode). 2: MS Assisted Based - Combination of MS-A and MS-B modes, location estimate computed both at UE and Network. 3: Autonomous – Autonomous GPS mode of operation. Note: If <pos_mode> is Autonomous the <transport_protocol> should be invalid.</p> <p><client_id> : String parameter containing the ID of the LCS-Client to which the location estimate is to be transferred. Note: <client_id> is mandatory in case of A-GPS and the <transport_protocol> should be Cplane.</p> <p><clientid_type> : 0 – MSISDN 1 – Invalid (default) Note: <client_id> and <clientid_type> are mandatory for A-GPS mode.</p> <p><mlc_number> : String parameter containing the address of the GMLC through which the location estimate is to be sent to the LCS-Client. Note: <mlc_number> is mandatory in case of A-GPS.</p> <p><mlcnumber_type> : 0 – MSISDN 1 – Invalid (default) Note: <mlc_number> and <mlcnumber_type> are mandatory for A-GPS mode.</p>



	<p><interval> : 0 - 7200: GPS reporting period in seconds (will be sent unsolicited). if the value is 0 then a single shot NMEA Message will be provided Any value different from 0 sets the period (in seconds) between each NMEA Sentence. NOTE: If this value is not set, it is assumed to be 0. NOTE: The Unsolicited NMEA sentences have to be enabled with the commands AT\$GPSNMUN</p> <p><service_type_id> : 0 - 255 where 255 indicates that this parameter shall not be used. Note: <service_type_id> is mandatory in case of A-GPS.</p> <p>< pseudonym_indicator> : 0 FALSE (default) : display user name at the external client 1 TRUE : display user name as anonymous at the external client</p> <p>If C-plane or Supl session is not successfully completed then an unsolicited indication reports the error cause in the following formats:</p> <p>\$GPSSLR: C-PLANE ERROR,NETWORK ERROR, <error_code></p> <p>where</p> <p><error_code></p> <ul style="list-style-type: none"> 0 SS_NET_ERROR_INTERNAL_SS_ERROR 1 SS_NET_ERROR_UNKNOWN_SUBSCRIBER 9 SS_NET_ERROR_ILLEGAL_SUBSCRIBER 10 SS_NET_ERROR_BEARERSERVICE_NOT_PROVISIONED 11 SS_NET_ERROR_TELESERVICE_NOT_PROVISIONED 12 SS_NET_ERROR_ILLEGAL_EQUIPMENT 13 SS_NET_ERROR_CALL_BARRED 16 SS_NET_ERROR_ILLEGAL_SS_OPERATION 17 SS_NET_ERROR_ERROR_STATUS 18 SS_NET_ERROR_NOT_AVAILABLE 19 SS_NET_ERROR_SUBSCRIPTION_VIOLATION 20 SS_NET_ERROR_INCOMPATABILITY 21 SS_NET_ERROR_FACILITY_NOT_SUPPORTED 27 SS_NET_ERROR_ABSENT_SUBSCRIBER 29 SS_NET_ERROR_SHORT_TERM_DENIAL 30 SS_NET_ERROR_LONG_TERM_DENIAL 34 SS_NET_ERROR_SYSTEM_FAILURE 35 SS_NET_ERROR_DATA_MISSING 36 SS_NET_ERROR_UNEXPECTED_DATA_VALUE 37 SS_NET_ERROR_PW_REGISTRATION_FAILURE 38 SS_NET_ERROR_NEGATIVE_PW_CHECK 43 SS_NET_ERROR_NUMBER_OF_PW_ATTEMPTS
--	--



VIOLATION

54 SS_NET_ERROR_POS_METHOD_FAILURE

71 SS_NET_ERROR_UNKNOWN_ALPHABET

72 SS_NET_ERROR_USSD_BUSY

121 SS_NET_ERROR_REJECTED_BY_USER

122 SS_NET_ERROR_REJECTED_BY_NETWORK

123 SS_NET_ERROR_DEFLECTION_TO_SERVED_SUBSCRIBER

124 SS_NET_ERROR_SPECIAL_SERVICE_CODE

125 SS_NET_ERROR_INVALID_DEFLECTED_TO_NUMBER

126 SS_NET_ERROR_MAX_NUMBER_OF_MPTY_PARTICIPANTS_EXCEEDED

127 SS_NET_ERROR_RESOURCES_NOT_AVAILABLE

255 SS_NET_ERROR_INTERNAL_SS_TIME_OUT

or

\$GPSSLSR: C-PLANE ERROR,NETWORK REJECT CAUSE, <error_code>

where

<error_code>

0 SS_NET_REJECT_UNRECOGNIZED_COMPONENT

1 SS_NET_REJECT_MISTYPED_COMPONENT

2 SS_NET_REJECT_BADLY_STRUCTURED_COMPONENT

3 SS_NET_REJECT_DUPLICATE_INVOKE_ID

4 SS_NET_REJECT_UNRECOGNIZED_OPERATION

5 SS_NET_REJECT_MISTYPED_PRO_PARAMETER

6 SS_NET_REJECT_RESOURCE_LIMITATION

7 SS_NET_REJECT_INITIATING_RELEASE

8 SS_NET_REJECT_UNRECOGNIZED_LINKED_ID

9 SS_NET_REJECT_LINKED_RESPONSE_UNEXPECTED

10 SS_NET_REJECT_UNEXPECTED_LINKED_OPERATION

11 SS_NET_REJECT_UNRECOGNIZED_INVOKE_ID

12 SS_NET_REJECT_RETURN_RESULT_UNEXPECTED

13 SS_NET_REJECT_MISTYPED_RES_PARAMETER

14 SS_NET_REJECT_UNRECOGNIZED_ERROR_INVOKE_ID

15 SS_NET_REJECT_RETURN_ERROR_UNEXPECTED

16 SS_NET_REJECT_UNRECOGNIZED_ERROR

17 SS_NET_REJECT_UNEXPECTED_ERROR

18 SS_NET_REJECT_MISTYPED_ERROR_PARAMETER

19 SS_NET_REJECT_UNKNOWN

or

\$GPSSLSR: C-PLANE ERROR,NETWORK GSM CAUSE,



	<p><error_code></p> <p>where</p> <p><error_code></p> <p>1 SS_GSM_ERROR_UNASSIGNED_NUMBER</p> <p>3 SS_GSM_ERROR_NO_ROUTE</p> <p>6 SS_GSM_ERROR_CHANNEL_UNACCEPTABLE</p> <p>8 SS_GSM_ERROR_OPERATOR_BARRING</p> <p>16 SS_GSM_ERROR_NORMAL_CALL_CLEARING</p> <p>17 SS_GSM_ERROR_USER_BUSY</p> <p>18 SS_GSM_ERROR_NO_USER_RESPONDING</p> <p>19 SS_GSM_ERROR_USER_ALERTING_NO_ANSWER</p> <p>21 SS_GSM_ERROR_CALL_REJECTED</p> <p>22 SS_GSM_ERROR_NUMBER_CHANGED</p> <p>26 SS_GSM_ERROR_NON_SELECTED_USER_CLEARING</p> <p>27 SS_GSM_ERROR_DESTINATION_OUT_OF_ORDER</p> <p>28 SS_GSM_ERROR_INVALID_NUMBER_FORMAT</p> <p>29 SS_GSM_ERROR_FACILITY_REJECTED</p> <p>30 SS_GSM_ERROR_RESPONSE_TO_STATUS_ENQUIRY</p> <p>31 SS_GSM_ERROR_NORMAL_UNSPECIFIED</p> <p>34 SS_GSM_ERROR_NO_CIRCUIT_AVAILABLE</p> <p>38 SS_GSM_ERROR_NETWORK_OUT_OF_ORDER</p> <p>41 SS_GSM_ERROR_TEMPORARY_FAILURE</p> <p>42 SS_GSM_ERROR_SWITCH_CONGESTION</p> <p>43 SS_GSM_ERROR_ACCESS_INFORMATION_DISCARDED</p> <p>44 SS_GSM_ERROR_REQUESTED_CIRCUIT_NOT_AVAILABLE</p> <p>47 SS_GSM_ERROR_RESOURCES_UNAVAILABLE</p> <p>49 SS_GSM_ERROR_QUALITY_UNAVAILABLE</p> <p>50 SS_GSM_ERROR_FACILITY_NOT_SUBSCRIBED</p> <p>55 SS_GSM_ERROR_INCOMING_CALLS_BARRED_IN_CUG</p> <p>57 SS_GSM_ERROR_BEARER_CAPABILITY_NOT_ALLOWED</p> <p>58 SS_GSM_ERROR_BEARER_CAPABILITY_NOT_AVAILABLE</p> <p>63 SS_GSM_ERROR_SERVICE_NOT_AVAILABLE</p> <p>65 SS_GSM_ERROR_BEARER_SERVICE_NOT_IMPLEMENTED</p> <p>68 SS_GSM_ERROR_ACM_GREATER_OR_EQUAL_TO_ACM_MAX</p> <p>69 SS_GSM_ERROR_FACILITY_NOT_IMPLEMENTED</p> <p>70 SS_GSM_ERROR_ONLY_RESTRICTED_DIGITAL</p> <p>79 SS_GSM_ERROR_SERVICE_NOT_IMPLEMENTED</p> <p>81 SS_GSM_ERROR_INVALID_TI</p> <p>87 SS_GSM_ERROR_USER_NOT_IN_CUG</p> <p>88 SS_GSM_ERROR_INCOMPATIBLE_DESTINATION</p>
--	---



91 SS_GSM_ERROR_INVALID_TRANSIT_NETWORK
95 SS_GSM_ERROR_SEMANTICS_INCORRECT
96 SS_GSM_ERROR_INVALID_MANDATORY_INFORMATION
97 SS_GSM_ERROR_UNKNOWN_MESSAGE_TYPE1
98 SS_GSM_ERROR_UNEXPECTED_MESSAGE_TYPE
99 SS_GSM_ERROR_UNEXPECTED_IE
100 SS_GSM_ERROR_CONDITIONAL_IE_ERROR
101 SS_GSM_ERROR_UNKNOWN_MESSAGE_TYPE2
102 SS_GSM_ERROR_RECOVERY_ON_TIMER_EXPIRY
111 SS_GSM_ERROR_PROTOCOL_ERROR
127 SS_GSM_ERROR_INTERWORKING

or

\$GPSSLSR: C-PLANE ERROR,SS LCS CAUSE,<error_code>

where

<error_code>

257 SS_LCS_OUTOF_MEMORY
258 SS_LCS_INVALID_PARAM

or

\$GPSSLSR: SUPL ERROR,<error_code>

where

<error_code>

0 LCS_ERROR_SUPL_UNSPECIFIED
1 LCS_ERROR_SUPL_SYSTEM_FAILURE
2 LCS_ERROR_SUPL_UNEXPECTED_MESSAGE
3 LCS_ERROR_SUPL_PROTOCOL_ERROR
4 LCS_ERROR_SUPL_DATA_MISSING
5 LCS_ERROR_SUPL_UNEXPECTED_DATA_VALUE
6 LCS_ERROR_SUPL_POS_METHOD_FAILURE
7 LCS_ERROR_SUPL_POS_METHOD_MISMATCH
8 LCS_ERROR_SUPL_POS_PROTOCOL_MISMATCH
9 LCS_ERROR_SUPL_TARGET_SET_NOT_REACHABLE
10 LCS_ERROR_SUPL_VERSION_NOT_SUPPORTED
11 LCS_ERROR_SUPL_RESOURCE_SHORTAGE
12 LCS_ERROR_SUPL_INVALID_SESSION_ID
15 LCS_ERROR_SUPL_POSITIONING_NOT_PERMITTED
16 LCS_ERROR_SUPL_AUTH_NET_FAILURE

or

\$GPSSLSR: SOCKET ERROR,<error_code>



where
<error_code>

- 1 INET_RES_SOCKET_ERROR
- 114 INET_RES_UNDEFINED
- 115 INET_RES_ACCESS
- 116 INET_RES_ADDRINUSE
- 117 INET_RES_ADDRNOTAVAIL
- 118 INET_RES_AFNOSUPPORT
- 119 INET_RES_ALREADY
- 120 INET_RES_BADF
- 121 INET_RES_CONNABORTED
- 122 INET_RES_CONNREFUSED
- 123 INET_RES_CONNRESET
- 124 INET_RES_DESTADDRREQ
- 125 INET_RES_FAULT
- 126 INET_RES_HOSTDOWN
- 127 INET_RES_HOSTUNREACH
- 128 INET_RES_INPROGRESS
- 129 INET_RES_INTR
- 130 INET_RES_INVALID
- 131 INET_RES_ISCONN
- 132 INET_RES_MFILE
- 133 INET_RES_MSGSIZE
- 134 INET_RES_NETDOWN
- 135 INET_RES_NETRESET
- 136 INET_RES_NETUNREACH
- 137 INET_RES_NOBUFS
- 138 UTA_INET_RES_NOPROTOOPT
- 139 UTA_INET_RES_NOTCONN
- 140 UTA_INET_RES_NOTSOCK
- 141 UTA_INET_RES_OPNOTSUPP
- 142 UTA_INET_RES_PFNOSUPPORT
- 143 UTA_INET_RES_PROTONOSUPPORT
- 144 UTA_INET_RES_PROTOTYPE
- 145 UTA_INET_RES_SHUTDOWN
- 146 UTA_INET_RES_SOCKETNOSUPPORT
- 147 UTA_INET_RES_TIMEDOUT
- 148 UTA_INET_RES_WOULDBLOCK
- 149 UTA_INET_RES_SEC_SSLERROR
- 150 UTA_INET_RES_SEC_ERRFILE
- 151 UTA_INET_RES_SPECIFIC
- Other ERROR

or



	\$GPSSLSR: ERROR
AT\$GPSSLSR?	Read command returns the current settings, in the format: \$GPSSLSR: <transport_protocol>[,<pos_mode>[,<client_id>,<clientid_type>[,<mlc_number>,<mlcnumber_type>[,<interval> [,<service_type_id> [,<pseudonym_indicator>]]]]]]]
AT\$GPSSLSR=?	\$GPSSLSR: (0-2),(0-3),(64),(0,1),(64),(0,1),(0-7200),(0-255),(0,1)
Example	AT\$GPSSLSR= 2,3,,,,,1 OK
Note	The current setting is stored through \$GPSSAV

5.1.6.13.10. GPS Stop Location Service Request - \$GPSSTOP

\$GPSSTOP – GPS Stop Location Service Request		SELINT 2
\$GPSSTOP=[<abort_cause>]	<p>Command used to stop the Receiver in Autonomous or A-GPS mode initiated through \$GPSSLR set command.</p> <p>Parameter: <abort_cause> 0: User denies the request 1: Unspecified cause for abort 2: Cause Invalid</p>	
AT\$GPSSTOP?	Read command returns the current value of parameter <abort_cause>.	
\$GPSSTOP=?	OK	
Example	AT\$GPSSTOP=1 OK	
Note	The current setting is stored through \$GPSSAV	

5.1.6.13.11. Update SLP address - \$LCSSLP

\$LCSSLP - Update SLP address	SELINT 2
<p>AT\$LCSSLP=<slp_address_type>[,<slp_address>[,<slp_port_number>]]</p>	<p>Set command allows updating the SLP address and SLP port number.</p> <p>Parameters:</p> <p><slp_address_type>: SLP address type</p> <p>0 - IPv4</p> <p>1 - FQDN</p> <p>2 – IMSI (default value)</p> <p><slp_address>: SLP address in FQDN format or IPv4 format</p> <p><slp_port_number> : Slp Port number integer parameter. Default value is 7275</p> <p>Note: If <slp_address_type> is 0 and 1, then <slp_address> is a</p>



	mandatory parameter.
	Note: The current setting is stored in NVM.
AT\$LCSSLP?	Read command returns the current SLP address.
AT\$LCSSLP=?	Test command returns the range of values for parameter <slp_address_type> .

5.1.6.13.12. Update location information - \$LCSLUI

\$LCSLUI - Update location information		SELINT 2
AT\$LCSLUI=<update_type>	Set command allows updating the Location information. Parameters: <update_type> : the current access technology 0 - GSM 1 - WCDMA Note: the current access technology can be read with AT+COPS?	
AT\$LCSLUI=?	Test command returns the range of values for parameter <update_type> .	

5.1.6.13.13. Update terminal information - \$LCSTER

\$LCSTER - Update terminal information		SELINT 2
AT\$LCSTER=<id_type>[,<id_value>[,<pref_pos_mode>[,<tls_mode>]]]	Set command updates the terminal information like IMSI, MSISDN or IPv4 address. Parameters: <id_type> : is a number which can have any of the following values 0 - MSISDN 1 - IMSI (default value) 2 - IPv4 address 3 - Invalid <id_value> : is a string , as defined in <id_type> <pref_pos_mode> : preferred position mode, 0 – default position mode 1 – none preferred position mode <tls_mode> : indicates if TLS mode should/should not be used by the SET 0 - non-TLS mode 1 - TLS mode (default value) Note: If <id_type> is MSISDN or IPv4 address then <id_value> shall be entered	



5.1.6.13.14. Enable/Disable unsolicited response - \$LICLS

\$LICLS – Enable/Disable unsolicited response		SELINT 2
AT\$LICLS =<mode>	<p>Set command is used to enable/disable unsolicited \$LICLS response.</p> <p>Parameter: <mode> 0 – disable unsolicited 1 – enable unsolicited (default value)</p> <p>The unsolicited result code is in the format:</p> <p>\$LICLS: <request_type>[,<cid>]</p> <p>Where <request_type> 0 – Setup Request to setup the control link 1 – Release Request to release the control link</p> <p><cid> : id associated to the context that shall be deactivated (see +CGDCONT)</p> <p>If the <request_type> is a setup request, the unsolicited indication is sent/used to request the client to define, setup, activate and prepare the pdp-context. If <request_type> is a release request, the unsolicited indication is sent/used to inform the client that the pdp-context (associated with this command type) including the associated terminal is not used any more, and shall be deactivated.</p> <p>Note: The current setting is stored in NVM.</p>	
AT\$LICLS?	Read command returns the current value of parameter <mode>.	
AT\$LICLS=?	Test command returns the range of values for parameter <mode>.	



5.1.6.13.15. MT Location Request Mode - \$LCSLRMT

\$LCSLRMT – MT Location Request Mode	SELINT 2
AT\$LCSLRMT=<mode>	<p>Set command is used to enable/disable unsolicited \$LCSLRMT response.</p> <p>Parameter: <mode> 0 – disable unsolicited 1 – enable unsolicited (default value)</p> <p>The unsolicited result code is in the format:</p> <p>\$LCSLRMT: <transport_protocol>,<Notif_type>,<Loc_estimate_type>,<Client_Id>,<Client_NameEncoding_type>,<Client_Name_Type>,<Client_Name>,<Requestor_Id_Encoding_type>,<Requestor_Id_Type>,<Requestor_Id>,<Codeword>,<Service_Type_id>,<reqid></p> <p>Where</p> <p><transport_protocol> 0 -C-Plane protocol 1 - SUPL Protocol 2 - Invalid</p> <p><Notif_type> 0 - Notify 1 - Verify request (no response will be treated as permission grantet, see \$LCSLRV) 2 - Verify request (no response will be treated as permission denied, see \$LCSLRV)</p> <p><Loc_estimate_type> 0 - Current location 1 - Current or Last location known 2 - Initial location</p> <p><Requestor_Id_Encoding_type> <Client_Name_Encoding_type> 0 – UCS2 1 - GSM default format 2 - UTF-8 format 3 – invalid format</p> <p><Client_Name_Type> <Requestor_Id_Type> 0 - MSISDN. 1 – IMSI.</p>



	<p>2 – IPV4. 3 – IPV6. 4 – logical name. 5 – email-address. 6 – URL 7 – SIP URL. 8 – IMS Public Identity. 9 – USSD type. 10 – invalid type</p> <p><Client_Name> <Requestor_Id> <Codeword> is displayed as per data coding scheme.</p> <p><Service_Type_id> 0-127</p> <p><reqid> Integer that identifies the request.</p> <p>Note: <reqid> uniquely identifies the MT-LR sent by the network and the same <reqid> shall be returned in AT\$LCSLRV command in case the <Notif_type> is of type “Verify request”</p> <p>Note: The current setting is stored in NVM.</p>
AT\$LCSLRMT?	Read command returns the current value of parameter <mode>.
AT\$LCSLRMT=?	Test command returns the range of values for parameter <mode>.

5.1.6.13.16. Location request verification - \$LCSLRV

\$LCSLRV – Location request verification	SELINT 2
AT\$LCSLRV=<permission>,<reqid>	<p>Set command is used to verify a location request coming from the network. The verification is sent back to the network with request id.</p> <p>Parameter: <permission> 0 – permission denied (default value) 1 – permission granted</p> <p><reqid> uniquely identifies the MT-LR sent by the network</p>
AT\$LCSLRV=?	Test command returns the range of values for parameter <permission>.



5.1.6.13.17. LCS certificate - \$LTC

\$LTC – LCS certificate	SELINT 2
AT\$LTC=<string>,<total_message_length>,<seq_no>,<Security_Object_Type>	<p>Set command is used to pass the security objects (e.g. certificate, key) to the Transport Layer Security Protocol (binary string). The certificate shall be in hexadecimal format (each octet of the certificate is given as two IRA character long hexadecimal number).</p> <p>Parameter:</p> <p><string> - the string certificate segment (max 300 characters per segment)</p> <p><total_message_length> - The total size of the certificate to be received 1-4096</p> <p><seq_no> - The sequence number of the segment. 1-13</p> <p><Security_Object_Type> 0: Root Certificate</p> <p>NOTE: The last two certificates are stored in NVM.</p>
AT\$LTC	<p>Execution command deletes the certificates stored in NVM.</p>
AT\$LTC?	<p>Read command provides the first 300 characters of each valid certificate stored in NVM in the format:</p> <p>\$LTC: <string>,<total_message_length>,1, <Security_Object_Type></p> <p>If no certificate is stored the read command provides:</p> <p>\$LTC: “”,0,1 ,<Security_Object_Type></p>
AT\$LTC=?	<p>Test command returns the range of values for parameters <total_message_length>,<seq_no> and <Security_Object_Type></p>



5.1.6.13.18. Lock context for LCS use - \$LCSLK

\$LCSLK – Lock context for LCS use		SELINT 2
AT\$LCSLK=<mode>[,<cid>]	<p>Set command is used to reserve a cid for LCS.</p> <p>Parameters:</p> <p><mode> 0 – unlock the current cid available for LCS use 1 – lock the specified cid in order to setup/release a control link for LCS use only</p> <p><cid> - PDP context identifier 1..5 - numeric parameter which specifies a particular PDP context definition</p> <p>Note: <cid> is mandatory if <mode> is set to lock, otherwise shall be omitted.</p> <p>Note: the set command returns ERROR if the current cid and/or the previously set are in use.</p> <p>Note: The current setting is stored in NVM.</p>	
AT\$LCSLK?	Read command returns the current value of parameters <mode> and <cid> (if <mode> is lock).	
AT\$LCSLK=?	Test command returns the range of values for parameters <mode> and <cid>	



5.1.6.14.1. Audio Basic configuration

#CAP - Change Audio Path		SELINT2
AT#CAP=[<n>]	<p>It has no effect and is included only for backward compatibility.</p> <p>Parameter: <n>: (0-2)</p>	
AT#CAP?	<p>Read command reports the set value of the parameter <n> in the format:</p> <p>#CAP: <n>.</p>	
AT#CAP=?	Test command reports the supported values for the parameter <n>.	

#SRS - Select Ringer Sound	SELINT 2
AT#SRS= [<n>,<tout>]	<p>Set command sets the ringer sound.</p> <p>Parameters:</p> <p><n> - ringing tone 0 - current ringing tone 1..<i>max</i> - ringing tone number, where <i>max</i> can be read by issuing the Test command AT#SRS=?.</p> <p><tout> - ringing tone playing timer in units of seconds. 0 - ringer is stopped (if present) and current ringer sound is set. 1..60 - ringer sound playing for <tout> seconds and, if <n> > 0, ringer sound <n> is set as default ringer sound.</p> <p>Note: when the command is issued with <n> > 0 and <tout> > 0, the <n> ringing tone is played for <tout> seconds and stored as default ringing tone.</p> <p>Note: if command is issued with <n> > 0 and <tout> = 0, the playing of the ringing is stopped (if present) and <n> ringing tone is set as current.</p> <p>Note: if command is issued with <n> = 0 and <tout> > 0 then the current ringing tone is played for <tout> seconds.</p> <p>Note: if both <n> and <tout> are 0 then the default ringing tone is set as current and ringing is stopped.</p> <p>Note: If all parameters are omitted then the behaviour of Set command is the same as Read command</p>



#SRS - Select Ringer Sound		SELINT 2
AT#SRS?	Read command reports current selected ringing and its status in the form: #SRS: <n>,<status> where: <n> - ringing tone number 1.. <i>max</i> <status> - ringing status 0 - selected but not playing 1 - currently playing	
AT#SRS=?	Test command reports the supported values for the parameters <n> and <tout>	

5.1.6.14.1.3. Select Ringer Path - #SRP

#SRP - Select Ringer Path		SELINT 2
AT#SRP=[<n>]	It has no effect and is included only for backward compatibility. Parameter: <n>: (0-3)	
AT#SRP?	Read command reports the set value of the parameter <n> in the format: #SRP: <n>.	
AT#SRP=?	Test command reports the supported values for the parameter <n>.	
Example	AT#SRP=? #SRP: (0-3) OK AT#SRP=3 OK	

5.1.6.14.1.4. Handsfree Microphone Gain - #HFMICG

#HFMICG - Handsfree Microphone Gain		SELINT 2
AT#HFMICG=[<level>]	It has no effect and is included only for backward compatibility. Parameter: <level>: 0..7 - (factory default = 4)	
AT#HFMICG?	Read command returns the current set value for parameter <level>, in the format: #HFMICG: <level>	
AT#HFMICG=?	Test command returns the supported range of values of parameter <level>.	



5.1.6.14.1.5. Handset Microphone Gain - #HSMICG

#HSMICG - Handset Microphone Gain		SELINT 2
AT#HSMICG= [<level>]	Set command sets the handset microphone input gain Parameter: <level>: handset microphone input gain 0..7 - handset microphone gain (+6dB/step, factory default = 0)	
AT#HSMICG?	Read command returns the current handset microphone input gain, in the format: #HSMICG: <level>	
AT#HSMICG=?	Test command returns the supported range of values of parameter <level>.	

5.1.6.14.1.6. Handsfree Receiver Gain - #HFRECG

#HFRECG - Handsfree Receiver Gain		SELINT 2
AT#HFRECG= <level>	It has no effect and is included only for backward compatibility. Parameter: <level>: 0..6 - (factory default = 0) <i>Note: This parameter is saved in NVM issuing AT+W command.</i>	
AT#HFRECG?	Read command returns the current value of parameter <level>, in the format: #HFRECG: <level>	
AT#HFRECG =?	Test command returns the supported range of values of parameter <level>.	

5.1.6.14.1.7. Handset Receiver Gain - #HSRECG

#HSRECG - Handset Receiver Gain		SELINT 2
AT#HSRECG= <level>	Set command sets the handset analogue output gain Parameter: <level>: handset analogue output gain 0..6 - handset analogue output (-3dB/step, default value = 0) <i>Note: This parameter is saved in NVM issuing AT+W command.</i>	
AT#HSRECG?	Read command returns the current handset analog output gain, in the format: #HSRECG: <level>	
AT#HSRECG =?	Test command returns the supported range of values of parameter <level>.	



5.1.6.14.1.8. Set Handsfree Sidetone - #SHFSD

#SHFSD - Set Handsfree Sidetone		SELINT 2
AT#SHFSD= [<mode>]	It has no effect and is included only for backward compatibility. Parameter: <mode> (0,1) - (factory default is 0) Note: This setting returns to default after power off.	
AT#SHFSD?	Read command reports the value of parameter <mode>, in the format: #SHFSD: <mode>	
AT#SHFSD=?	Test command returns the supported range of values of parameter <mode>.	

5.1.6.14.1.9. Set Handset Sidetone - #SHSSD

#SHSSD - Set Handset Sidetone		SELINT 2
AT#SHSSD= <mode>	Set command enables/disables the sidetone on handset audio output. Parameter: <mode> 0 - disables the handset sidetone 1 - enables the handset sidetone (factory default) <i>Note: This parameter is saved in NVM issuing AT&W command.</i>	
AT#SHSSD?	Read command reports whether the headset sidetone is currently enabled or not, in the format: #SHSSD: <mode>	
AT#SHSSD=?	Test command returns the supported range of values of parameter <mode>.	

5.1.6.14.1.10. Speaker Mute Control - #SPKMUT

#SPKMUT - Speaker Mute Control		SELINT 2
AT#SPKMUT=<n>	Set command enables/disables the global muting of the speaker audio line, for every audio output (ring, incoming sms, voice, Network coverage) Parameter: <n> 0 - mute off, speaker active (factory default) 1 - mute on, speaker muted. Note: this command mutes/activates both speaker audio paths, internal speaker and external speaker.	
AT#SPKMUT?	Read command reports whether the muting of the speaker audio line during a voice	



#SPKMUT - Speaker Mute Control		SELINT 2
	call is enabled or not, in the format: #SPKMUT: <n>	
AT#SPKMUT=?	Test command reports the supported values for <n> parameter.	

5.1.6.14.1.11. Analog Microphone Gain - #ANAMICG

#ANAMICG – Analog Microphone Gain		SELINT 2
AT#ANAMICG=<gain_level>	This command allows setting the microphone analog gain through 15 levels by 3 dB steps Parameters: <gain_level> : analog microphone gain 0..14 - analog microphone input gain (+3dB/step, factory default = 5)	
AT#ANAMICG?	Read command returns the current analog microphone gain level, in the format: #ANAMICG: <gain_level>	
AT#ANAMICG =?	Test command reports the supported range of values for parameters <gain_level> .	

5.1.6.14.1.12. Digital Microphone Gain - #DIGMICG

#DIGMICG – Digital Microphone Gain		SELINT 2
AT#DIGMICG=<gain_level>	This command allows setting the microphone digital gain through 46 levels by 1 dB steps Parameters: <gain_level> : digital microphone input gain 0..45 - digital microphone input gain (+1dB/step, factory default = 24) NOTE: This command substitutes the #HSMICG command and has the same default values.	
AT#DIGMICG?	Read command returns the current digital microphone gain level, in the format: #DIGMICG: <gain_level>	
AT#DIGMICG =?	Test command reports the supported range of values for parameters <gain_level> .	



5.1.6.14.1.13. Echo Reducer Configuration - #ECHOCFG

#ECHOCFG – Echo Reducer Configuration	SELINT 2
<p>AT#ECHOCFG=<par_1>[,<par_2>[,...,<par_N>]]</p>	<p>Set command writes values in echo reducer parameters. It is not allowed if active audio profile is 0.</p> <p>The module responds to the set command with the prompt '>' and waits for the data to send.</p> <p>Parameters:</p> <p><par_1> 0 – configure all parameters, module awaits 39 values 1,2,...,39 – configure single parameters, module awaits 1 value</p> <p><par_i> with i = {2;N} 1,2,...,39 – configure every parameter specified</p> <p>After '>' to complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex).</p> <p>Data shall be written in Hexadecimal Form with 4 digits for every <par_i> value provided by set command.</p> <p>If data are successfully sent, then the response is OK. If data sending fails for some reason, an error code is reported.</p> <p>Parameters can be saved in NVM using AT#PSAV command and are available for audio profiles 1,2,3. For audio profile 0 the values are fixed.</p> <p>Note: Configuring single parameters, it is allowed to enter a maximum of 32 parameters.</p>
<p>AT#ECHOCFG?</p>	<p>Read command reports the currently set parameters in the format:</p> <p>#ECHOCFG: <par_1><par2>...<parN></p> <p><par_i>: Full set of registers values dumped in hexadecimal form, 39 words (156 characters).</p> <p>It is not allowed if active audio profile is 0.</p>
<p>AT#ECHOCFG=?</p>	<p>Test command reports supported range of values for all parameters in the format:</p> <p>#ECHOCFG: <i>, (<low_i>-<high_i>)</p>



	<p>Where</p> <p><i>: Parameter index</p> <p><low_i>: Lower limit of <par_i></p> <p><high_i>: High limit of <par_i></p>
--	---



5.1.6.14.2. Tones configuration

5.1.6.14.2.1. Signaling Tones Mode - #STM

#STM - Signaling Tones Mode		SELINT 2
AT#STM= [<mode>]	Set command enables/disables the signaling tones output on the audio path Parameter: <mode> - signaling tones status 0 - signaling tones disabled 1 - signaling tones enabled 2 - all tones disabled Note: AT#STM=0 has the same effect as AT+CALM=2; AT#STM=1 has the same effect as AT+CALM=0.	
AT#STM?	Read command reports whether the current signaling tones status is enabled or not, in the format: #STM: <mode>	
AT#STM=?	Test command reports supported range of values for parameter <mode>.	

5.1.6.14.2.2. Tone Playback - #TONE

#TONE - Tone Playback		SELINT 2
AT#TONE=<tone> [,<duration>]	Execution command allows the reproduction of DTMF tones, standard free tone, standard busy tone and a set of user defined tones for a certain time. Parameters: <tone> - ASCII characters, range is ((0-9),#,*,(A-D),(G-L),Y,Z); - (0-9), #,*,(A-D): DTMF tone - (G-L): User Defined Tones - Y: free tone - Z: busy tone <duration> - Duration of current tone in 1/10 of Sec. 1..300 - tenth of seconds (default is 30)	
AT#TONE=?	Test command returns the supported range of values for parameters <tone> and <duration>.	
Note:	See AT#UDTSET command to set user defined tones	



5.1.6.14.2.3. Extended tone generation - #TONEEXT

#TONEEXT – Extended tone generation		SELINT 2
AT#TONEEXT= <toneId>,<act>	<p>Execution command allows the reproduction of DTMF tones, standard free tone, standard busy tone and a set of user defined tones for a infinite time, or stop the running tone</p> <p>Parameters:</p> <p>< toneId > - ASCII characters in the set (0-9), #, *, (A-D), (G-L), Y, Z ;</p> <ul style="list-style-type: none"> - (0-9), #, *, (A-D) : DTMF tone - (G-L) : User Defined Tones¹⁰. - y : free tone - z: busy tone <p>< act > - Action to be performed.</p> <ul style="list-style-type: none"> - 0: Stop the <toneId> if running. - 1: Start the <toneId>. 	
AT#TONEEXT=?	Test command returns the range of supported values for parameter <toneId>,<act>.	

5.1.6.14.2.4. Tone Classes Volume - #TSVOL

#TSVOL – Tone Classes Volume		SELINT 2
AT#TSVOL= <class>, <mode> [,<volume>]	<p>Set command is used to select the volume mode for one or more tone classes.</p> <p>Parameters:</p> <p><class> -sum of integers each representing a class of tones which the command refers to</p> <ul style="list-style-type: none"> 1 - GSM tones 2 - ringer tones 4 - alarm tones 8 - signalling tones 16 - DTMF tones 32 - SIM Toolkit tones 64 - user defined tones 128 – Dial tones 255 - all classes <p><mode> - it indicates which volume is used for the classes of tones represented by <class></p> <ul style="list-style-type: none"> 0 - default volume is used 1 - the volume <volume> is used <p><volume> - volume to be applied to the set of classes of tones represented by</p>	

¹⁰ See also AT#UDTSET, AT#UDTRST and AT#UDTSAV command description following in this document.



#TSVOL – Tone Classes Volume		SELINT 2
	<p><class>; it is mandatory if <mode> is 1. 0..max - the value of max can be read issuing the Test command AT#TSVOL=?</p> <p>Note: The class DTMF Tones (<class>=16) refers only to the volume for locally generated DTMF tones. It doesn't affect the level of the DTMF generated by the network as result of AT+VTS command</p>	
AT#TSVOL?	<p>Read command returns for each class of tones the last setting of <mode> and, if <mode> is not 0, of <volume> too, in the format:</p> <p>#TSVOL: 1,<mode1>[,<volume1>]<CR><LF> ... #TSVOL:128,<mode128>[,<volume128>]</p>	
AT#TSVOL=?	<p>Test command returns the supported range of values of parameters <class>, <mode> and <volume>.</p>	
Example	<p>AT#TSVOL=64,1,5</p> <p>OK</p> <p>AT#TSVOL? #TSVOL:1,0 #TSVOL:2,0 #TSVOL:4,1,5 #TSVOL:8,0 #TSVOL:16,1,5 #TSVOL:32,0 #TSVOL:64,1,5 #TSVOL:128,0</p> <p>OK</p>	



5.1.6.14.2.5. User Defined Tone SET - #UDTSET command

#UDTSET – User Defined Tone SET		SELINT 2
AT#UDTSET= <tone> ,<F1>,<A1> [,<F2>,<A2> [,<F3>,<A3>]]	Set command sets frequency and amplitude composition for a User Defined Tone. Parameters: <tone> - tone index (G,H,I,J,K,L) <Fi> - frequency in Hz; range is (300,3000) in step of 1 Hz <Ai> - amplitude in dB; range is (10,100) in step of 1 dB Note: Ai = 100 is equal to the max value of the single tone. Lower values attenuate output to the difference between 100 and the selected amplitude (ex: Ai = 80 is equal to 100-80 = -20dB). Note: issuing AT&F1 or AT&Z has the effect to set the parameters with the last saved in NVM values Note: Ai = 0 and Fi = 0 are only values for uninitialized parameters and can't be issued by AT command. Every time the set command is issued, the unspecified parameters are automatically reset to zero. (Ai,Fi) issuing needs also (Aj,Fj) with j<i.	
AT# UDTSET?	Read command returns the current settings for the tones: #UDTSET: G,<F1>,<A1>,<F2>,<A2>,<F3>,<A3> #UDTSET: H, <F1>,<A1>,<F2>,<A2>,<F3>,<A3> #UDTSET: I, <F1>,<A1>,<F2>,<A2>,<F3>,<A3> #UDTSET: J, <F1>,<A1>,<F2>,<A2>,<F3>,<A3> #UDTSET: K, <F1>,<A1>,<F2>,<A2>,<F3>,<A3> #UDTSET: L, <F1>,<A1>,<F2>,<A2>,<F3>,<A3>	
AT# UDTSET =?	Test command returns the supported range of values for <tone> , <Fi> and <Ai> parameters.	



5.1.6.14.2.6. User Defined Tone SAVE - #UDTSAV command

#UDTSAV – User Defined Tone SAVe		SELINT 2
AT#UDTSAV	Execution command saves the actual values of frequency and amplitude parameters that have been set with the command #UDTSET	
AT#UDTSAV =?	Test command returns the OK result code.	
Example	AT#UDTSAV OK Current tones are saved in NVM	

5.1.6.14.2.7. User Defined Tone Reset - #UDTRST command

#UDTRST – User Defined Tone ReSeT		SELINT 2
AT#UDTRST	Execution command resets to the default set the actual values of frequency and amplitude parameters that can be set with the command #UDTSET.	
AT#UDTRST =?	Test command returns the OK result code.	
Example	AT#UDRST OK The default value tones are restored in NVM	



5.1.6.14.3. Audio profiles

5.1.6.14.3.1. Audio Profile Factory Configuration - #PRST

#PRST - Audio Profile Factory Configuration		SELINT 2
AT#PRST	Execution command resets the actual audio parameters in the NVM of the device to the default set. It is not allowed if active audio profile is 0. The audio parameters to reset are: <ul style="list-style-type: none"> - Uplink path biquad filters - Downlink path biquad filters 	
AT#PRST=?	Test command returns the OK result code.	
Example	AT#PRST OK <i>Current audio profile is reset</i>	

5.1.6.14.3.2. Audio Profile Configuration Save - #PSAV

#PSAV - Audio Profile Configuration Save		SELINT 2
AT#PSAV	Execution command saves the actual audio parameters in the NVM of the device. It is not allowed if active audio profile is 0. The audio parameters to store are: <ul style="list-style-type: none"> - Uplink path biquad filters - Downlink path biquad filters 	
AT#PSAV=?	Test command returns the OK result code.	
Example	AT#PSAV OK <i>Current audio profile is saved in NVM</i>	



5.1.6.14.3.3. Audio Profile Selection - #PSEL

#PSEL - Audio Profile Selection		SELINT 2
AT#PSEL=<prof>	Set command selects the active audio profile Parameter: <prof>: current profile 0 - standard profile 1..3 - extended profile, modifiable. <i>Note: This parameter is saved in NVM issuing AT&W command.</i>	
AT#PSEL?	The read command returns the active profile in the format: #PSEL:<prof>	
AT#PSEL=?	Test command returns the supported range of values of parameter <prof>.	



5.1.6.14.4.1. Uplink Path Biquad Filters - #BIQUADIN

#BIQUADIN - Uplink Path Biquad Filters	SELINT 2
AT# BIQUADIN= <a_{F0}> [,<a_{F1}> [,<a_{F2}> [,<b_{F1}> [,<b_{F2}> [,<a_{S0}> [,<a_{S1}> [,<a_{S2}> [,<b_{S1}> [,<b_{S2}>]]]]]]]]]	<p>Set command allows to configure the parameters of the two cascaded digital biquad filters $H_{First}(z) \cdot H_{Second}(z)$ in Uplink path (sending). It is not allowed if active audio profile is 0.</p> <p>Parameters: <a_{Fn}>,<b_{Fn}>,<a_{Sn}>,<b_{Sn}> - they all are specific parameters for the calculation of digital biquad filters as follows:</p> $H_F(z) = \frac{a_{F0} + 2 \cdot a_{F1} \cdot z^{-1} + a_{F2} \cdot z^{-2}}{1 + 2 \cdot b_{F1} \cdot z^{-1} + b_{F2} \cdot z^{-2}}$ $H_S(z) = \frac{a_{S0} + 2 \cdot a_{S1} \cdot z^{-1} + a_{S2} \cdot z^{-2}}{1 + 2 \cdot b_{S1} \cdot z^{-1} + b_{S2} \cdot z^{-2}}$ <p>-32768..32767 - each value has to be interpreted as signed fixed point number in two's complement format with 15 fractional bits in a 16 bit word (Q15)</p> <p>Note: in the above formulas pay attention to the multiplier (2) for parameters <a_{F1}>,<a_{S1}>,<b_{F1}> and <b_{S1}> Parameters can be saved in NVM using AT#PSAV command and are available for audio profiles 1,2,3. For audio profile 0 the values are fixed.</p>
AT# BIQUADIN?	<p>Read command returns the parameters for the active profile in the format:</p> <p>#BIQUADIN: <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}> It is not allowed if active audio profile is 0.</p>
AT# BIQUADIN=?	<p>Test command returns the supported range of values for parameters <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}></p>



5.1.6.14.4.2. Extended Uplink Biquad Filters - #BIQUADINEX

#BIQUADINEX – Extended Uplink Biquad Filters	SELINT 2
<p>AT#BIQUADINEX= <a_{F0}> [,<a_{F1}> [,<a_{F2}> [,<b_{F1}> [,<b_{F2}> [,<a_{S0}> [,<a_{S1}> [,<a_{S2}> [,<b_{S1}> [,<b_{S2}>]]]]]]]]</p>	<p>Set command allows to configure the parameters of the two extended digital biquad filters $H_{First}(z) \cdot H_{Second}(z)$ in Uplink path (sending). It is not allowed if active audio profile is 0.</p> <p>Parameters: <a_{Fn}>,<b_{Fn}>,<a_{Sn}>,<b_{Sn}> - they all are specific parameters for the calculation of digital biquad filters as follows:</p> $H_F(z) = \frac{a_{F0} + 2 \cdot a_{F1} \cdot z^{-1} + a_{F2} \cdot z^{-2}}{1 + 2 \cdot b_{F1} \cdot z^{-1} + b_{F2} \cdot z^{-2}}$ $H_S(z) = \frac{a_{S0} + 2 \cdot a_{S1} \cdot z^{-1} + a_{S2} \cdot z^{-2}}{1 + 2 \cdot b_{S1} \cdot z^{-1} + b_{S2} \cdot z^{-2}}$ <p>-32768..32767 - each value has to be interpreted as signed fixed point number in two's complement format with 15 fractional bits in a 16 bit word (Q15)</p> <p>Note: in the above formulas pay attention to the multiplier (2) for parameters <a_{F1}>, <a_{S1}>, <b_{F1}> and <b_{S1}> Parameters can be saved in NVM using AT#PSAV command and are available for audio profiles 1,2,3. For audio profile 0 the values are fixed.</p>
<p>AT#BIQUADINEX?</p>	<p>Read command returns the parameters for the active profile in the format:</p> <p>#BIQUADINEX: <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}></p> <p>Note: It is not allowed if active audio profile is 0; in this case an ERROR is returned.</p>
<p>AT#BIQUADINEX=?</p>	<p>Test command returns the supported range of values for parameters <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}></p>



5.1.6.14.4.3. Cascaded filters - #BIQUADOUT

#BIQUADOUT - Downlink Path Biquad Filters	SELINT 2
<p>AT# BIQUADOUT= <a_{F0}> [,<a_{F1}> [,<a_{F2}> [,<b_{F1}> [,<b_{F2}> [,<a_{S0}> [,<a_{S1}> [,<a_{S2}> [,<b_{S1}> [,<b_{S2}>]]]]]]]]]</p>	<p>Set command allows to configure the parameters of the two cascaded digital biquad filters $H_{First}(z) \cdot H_{Second}(z)$ in Downlink path (receiving). It is not allowed if active audio profile is 0.</p> <p>Parameters: <a_{Fn}>, <b_{Fn}>, <a_{Sn}>, <b_{Sn}> - they all are specific parameters for the calculation of digital biquad filters as follows:</p> $H_F(z) = \frac{a_{F0} + 2 \cdot a_{F1} \cdot z^{-1} + a_{F2} \cdot z^{-2}}{1 + 2 \cdot b_{F1} \cdot z^{-1} + b_{F2} \cdot z^{-2}}$ $H_S(z) = \frac{a_{S0} + 2 \cdot a_{S1} \cdot z^{-1} + a_{S2} \cdot z^{-2}}{1 + 2 \cdot b_{S1} \cdot z^{-1} + b_{S2} \cdot z^{-2}}$ <p>-32768..32767 - each value has to be interpreted as signed fixed point number in two's complement format with 15 fractional bits in a 16 bit word (Q15)</p> <p>Note: in the above formulas pay attention to the multiplier (2) for parameters <a_{F1}>, <a_{S1}>, <b_{F1}> and <b_{S1}></p> <p>Parameters can be saved in NVM using AT#PSAV command and are available for audio profiles 1,2,3. For audio profile 0 the values are fixed.</p>
<p>AT# BIQUADOUT?</p>	<p>Read command returns the parameters for the active profile in the format:</p> <p># BIQUADOUT: <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}></p> <p>It is not allowed if active audio profile is 0.</p>
<p>AT# BIQUADOUT=?</p>	<p>Test command returns the supported range of values for parameters <a_{F0}>, <a_{F1}>, <a_{F2}>, <b_{F1}>, <b_{F2}>, <a_{S0}>, <a_{S1}>, <a_{S2}>, <b_{S1}>, <b_{S2}></p>



5.1.6.14.4.4. Extended Downlink Biquad Filters - #BIQUADOUTEX

#BIQUADOUTEX – Extended Downlink Biquad Filters	SELINT 2
AT#BIQUADOUTEX= <a_{F0}> [,<a_{F1}> [,<a_{F2}> [,<b_{F1}> [,<b_{F2}> [,<a_{S0}> [,<a_{S1}> [,<a_{S2}> [,<b_{S1}> [,<b_{S2}>]]]]]]]]]	<p>Set command allows to configure the parameters of the two extended digital biquad filters $H_{First}(z) \cdot H_{Second}(z)$ in Downlink path (receiving). It is not allowed if active audio profile is 0.</p> <p>Parameters: <a_{Fn}>,<b_{Fn}>,<a_{Sn}>,<b_{Sn}> - they all are specific parameters for the calculation of digital biquad filters as follows:</p> $H_F(z) = \frac{a_{F0} + 2 \cdot a_{F1} \cdot z^{-1} + a_{F2} \cdot z^{-2}}{1 + 2 \cdot b_{F1} \cdot z^{-1} + b_{F2} \cdot z^{-2}}$ $H_S(z) = \frac{a_{S0} + 2 \cdot a_{S1} \cdot z^{-1} + a_{S2} \cdot z^{-2}}{1 + 2 \cdot b_{S1} \cdot z^{-1} + b_{S2} \cdot z^{-2}}$ <p>-32768..32767 - each value has to be interpreted as signed fixed point number in two's complement format with 15 fractional bits in a 16 bit word (Q15)</p> <p>Note: in the above formulas pay attention to the multiplier (2) for parameters <a_{F1}>,<a_{S1}>,<b_{F1}> and <b_{S1}> Parameters can be saved in NVM using AT#PSAV command and are available for audio profiles 1,2,3. For audio profile 0 the values are fixed.</p>
AT#BIQUADOUTEX?	<p>Read command returns the parameters for the active profile in the format:</p> <p>#BIQUADOUTEX: <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}></p> <p>Note: It is not allowed if active audio profile is 0; in this case an ERROR is returned.</p>
AT#BIQUADOUTEX=?	<p>Test command returns the supported range of values for parameters <a_{F0}>,<a_{F1}>,<a_{F2}>,<b_{F1}>,<b_{F2}>,<a_{S0}>,<a_{S1}>,<a_{S2}>,<b_{S1}>,<b_{S2}></p>



5.1.6.14.5. Echo canceller configuration

5.1.6.14.5.1. Handsfree Echo Canceller - #SHFEC

#SHFEC - Handsfree Echo Canceller		SELINT 2
AT#SHFEC= [<mode>]	It has no effect and is included only for backward compatibility. Parameter: <mode> (0,1) - (0 is factory default) Note: This setting returns to default after power off.	
AT#SHFEC?	Read command reports the value of parameter <mode>, in the format: #SHFEC: <mode>	
AT#SHFEC=?	Test command returns the supported range of values of parameter <mode>.	

5.1.6.14.5.2. Handset Echo Canceller - #SHSEC

#SHSEC - Handset Echo Canceller		SELINT 2
AT#SHSEC = <mode>	Set command enables/disables the echo canceller function on audio handset output. Parameter: <mode> 0 - disables echo canceller for handset mode (default) 1 - enables echo canceller for handset mode <i>Note: This parameter is saved in NVM issuing AT&W command.</i>	
AT#SHSEC?	Read command reports whether the echo canceller function on audio handset output is currently enabled or not, in the format: #SHSEC: <mode>	
AT#SHSEC =?	Test command returns the supported range of values of parameter <mode>.	



5.1.6.14.5.3. Handsfree Automatic Gain Control - #SHFAGC

#SHFAGC - Handsfree Automatic Gain Control		SELINT 2
AT# SHFAGC = <mode>	<p>It has no effect and is included only for backward compatibility.</p> <p>Parameter: <mode> (0,1) - (0 is default)</p> <p><i>Note: This parameter is saved in NVM issuing AT&W command.</i></p>	
AT# SHFAGC?	<p>Read command reports the value of parameter <mode>, in the format:</p> <p>#SHFAGC: <mode></p>	
AT# SHFAGC =?	<p>Test command returns the supported range of values of parameter <mode>.</p>	

5.1.6.14.5.4. Handset Automatic Gain Control - #SHSAGC

#SHSAGC - Handset Automatic Gain Control		SELINT 2
AT#SHSAGC = <mode>	<p>Set command enables/disables the automatic gain control function on audio handset input.</p> <p>Parameter: <mode> 0 - disables automatic gain control for handset mode (default) 1 - enables automatic gain control for handset mode</p> <p><i>Note: This parameter is saved in NVM issuing AT&W command.</i></p>	
AT#SHSAGC?	<p>Read command reports whether the automatic gain control function on audio handset input is currently enabled or not, in the format:</p> <p>#SHSAGC: <mode></p>	
AT#SHSAGC =?	<p>Test command returns the supported range of values of parameter <mode>.</p>	



5.1.6.14.5.5. Handsfree Noise Reduction - #SHFNR

#SHFNR - Handsfree Noise Reduction		SELINT 2
AT#SHFNR = <mode>	<p>It has no effect and is included only for backward compatibility.</p> <p>Parameter: <mode> (0,1) - (0 is default)</p> <p><i>Note: This parameter is saved in NVM issuing AT&W command.</i></p>	
AT#SHFNR?	<p>Read command reports the value of parameter <mode> , in the format:</p> <p>#SHFNR: <mode></p>	
AT#SHFNR=?	<p>Test command returns the supported range of values of parameter <mode>.</p>	

5.1.6.14.5.6. Handset Noise Reduction - #SHSNR

#SHSNR - Handset Noise Reduction		SELINT 2
AT# SHSNR = <mode>	<p>Set command enables/disables the noise reduction function on audio handset input.</p> <p>Parameter: <mode> 0 - disables noise reduction for handset mode (default) 1 - enables noise reduction for handset mode</p> <p><i>Note: This parameter is saved in NVM issuing AT&W command.</i></p>	
AT# SHSNR?	<p>Read command reports whether the noise reduction function on audio handset input is currently enabled or not, in the format:</p> <p># SHSNR: <mode></p>	
AT# SHSNR=?	<p>Test command returns the supported range of values of parameter <mode>.</p>	



5.1.6.14.6. Embedded DTMF decoder

5.1.6.14.6.1. Embedded DTMF decoder enabling - #DTMF

#DTMF – Embedded DTMF decoder enabling		SELINT 2
AT#DTMF=<mode>	<p>Set command enables/disables the embedded DTMF decoder.</p> <p>Parameters:</p> <p><mode>:</p> <p>0 – disable DTMF decoder (default)</p> <p>1 – enables DTMF decoder</p> <p>2 – enables DTMF decoder without URC notify</p> <p>Note: if <mode>=1, the receiving of a DTMF tone is pointed out with an unsolicited message through AT interface in the following format:</p> <p>#DTMFEV: x with x as the DTMF digit</p> <p>Note: the duration of a tone should be not less than 50ms.</p> <p>Note: the value set by command is not saved and a software or hardware reset restores the default value.</p> <p>The value can be stored in NVM using profiles.</p> <p>Note: When DTMF decoder is enabled, PCM playing and recording are automatically disabled (AT#SPCM will return error).</p>	
AT#DTMF?	<p>Read command reports the currently selected <mode> in the format:</p> <p>#DTMF: <mode></p>	
AT#DTMF=?	<p>Test command reports supported range of values for all parameters.</p>	



5.1.6.14.7. Digital Voice Interface

5.1.6.14.7.1. Digital Voiceband Interface - #DVI

#DVI - Digital Voiceband Interface		SELINT 2
AT#DVI=<mode> [,<dviport>, <clockmode>]	<p>Set command enables/disables the Digital Voiceband Interface.</p> <p>Parameters:</p> <p><mode> - enables/disables the DVI. 0 - disable DVI; 1 - enable DVI; audio is forwarded to the DVI block (factory default) 2 - reserved</p> <p><dviport> 2 - DVI port 2 will be used.</p> <p><clockmode> 0 - DVI slave 1 - DVI master (factory default)</p> <p>NOTE: for further information see “HE910 Digital Voice Interface Application Note”</p>	
AT#DVI?	<p>Read command reports last setting, in the format:</p> <p>#DVI: <mode>,<dviport>,<clockmode></p>	
AT#DVI=?	Test command reports the range of supported values for parameters <mode>,<dviport> and <clockmode>	
Example	<p>AT#DVI=1,2,1 OK</p> <p><i>DVI is configured as master providing on DVI Port #2 (the only available)</i></p>	



5.1.6.14.7.2. Extended Digital Voiceband Interface - #DVIEXT

#DVIEXT - Digital Voiceband Interface Extension	SELINT 2
AT#DVIEXT=<config>,<samplewidth>,<audiomode>,<edge>]]]	<p>Set command configures the Digital Voiceband Interface.</p> <p>Parameters:</p> <p><config> 0 – Burst Mode 1 – Normal Mode (factory default)</p> <p><samplewidth> 0 – 16 bits per sample (factory default) 1 – 18 bits per sample 2 – 20 bits per sample 3 – 24 bits per sample 4 – 32 bits per sample</p> <p><audiomode> 0 – Mono Mode 1 – Dual Mono (factory default)</p> <p><edge> 0 – data bit is transmitted on falling edge of clock and sampled on rising edge of clock (factory default) 1 – data bit is transmitted on rising edge of clock and sampled on falling edge of clock</p> <p>Note: <edge> parameters is valid only in Burst Mode, in Normal Mode shall be 0.</p>
AT#DVIEXT?	<p>Read command reports last setting, in the format:</p> <p>#DVICFG: <config>,<samplewidth>,<audiomode>,<edge></p>
AT#DVIEXT=?	<p>Test command reports the range of supported values for parameters:</p> <p><config>,<samplewidth>,<audiomode>,<edge></p>
Example	



5.1.6.14.8. Extended Digital Voiceband Interface - #DVICLK

#DVIEXT - Digital Voiceband Interface Extension		SELINT 2
AT#DVICLK=<clk>	<p>Set command configures and activates the DVICLK clock signal.</p> <p>Parameters:</p> <p><clk></p> <ul style="list-style-type: none"> 0 – Disable (factory default) 1 – DVI Clock activated at 256KHz 2 – DVI Clock activated at 384KHz 3 – DVI Clock activated at 512KHz <p>Note: the commands #DVI, #DVIEXT, #OAP can turn off the DVICLK signal or change its frequency.</p> <p>Note: after setting the DVICLK frequency through #DVICLK command, a voice call does not modify the DVICLK setting.</p>	
AT#DVICLK?	<p>Read command reports last setting, in the format:</p> <p>#DVICLK: <clk></p>	
AT#DVICLK=?	<p>Test command reports the range of parameter <clk></p>	



5.1.6.14.9. Miscellaneous audio commands

5.1.6.14.9.1. PCM Play and Receive - #SPCM

#SPCM - PCM Play And Receive	SELINT 2								
AT#SPCM=<mode>,<dir>[,<format>]	<p>Set command allows user either to send speech sample coming from microphone or downlink audio channel to serial port in PCM format, or to play a PCM stream coming from serial port to speaker or uplink audio channel.</p> <p>As showed in the table below if <mode> = 3 and <dir> = 1 then the speech coming from serial port with selected PCM <format> is sent to uplink and, at the same time, the speech coming from downlink is sent to serial port with selected PCM <format>.</p> <p>An active speech call is needed when sending/receiving to/from audio channel.</p> <p>Parameters:</p> <p><mode>: action to be execute;</p> <ul style="list-style-type: none">1 - play PCM stream from serial to selected direction <dir>.2 - send speech from selected direction <dir> to serial.3 - send/receive speech to/from selected direction <dir> <p><dir>: Select the audio path.</p> <ul style="list-style-type: none">0 - send/receive to/from audio front end1 - send/receive to/from audio channel2 - reserved <p>< format >: PCM bits format</p> <ul style="list-style-type: none">0 - 8 bit (factory default)1 - 16 bit <p>Note: Execution command switches module in online mode. Module moves back to command mode either after entering the escape sequence +++ or as a consequence of a DTR transition.</p> <p>Note: Using 16 bit it is mandatory to set +IPR at least to 230400.</p> <p>The following table summarizes the status of audio path during a speech call for different configurations and with sidetone disabled:</p> <table><tr><th></th><th>mode = 1</th><th>mode = 2</th><th>mode = 3</th></tr><tr><td>dir = 0</td><td>Uplink off / Downlink on PCM stream on</td><td>Uplink off / Downlink off PCM stream from</td><td>Not supported</td></tr></table>		mode = 1	mode = 2	mode = 3	dir = 0	Uplink off / Downlink on PCM stream on	Uplink off / Downlink off PCM stream from	Not supported
	mode = 1	mode = 2	mode = 3						
dir = 0	Uplink off / Downlink on PCM stream on	Uplink off / Downlink off PCM stream from	Not supported						



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

	<div> <div>dir = 1</div> <div> Uplink on / Downlink off PCM stream on Uplink </div> <div> Uplink off / Downlink on PCM stream from Downlink </div> <div> Uplink on / Downlink on PCM stream to/from Uplink/Downlink </div> </div> <p>Sidetone is active for default.</p> <p>Note: When DTMF decoder is enabled, PCM playing and recording are automatically disabled (AT#SPCM will return error).</p>
AT#SPCM=?	<p>Test command returns the supported range of values for parameters <mode>, <dir> and <format>.</p> <p>#SPCM: <mode>,<dir>,<format></p>
Example	<p>AT#SPCM=1,0,0 CONNECT +++ NO CARRIER</p> <p>Note: after the CONNECT, 8Khz 8bit PCM stream has to be sent to serial port</p> <p>AT#SPCM=2,0,0 CONNECT +++ NO CARRIER</p> <p>Note: after the CONNECT, 8Khz 8bit PCM stream can be read from serial port</p>

5.1.6.14.9.2. TeleType Writer - #TTY

#TTY - TeleType Writer	SELINT 2
AT#TTY=<support>	<p>Set command enables/disables the TTY functionality.</p> <p>Parameter: <support> 0 - disable TTY functionality (factory default) 1 - enable TTY functionality</p> <p>Note: the value set by command is directly stored in NVM and doesn't depend on the specific AT instance.</p>
AT#TTY?	<p>Read command returns whether the TTY functionality is currently enabled or not, in the format:</p> <p>#TTY: <support></p>
AT#TTY=?	<p>Test command reports the supported range of values for parameter <support>.</p>



5.1.6.15. Jammed Detect & Report AT Commands

5.1.6.15.1. Jammed Detect & Report - #JDR

#JDR - Jammed Detect & Report	SELINT 2
AT#JDR= [<mode> [,<MNPL>,<DCMN>]]	<p>Set command allows to control the Jammed Detect & Report feature.</p> <p>The MODULE can detect if a communication Jammer is active in its range and give indication to the user of this condition either on the serial line with an unsolicited code or on a dedicated GPIO by rising it.</p> <p>Parameters:</p> <p><mode> - behaviour mode of the Jammed Detect & Report</p> <ul style="list-style-type: none"> 0 - disables Jammed Detect & Report (factory default) 1 - enables the Jammed Detect; the Jammed condition is reported on pin GPIO2/JDR GPIO2/JDR Low - Normal Operating Condition GPIO2/JDR High - Jammed Condition. 2 - enables the Jammed Detect; the Jammed condition is reported with a single unsolicited result code on serial line, in the format: <p>#JDR: <status> where: <status> JAMMED - Jammed condition detected OPERATIVE - Normal Operating condition restored. This code will be shown only after a jammed condition has occurred. <ul style="list-style-type: none"> 3 - enables the Jammed Detect; the MODULE will make both the actions as for <mode>=1 and <mode>=2. 4 - enables the Jammed Detect; the Jammed condition is reported with an unsolicited code every 3s on serial line, in the format: <p>#JDR: <status> where: <status> JAMMED - Jammed condition detected OPERATIVE - Normal Operating condition restored. This code will be shown only after a jammed condition has occurred. <ul style="list-style-type: none"> 5 - enables the Jammed Detect; the MODULE will make both the actions as for <mode>=1 and <mode>=4. 6 - enables the Jammed Detect (this value is available only for 10.00.xxx release); the Jammed condition is reported in the format: <p>#JDR: <status> where: <status> JAMMED - Jammed condition detected OPERATIVE - Normal Operating condition restored. This code will be</p> </p></p>



#JDR - Jammed Detect & Report		SELINT 2
	<p>shown only after a jammed condition has occurred UNKNOWN – default state before first successful PLMN searching</p> <p><MNPL> - Maximum Noise Power Level 0..127 (factory default is 70) (NOT AVAILABLE)</p> <p><DCMN> - Disturbed Channel Minimum Number 0..254 (factory default is 5) (NOT AVAILABLE)</p>	
AT#JDR?	<p>Read command reports the current behaviour mode, Maximum Noise Power Level and Disturbed Channel Minimum Number, in the format:</p> <p>#JDR: <mode>,<MNPL>,<DCMN></p>	
AT#JDR=?	<p>Test command reports the supported range of values for the parameters <mode>,<MNPL> and <DCMN></p>	
Example	<p>AT#JDR=2 OK ...jammer enters in the range... #JDR: JAMMED ...jammer exits the range... #JDR: OPERATIVE</p> <p>AT#JDR=6 #JDR: JAMMED //when jammed OK</p> <p>AT#JDR=6 #JDR: OPERATIVE //when in normal operating mode OK</p> <p>AT#JDR=6 #JDR: UNKNOWN // default state before 1st PLMN searching OK</p>	
Note	<p>If the device is installed in a particular environment where the default values are not satisfactory the two parameters <MNPL> and <DCMN> permit to adapt the detection to all conditions.</p>	



5.1.6.15.2. Open Audio Loop - #OAP

#OAP - Open Audio Loop		SELINT 2
AT#OAP=[<mode>]	Set command sets Open Audio Path. Parameter: 0 - disables Open Audio Path (default) 1 - enables Open Audio Path	
AT#OAP?	Read command reports whether the Open Audio Path is currently enabled or not, in the format: #OAP: <mode>	
AT#OAP=?	Test command returns the supported range of values of parameter <mode>.	
Note	The audio loop will be established between microphone and speaker using sidetone scaling value.	



5.1.6.16. OTA Commands

5.1.6.16.1. OTA Set Network Access Point - #OTASNAP

#OTASNAP – OTA Set Network Access Point		SELINT 2
AT#OTASNAP= <addr>[,<company_name>]	<p>Set command specifies the SMS number that the module has to use to send the Remote Registration SM. If the current IMSI hasn't been yet registered, the Remote Registration SM is automatically sent.</p> <p>Parameters: <addr> - string parameter which specifies the phone number <company_name> - string parameter containing a client identifier</p> <p>Note1: a special form of the Set command, #OTASNAP="", causes the deletion of the SMS number</p> <p>Note2: the value of <addr> parameter can be overwritten from the OTA server by the Provisioning SMS</p> <p>Note3: a change of the value of <company_name> parameter causes a new FOTA Registration procedure</p> <p>Note4: if the <company_name> is an empty string, an ERROR is returned</p> <p>Note5: the setting is saved in NVM</p>	
AT#OTASNAP?	<p>Read command reports the current settings in the format:</p> <p>#OTASNAP: <addr>[,<company_name>]</p>	
AT#OTASNAP=?	<p>Test command returns the maximum length of <addr> field and maximum length of <company_name> field. The format is:</p> <p>#OTASNAP: <nlength>,<tlength></p> <p>where: <nlength> - integer type value indicating the maximum length of field <addr> <tlength> - integer type value indicating the maximum length of field <company_name></p>	
Example	<pre>AT#OTASNAP="SMS Number","Client Alpha" OK AT#OTASNAP? #OTASNAP:"SMS Number","Client Alpha" OK AT#OTASNAP=? #OTASNAP: 21,15 OK</pre>	



5.1.6.16.2. OTA Set User Answer - #OTASUAN

#OTASUAN – OTA Set User Answer	SELINT 2
AT#OTASUAN= <response>[,<mode>[,<bfr>]]	<p>Set command:</p> <ul style="list-style-type: none"> a) enables or disables sending of unsolicited result code #OTAEV that asks the TE to accept or reject the Management Server request to download a firmware b) allows the TE to accept or reject the request <p>Parameters:</p> <p><response> - numeric parameter used to accept or reject the download request</p> <ul style="list-style-type: none"> 0 – the request is rejected 1 – the request is accepted 2 – the request is delayed indefinitely: the URC is prompted indefinitely until the request is accepted or reject <p><mode> - numeric parameter that controls the processing of unsolicited result code #OTAEV</p> <ul style="list-style-type: none"> 0 –buffer unsolicited result codes in the MT; if MT result code buffers is full, the oldest ones can be discarded. No codes are forwarded to the TE. 1 –discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE 2 –buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE <p><bfr> - numeric parameter that controls the effect on buffered codes when <mode> 1 or 2 is entered</p> <ul style="list-style-type: none"> 0 – MT buffer of unsolicited result codes #OTAEV is cleared when <mode> 1 or 2 is entered 1 – MT buffer of unsolicited result codes #OTAEV is flushed to TE when <mode> 1 or 2 is entered <p>Note: the following unsolicited result codes and the corresponding events are defined:</p> <p>#OTAEV: Do you want to upgrade the firmware? A management server request to start the firmware upgrade. The user answer is expected</p> <p>#OTAEV: User Answer Timeout Expected User Answer not received within server defined time interval</p> <p>#OTAEV: Automatic Fw Upgrade Requested An automatic Fw Upgrade procedure has started</p> <p>#OTAEV: Start Fw Download The firmware download is started</p>



#OTASUAN – OTA Set User Answer	SELINT 2
	<p>#OTAEV: Fw Download Complete The firmware download is finished</p> <p>#OTAEV: OTA Fw Upgrade Failed The Fw upgrade has failed</p> <p>#OTAEV: Module Upgraded To New Fw The Fw upgrade is successfully finished</p> <p>#OTAEV: Server notified about successful FW Upgrade The final SMS has been sent to the server notifying the successful FW upgrade</p> <p>"#OTAEV: Registered" The module has registered itself to a server</p> <p>"#OTAEV: Not registered" The registration procedure has failed</p> <p>"#OTAEV: Company Name Registered" The company name is registered</p> <p>"#OTAEV: Company Name not registered" The company name is not registered</p> <p>"#OTAEV: Provisioned" A server has provisioned the module</p> <p>"#OTAEV: Notified" A server has notified the module</p>
AT# OTASUAN?	Read command reports the current settings in the format:
	#OTASUAN: ,<mode>,<bfr>
AT#OTASUAN =?	Test command returns values supported as a compound value
Example	<p>AT#OTASUAN=,2,1 OK AT#OTASUAN? #OTASUAN: ,2,1 OK AT#OTASUAN =? #OTASUAN: (0-2),(0-2),(0,1) OK</p>



5.1.6.16.3. OTA Set Ring Indicator - #OTASETRI

#OTASETRI - OTA Set Ring Indicator		SELINT 2
AT#OTASETRI=[<n>]	<p>Set command enables/disables the Ring Indicator pin response to a manual OTA server request to start the firmware upgrade. If enabled, a negative going pulse is generated when the URC “#OTAEV: Do you want to upgrade the firmware?” is prompted (see AT#OTASUAN command). The duration of this pulse is determined by the value of <n>.</p> <p>Parameter: <n> - RI enabling 0 - disables RI pin response when the URC “#OTAEV: Do you want to upgrade the firmware?” is prompted (factory default) 50..1150 - enables RI pin response. The value of <n> is the duration in ms of the pulse generated when the URC “#OTAEV: Do you want to upgrade the firmware?” is prompted.</p> <p>Note: if the <response> parameter of the AT#OTASUAN command has the value 2, then the URC is prompted indefinitely until the Fw update request is accepted or reject and, for every URC, a pulse is generated.</p> <p>Note: the setting is saved in the profile parameters</p>	
AT#OTASETRI?	<p>Read command reports the duration in ms of the pulse generated when the URC “#OTAEV: Do you want to upgrade the firmware?” is prompted, in the format:</p> <p>#OTASETRI: <n></p> <p>Note: as seen before, the value <n>=0 means that the RI pin response to the URC is disabled.</p>	
AT#OTASETRI=?	Reports the range of supported values for parameter <n>	



5.1.6.16.4. Save IP Port and IP Address for OTA over IP - #OTAIPCFG

#OTAIPCFG – Save IP port and IP address for OTA over IP		SELINT 2
AT#OTAIPCFG=<IPort>,<IPaddr>[,<unused>]	<p>This command saves in NVM the IP port number and IP address of the OTA server.</p> <p>Parameters:</p> <p><IPort >: IP port of the OTA server</p> <p><IPaddr>: IP address of the OTA server, string type. This parameter can be any valid IP address in the format: “xxx.xxx.xxx.xxx”</p> <p>Note: the values set by the command are directly stored in NVM and don’t depend on the specific CMUX instance.</p> <p>Note2: a special form of the Set command, #OTAIPCFG=<IPort>,”” sets the IP address to “0.0.0.0”.</p>	
AT#OTAIPCFG?	<p>Read command reports the currently selected <IPort > and <IPaddr> in the format:</p> <p>#OTAIPCFG: <IPort >,<IPaddr>,0</p>	
AT#OTAIPCFG=?	<p>Test command reports the range of supported values for parameters <IPort> and <unused></p>	



5.1.6.16.5. Start an OTA Update over IP - #OTAIPUPD

#OTAIPUPD – Start an OTA Update over IP		SELINT 2
AT#OTAIPUPD	<p>This command starts an OTA Update over IP.</p> <p>Note: in order to complete the update, the device has to be registered in the OTA server.</p> <p>Note: it is necessary to set some parameters beforehand: the bearer (CSD or GPRS) and the APN, through the command AT#OTASNAIPCFG, the IP port and IP address, through the command AT#OTAIPCFG.</p> <p>After the command AT#OTAIPUPD has been set, some unsolicited messages will inform the user about the status of the update process:</p> <ul style="list-style-type: none"> - #OTAEV: Start Fw Download - #OTAEV: Fw Download Complete - #OTAEV: Module Upgraded To New FW - #OTAEV: Server notified about successfull FW Upgrade <p>Or, in case of failure:</p> <ul style="list-style-type: none"> - #OTAEV: OTA FW Upgrade Failed 	
AT#OTAIPUPD?	<p>Read command reports the current status of the OTA over IP: the value 1 is returned if the OTA over IP is running (in this case the user shall receive the unsolicited messages), 0 otherwise.</p> <p>#OTAIPUPD: <status></p>	
AT#OTAIPUPD =?	Test command tests for command existence	



5.1.6.16.6. Set IP Port and Address for OTA over IP - #OTASNAPIP

#OTASNAPIP – Set IP port and address for OTA over IP		SELINT 2
AT#OTASNAPIP= <IPort>,<IPaddr>[,< mynumber>[,<compa ny_name>[,<unused>]]]	<p>Set command specifies the IP port number and IP address that the module has to use to send the Remote Registration message. If the current IMSI hasn't been yet registered, the Remote Registration message is automatically sent.</p> <p>Parameters:</p> <p><IPort> - IP port of the OTA server</p> <p><IPaddr> - IP address of the OTA server, string type. This parameter can be any valid IP address in the format: "xxx.xxx.xxx.xxx"</p> <p><mynumber> - string parameter which specifies the phone number of the client</p> <p><company_name> - string parameter containing a client identifier</p> <p>Note1: the command returns ERROR if the APN has not been set through the command AT#OTASNAPIPCFG</p> <p>Note2: a special form of the Set command, #OTASNAP=<IPort>,"", sets the IP address to "0.0.0.0".</p> <p>Note3: the values of <IPort> and <IPaddr> parameters can be overwritten from the OTA server by any SMS (Command, RSA Discovery Registration ...)</p> <p>Note4: a change of the value of <company_name> parameter causes a new FOTA Registration procedure</p> <p>Note5: if the <company_name> is an empty string, an ERROR is returned</p> <p>Note6: all the settings are saved in NVM but < mynumber></p>	
AT#OTASNAPIP?	<p>Read command reports the current settings in the format:</p> <p>#OTASNAPIP: <IPort>,<IPaddr>[,<company_name>],0</p>	
AT#OTASNAPIP=?	<p>Test command returns the range for <IPort> values and the maximum length of <mynumber> field and <company_name> field. The format is:</p> <p>#OTASNAPIP: (0-65535),,<nlength>,<tlength></p> <p>where:</p> <p><nlength> - integer type value indicating the maximum length of field <mynumber></p> <p><tlength> - integer type value indicating the maximum length of field <company_name></p>	



5.1.6.16.7. Set Access Point Name for OTA over IP - #OTASNAIPCFG

#OTASNAIPCFG – OTA Set Access Point Name for OTA over IP		SELINT 2
AT#OTASNAIPCFG= <bearer>,<APN>[,<username>,<password>[,<rspTimeout>]]	<p>Set command specifies the bearer (GSM or GPRS) and the APN that the module has to use to send the Remote Registration message.</p> <p>The APN is the Access Point Name in case of GPRS bearer or the internet service provider number in case of GSM bearer.</p> <p>Parameters:</p> <p><bearer> 0 – Undefined (default value) 1 – GSM 2 - GPRS</p> <p><APN> - string parameter; in case of GPRS bearer: Access Point Name, a logical name that is used to select the GGSN or the external packet data network; in case of GSM bearer: phone number of the internet service provider</p> <p><username> - string parameter, used only if the context requires it</p> <p><password> - string parameter, used only if the context requires it</p> <p><rspTimeout> - used when waiting for a response from OTA server, after the module has sent a message: if there's no response within this timeout period the TCP connection is closed. 0 - no timeout 1..65535 - timeout value in seconds (default 300 s.)</p> <p>Note1: if the <bearer> is set to 0, then the APN is erased. If the bearer is already 0, any <APN> or <username> or <password> will not be set</p> <p>Note2: the values of <bearer>, <APN>, <username> and <password> parameters can be overwritten from the OTA server by any SMS (Command, RSA Discovery Registration ...)</p> <p>Note3: all the settings are saved in NVM</p>	
AT#OTASNAIPCFG?	<p>Read command reports the current settings in the format:</p> <p>#OTASNAIPCFG: <bearer>,<APN>[,<username>[,<password>[,<rspTimeout>]]]</p>	
AT#OTASNAIPCFG=?	<p>Test command returns the range for <bearer> values, the maximum length of <APN>, <username> and <password> string parameters and the range for <rspTimeout> values. The format is:</p> <p>#OTASNAIPCFG: (0-2),99,49,49,(0-65535)</p>	



5.1.6.17. eCall AT Commands

5.1.6.17.1. Initiate eCall - +CECALL

+CECALL – Initiate eCall	SELINT 2
AT+CECALL=<type of eCall>	<p>Set command is used to trigger an eCall to the network. Based on the configuration selected, it can be used to either trigger a test call, a reconfiguration call, a manually initiated call or an automatically initiated call.</p> <p>Parameters: <type of eCall>: 0 – test call 1 – reconfiguration call 2 – manually initiated eCall 3 – automatically initiated eCall</p> <p>Note: the sending of a MSD is pointed out with an unsolicited message through AT interface that can report the HL-ACK data bits or an error code in the following format:</p> <p>#ECALLEV: <prim>,<data></p> <p><prim>: 0 – Pull-IND 1 – Data_CNF 2 – AL-Ack 16 – sync loss</p> <p><data>: Data content of Application Layer message (only with AL-Ack)</p>
AT+CECALL?	<p>Read command returns the type of eCall that is currently in progress in the format:</p> <p>+CECALL: [<type of eCall>]</p>
AT+CECALL=?	<p>Test command reports the supported range of values for parameter <type of eCall>.</p>



5.1.6.17.2. Embedded IVS inband modem enabling - #ECALL

#ECALL – Embedded IVS inband modem enabling		SELINT 2
AT#ECALL=<mode>	<p>Set command enables/disables the embedded IVS modem.</p> <p>Parameters:</p> <p><mode>:</p> <p>0 – disable IVS (default)</p> <p>1 – enables IVS</p> <p>Note: the sending of a MSD is pointed out with an unsolicited message through AT interface that can report the HL-ACK data bits or an error code in the following format:</p> <p>#ECALLEV: <prim>,<data></p> <p><prim>:</p> <p>0 – Pull-IND</p> <p>1 – Data_CNF</p> <p>2 – AL-Ack</p> <p>16 – sync loss</p> <p><data>:</p> <p>Data content of Application Layer message (only with AL-Ack)</p> <p>Note: the value set by command is not saved and a software or hardware reset restores the default value.</p> <p>The value can be stored in NVM using profiles.</p> <p>Note: When IVS modem is enabled PCM playing, PCM recording and DTMF decoding are automatically disabled (AT#SPCM or AT#DTMF will return error).</p> <p>Note: +CECALL command supersedes this command because it enables automatically eCall functionality.</p>	
AT#ECALL?	<p>Read command reports the currently selected <prim> in the format:</p> <p>#ECALL: <mode></p> <p><mode>:</p> <p>0 – IVS disabled</p> <p>1 – IVS enabled</p>	
AT#ECALL=?	Test command reports supported range of values for all parameters.	

5.1.6.17.3. Dial an Emergency Call - #EMRGD



#EMRGD – dial an emergency call	SELINT 2
AT#EMRGD[=<par>]	<p>This command initiates an emergency call.</p> <p>Parameters:</p> <p><par>:</p> <ul style="list-style-type: none"> 0 – initiates an emergency call without specifying the Service Category. (default value) 1..31 - sum of integers each representing a specific Emergency Service Category: <ul style="list-style-type: none"> 1 - Police 2 - Ambulance 4 - Fire Brigade 8 – Marine Guard 16 - Mountain Rescue 32 - Manually Initiated eCall (if eCall is supported – Rel8 feature) 64 - Automatically Initiated eCall (if eCall is supported– Rel8 feature) <p>When the emergency call can initiate, an indication of the Service Categories selected is shown before the OK in the following format:</p> <p>#EMRGD: <serv>[,<serv>..[,<serv>]]</p> <p>Where</p> <p><serv></p> <ul style="list-style-type: none"> “Police “Ambul” “FireBrig” “MarineGuard” “MountRescue” “MleC” “AleC” <p>Example:</p> <p>AT#EMRGD=17 #EMRGD: "Police", "MountRescue "</p> <p>OK</p>
AT#EMRGD	<p>The execution command initiates an emergency call without specifying the Service Category.</p>
AT#EMRGD?	<p>The read command reports the emergency numbers received from the</p>



	<p>network (Rel5 feature) and the associated service categories in the format</p> <p>[#EMRGD: <num1>[,<par1>,<serv>[,<serv>..,<serv>]]] [#EMRGD: <numn>[,<parn>,<serv>[,<serv>..,<serv>]]]</p> <p>Where</p> <p><numn> Is the emergency number (that can be dialled with ATD command).</p> <p><parn> 1..31 - sum of integers each representing a specific Emergency Service Category: 1 - Police 2 - Ambulance 4 - Fire Brigade 8 – Marine Guard 16 - Mountain Rescue</p> <p>32 - Manually Initiated eCall (if eCall is supported – Rel8 feature)</p> <p>64 - Automatically Initiated eCall (if eCall is supported– Rel8 feature)</p> <p>Example:</p> <p>AT#EMRGD? #EMRGD: 123,2,"Ambul" #EMRGD: 910,5,"Police","FireBrig"</p> <p>OK</p>
AT#EMRGD=?	<p>Test command reports the supported range of values for parameter <par>.</p> <p>If eCall is supported 0-32,64 If eCall is not supported 0-31</p>



5.1.6.17.4. IVS push mode activation - #MSDPUSH

#MSDPUSH – IVS push mode activation		SELINT 2
AT#MSDPUSH	Execution command enables IVS to issue the request for MSD transmission. It reuses downlink signal format to send a initiation message to the PSAP.	
AT#MSDPUSH=?	Test command returns the OK result code.	

5.1.6.17.5. Sending MSD data to IVS - AT#MSDSEND

#MSDSEND – Sending MSD data to IVS		SELINT 2
AT#MSDSEND	<p>Execution command allows to send 140 bytes of MSD data to the IVS embedded while modem is in command mode.</p> <p>The device responds to the command with the prompt '>' and waits for the MSD to send.</p> <p>To complete the operation send Ctrl-Z char (0x1A hex); to exit without writing the message send ESC char (0x1B hex).</p> <p>If data are successfully sent, then the response is OK.</p> <p>If data sending fails for some reason, an error code is reported</p> <p>Note: the maximum number of bytes to send is 140; trying to send more data will cause the surplus to be discarded and lost.</p>	
AT#MSDSEND=?	Test command returns the OK result code.	



6. List of acronyms

ARFCN	Absolute Radio Frequency Channel Number
AT	Attention command
BA	BCCH Allocation
BCCH	Broadcast Control Channel
CA	Cell Allocation
CBM	Cell Broadcast Message
CBS	Cell Broadcast Service
CCM	Current Call Meter
CLIR	Calling Line Identification Restriction
CTS	Clear To Send
CUG	Closed User Group
DCD	Data Carrier Detect
DCE	Data Communication Equipment
DCS	Digital Cellular System
DGPS	Differential GPS, the use of GPS measurements, which are differentially corrected
DNS	Domain Name System
DSR	Data Set Ready
DTE	Data Terminal Equipment
DTMF	Dual Tone Multi Frequency
DTR	Data Terminal Ready
GGA	GPS Fix data
GLL	Geographic Position – Latitude/Longitude
GLONASS	Global positioning system maintained by the Russian Space Forces
GMT	Greenwich Mean Time
GNSS	Any single or combined satellite navigation system (GPS, GLONASS and combined GPS/GLONASS)
GPRS	Global Packet Radio Service
GPS	Global Positioning System
GSA	GPS DOP and Active satellites
GSM	Global System Mobile
GSV	GPS satellites in view
HDL	High Level Data Link Control
HDOP	Horizontal Dilution of Precision
IMEI	International Mobile Equipment Identity
IMSI	International Mobile Subscriber Identity
IP	Internet Protocol
IRA	International Reference Alphabet
IWF	Interworking Function
MO	Mobile Originated
MT	<i>either Mobile Terminated or Mobile Terminal</i>



HE910/UE910 AT Commands Reference Guide
80378ST10091A Rev. 5 – 2013-07-01

NMEA	National Marine Electronics Association
NVM	Non Volatile Memory
PCS	Personal Communication Service
PDP	Packet Data Protocol
PDU	Packet Data Unit
PIN	Personal Identification Number
PPP	Point to Point Protocol
PUK	Pin Unblocking Code
RLP	Radio Link Protocol
RMC	Recommended minimum Specific data
RTS	Request To Send
SAP	SIM Access Profile
SCA	Service Center Address
SMS	Short Message Service
SMSC	Short Message Service Center
SMTP	Simple Mail Transport Protocol
TA	Terminal Adapter
TCP	Transmission Control Protocol
TE	Terminal Equipment
UDP	User Datagram Protocol
USSD	Unstructured Supplementary Service Data
UTC	Coordinated Universal Time
VDOP	Vertical dilution of precision
VTG	Course over ground and ground speed
WAAS	Wide Area Augmentation System



6.1. Document history

Revision	Date	SW release	Changes
ISSUE #0	2011-05-10	12.00.000-B001	Initial release
ISSUE #1	2011-09-30	12.00.xx1	Update to the correct sw release label
ISSUE#2	2011-12-01	Internal version	
ISSUE#3	2012-03-01	12.00.xx2	<p>Updated commands: #AUTOBND, #BND, #EMAILD, #ENS, #MONI, #NITZ, #RFSTS, #SCFGEXT2, #SKTD, #SSEND, &D, +CBST, +CGACT, +CGEQMIN, +CGEQQREQ, +CGREG, +CLCK, +CMER, +CMUX, +CNMA, +COLP, +CREG, +CSIM, +CSMS, +CSQ, +IPR, \$GPSSW, #BASE64, #BND, #CFF, #EVMONI, #FTPAPP, #FTPPUT, #SLED, #SNUM, #STARTMODESCR, +CMUX, +CNMI, +CNUM, +CPBF, +CPBR, +CPBW, +CRLP, +CSQ, +PACSP</p> <p>New commands: +CNMA, +CBST, #TTY, #SIMDET, #RXDIV, #PSNT, #PSMRI, #PORTCFG, #I2C, #GAUTH, #FTPAPPEXT, #ENCALG, #DVIEXT, #DVI, #ACAL, #ACALEXT, +CVHU, #ADC, #BIQUADIN, #BIQUADINEX, #BIQUADOUT, #BIQUADOUTEX, #CPBD, #DTMF, #DVI, #DVIEX, #ENCALG, #GAUTH, #NWEN, #PORTCFG, #PRST, #PSAV, #PSEL, #PSNT, #RXDIV, #SIMPR, #SPCM, #SSENDUDP, #SSENDUDPEXT, #TTY, +CFUN, +CMMS, +CPBS, +CSTA, +CSVM, #STIA, #STGI, #STSR, #STTA, \$GPSP, \$GPSR, \$GPSNMUN, \$GPSACP, \$GPSSAV, \$GPSRST, \$GPSNVRAM, \$GPSQOS, \$GPSSLR, \$GPSSTOP, \$LCSSLP, \$LCSLUI, \$LCSTER, \$LICLS, \$LCSLRMT, \$LCSLRV, \$LTC, \$LCSLK</p>
ISSUE#4	2012-07-02	12.00.xx3	<p>Updated commands: #AUTOBND, #BND, #CODEC, #CODECINFO, #DVI, #DVIEXT, #ENS, #EVMONI, #FTPGETPKT, #GPIO, #I2CWR, #MONI, #PING, #PORTCFG, #PSMRI, #RXDIV, #SCFGEXT, #SPCM, #SRECV, #STIA, #TCPATCONSER, #GPSACP, #GPSQOS, #GPSR, #GPSSTOP, \$LTC, +CBST, +CFUN, +ATA, +ATD, +ATO, +ATS0, #ENHRST, #GAUTH, &D, #SERVINFO, +CSMP, #FTPAPP, #FTPPUT, #SD, #SL, #SKTSET, #SKTD, #SKTL, #SGACT</p> <p>New commands: +ICF, +IFC, #ALARMPIN, #CFLO, #FTPCFG, #TEMPMON</p>



HE910/UE910 AT Commands Reference Guide

80378ST10091A Rev. 5 – 2013-07-01

ISSUE#5	2013-07-01	12.00.xx4	<p>Added UE910 family Updated Chapters: 1.4, 3.2, 3.2.2.2, 3.3.1, 4, 5.1.3.6 #VAUX, #VAUXSAV, \$GPSSW removed</p> <p>Updated AT Command's descriptions: #DNS, #DVI, #DVIEXT, #ENCALG, #MONI, #SH, #SPCM, #WAKE, #WSSCRIPT, \$GPSSLSR, &D, +CGEQNEQ, +CSSN, ATS25, #FTPCFG, #QSS, #TEMPMON, \$GPSACP, \$LCSLK, \$LCSSLP, \$LCSTER, \$LICLS, \$LTC, +CCLK, #CCLK, +CFUN</p> <p>Existing AT Commands updated from 12.00.xx4: #CODECINFO, #ENAEVMONICFG, #EVMONI, #GPIO, #MSCLASS, #PORTCFG, #PSNT, #RFSTS, #SCFG, #SCFGEXT2, #SMSATRUNCFG, #SS, #TCPATRUNCFG, +CPBR, +CPBW, +CPBF, +CPBS, +CPMS, #SSLSECCFG, +CGDCONT</p> <p>New AT Commands supported from 12.00.xx4: #ANAMICG, #ATDELAY, #CCLKMODE, #DIGMICG, #E2ESC, #ECHO CFG, #JDR, #NCIH, #OTASNAP, #OTASUAN, #OTASETRI, #OTAIPCFG, #OTAIPUPD, #OTASNAPI, #OTASNAPIPCFG, #SCFGEXT3, #SLASTCLOSURE, #SMSMOVE, #SSLCFG, #SSLD, #SSLEN, #SSLH, #SSLO, #SSLRECV, #SSLS, #SSLSECCFG, #SSLSECDATA, #SSLSEND, #HTTPCFG, #HTTPQRY, #HTTPSND, #HTTTPRCV, #CPBGR, #CPBGW, #DAC, #NWDNS, #SMSMODE, AT#ECALL, AT+CECALL, AT#EMRGD, AT#MSDPUSH, AT#MSDSEND, #OAP</p>
---------	------------	-----------	--

